

## VIDEO TUTORIAL




### Important!

This replacement procedure can be used for:

BMW 5 Saloon (E34) 530i 3.0 V8, BMW 5 Saloon (E34) 540i 4.0 V8, BMW 5 Touring (E34) 530i 3.0 V8, BMW 7 (E32) 730i / iL 3.0 V8, BMW 7 (E32) 740i / iL 4.0 V8, BMW 8 (E31) 850i / Ci 5.0, BMW 5 Touring (E34) 540i 4.0, BMW 7 (E38) 730i / iL 3.0, BMW 7 (E38) 740i / iL 4.0, BMW 7 (E38) 750i / iL 5.4, BMW 8 (E31) 850Ci 5.4, BMW 8 (E31) 850CSi 5.6, BMW 8 (E31) 840i 4.0, BMW 7 (E38) 740i / iL 4.4, BMW 7 (E38) 735i / iL 3.5, (+ 8)

The steps may slightly vary depending on the car design.

## REPLACEMENT: ENGINE OIL AND FILTER – BMW X5 E53. TOOLS YOU'LL NEED:

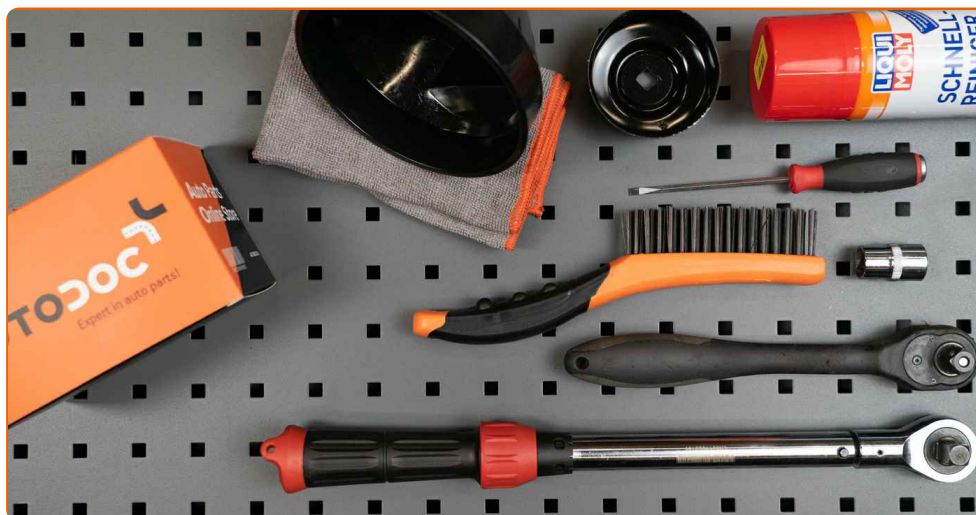

- Wire brush
- All-purpose cleaning spray
- Drive socket # 17
- Drive socket # 36
- Ratchet wrench
- Torque wrench
- Flat Screwdriver
- Funnel
- Oil drain pan
- Fender cover

**BUY TOOLS**

Replacement: engine oil and filter – BMW X5 E53. AUTODOC experts recommend:

- Replace the oil filter every time when changing motor oil.
- Use only new O-rings during installation.
- Wear gloves to prevent contact with hot liquid.
- All work should be done with the engine stopped.

## REPLACEMENT: ENGINE OIL AND FILTER – BMW X5 E53. TAKE THE FOLLOWING STEPS:

1

Open the hood.




2


Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3

Unscrew the oil filler plug.

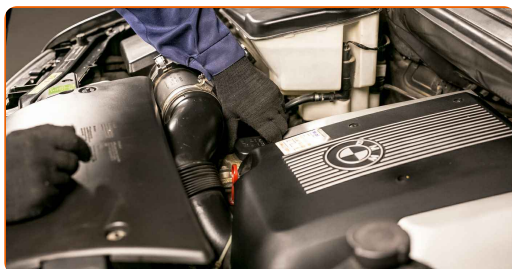


- 4 Unscrew the filter housing cap together with the old filter element. Use a drive socket #36. Use a ratchet wrench.

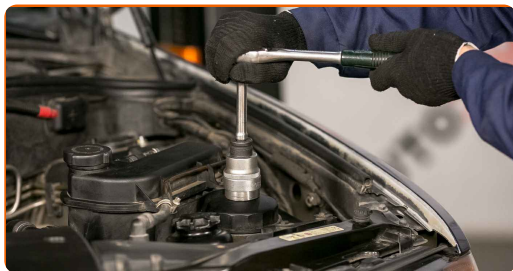

- 5 Prepare a container for the old oil filter.




- 6 Put the old oil filter in the container.

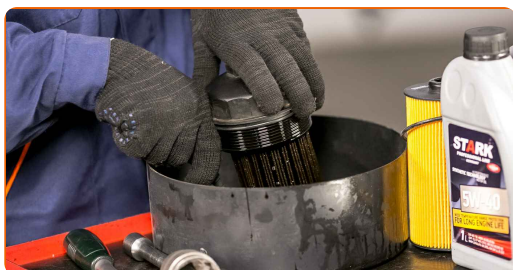

### Replacement: engine oil and filter – BMW X5 E53. Tip:

- Move up the container. The oil starts to drain out of the drainage hole immediately after you have removed the oil filter.

- 7 Detach the oil filter from the filter cover.

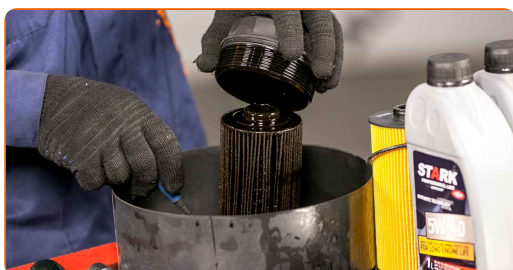

8

Remove the oil filter cover O-ring. Use a flat screwdriver.



9

Clean the oil filter housing cap. Use all-purpose cleaning spray.

10

Install a new O-ring to its mounting seat on the filter cover.



11


Install the new oil filter to the mounting seat on the filter cover.



### Please note!


- Make sure to install the filter correctly. Don't mix up the sides of the part.

**12** Clean the oil filter seat.

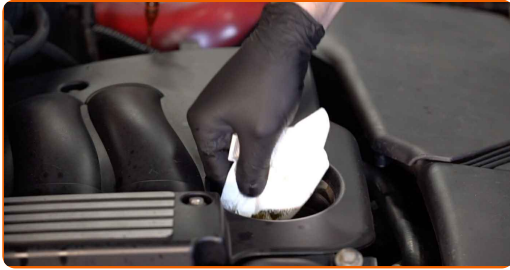


**13** Lubricate the rubber seal of the new filter with a little amount of fresh oil.

**14.1** Install a new oil filter housing cover and tighten it.

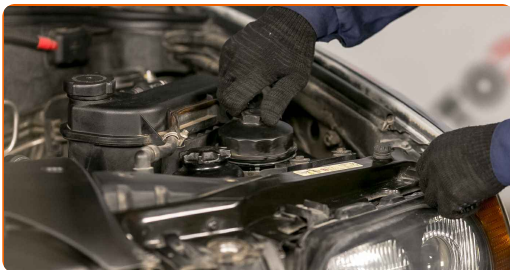

**14.2** Use a drive socket #36. Use a torque wrench. Tighten it to 25 Nm torque.

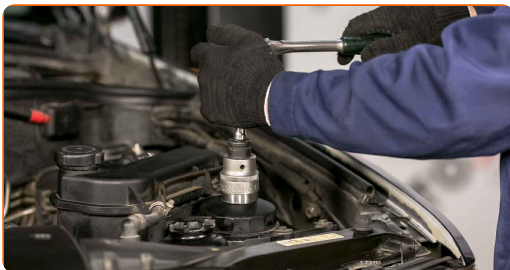

**15** Lift the car using a jack or place it over an inspection pit.






## Replacement: engine oil and filter – BMW X5 E53. AUTODOC recommends:

- The vehicle must be on even keel, and if it is at an angle, the drain plug must be at the lowest point.
- All works should be done with the engine cooled down.

16

Clean the area of the oil pan drainage hole. Use a wire brush. Use all-purpose cleaning spray.

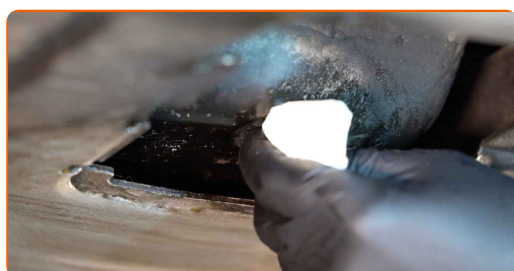


17

Put a waste oil container with at least 9 l capacity under the drainage hole.

18

Unscrew the drain plug. Use a drive socket #17. Use a ratchet wrench.

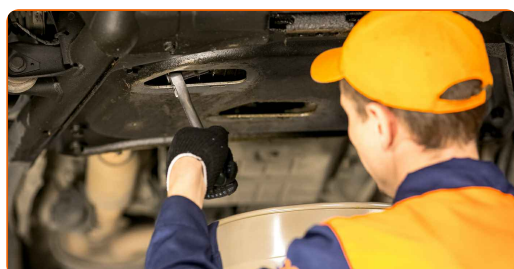

19

Drain the used oil.




## Replacement: engine oil and filter – BMW X5 E53. Tip from AUTODOC experts:

- Caution! The oil may be hot.
- Wait until the oil has completely drained from the drainage hole.


20

Clean the area of the oil pan drainage hole.

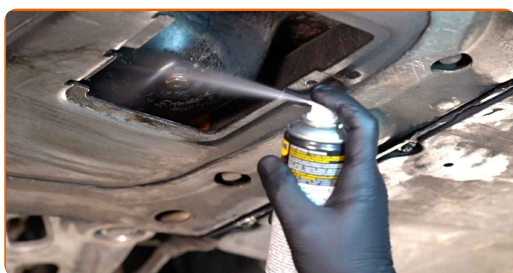

21

Screw in the new drainage plug and tighten it. Use a drive socket #17. Use a torque wrench. Tighten it to 25 Nm torque.

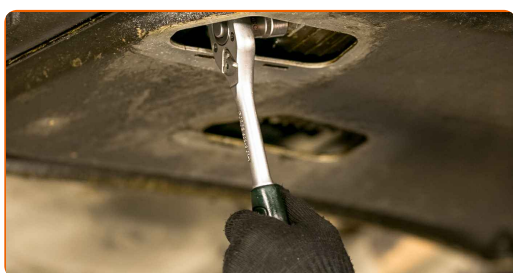


22

Lower the car.

23


Remove the oil filler cap. Insert the funnel.

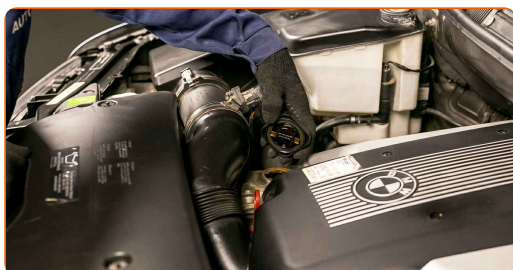



24

Pour oil into the engine through the filler. Required amount of oil: 8 L.

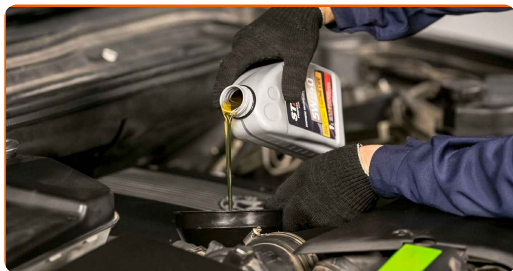


Replacement: engine oil and filter – BMW X5 E53. Tip from AUTODOC:

- Use the oil recommended by the manufacturer.

25

Check the oil level using the dipstick. Top up oil if necessary.

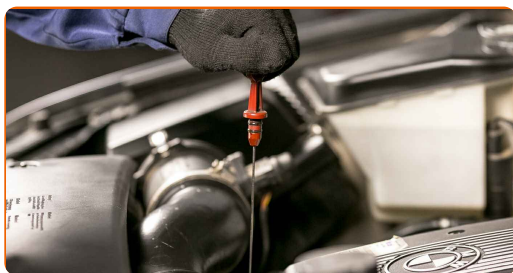

Please note!

- The oil level should be between the Min and Max marks.

26

Install the oil filler cap.




**27** Tighten the oil filler cap.

**28** Run the engine for a few minutes. After the oil pressure warning light goes out, stop the engine.



**29** Check the oil level 5 minutes after the stop of the engine operation using a dipstick and add oil if necessary.

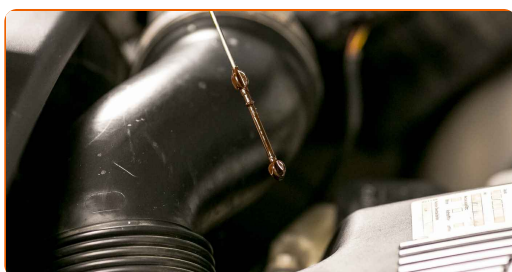

### Please note!

- The oil level should be between the Min and Max marks.
- Make sure that the oil filler cap is properly tightened.
- Check the threaded plug of the drainage hole and the oil filter seal for tightness. If necessary, carefully tighten them up.

**30** Remove the fender protection cover.