

VIDEO TUTORIAL




Important!

This replacement procedure can be used for:

BMW 3 Touring (E91) 325i 3.0, BMW 3 Saloon (E90) 325i 2.5, BMW 3 Saloon (E90) 330i 3.0, BMW 1 Hatchback (E81) 130i 3.0, BMW 3 Touring (E91) 325i 2.5, BMW 3 Touring (E91) 330i 3.0, BMW 3 Saloon (E90) 325xi 2.5, BMW 3 Saloon (E90) 330xi 3.0, BMW 3 Touring (E91) 325xi 2.5, BMW 3 Touring (E91) 330xi 3.0, BMW 3 Coupe (E92) 325i 2.5, BMW 3 Coupe (E92) 325xi 2.5, BMW 3 Coupe (E92) 330xi 3.0, BMW 3 Coupe (E92) 330i 3.0, BMW 3 Convertible (E93) 325i 3.0, (+ 33)

The steps may slightly vary depending on the car design.

REQUIRED TOOLS:

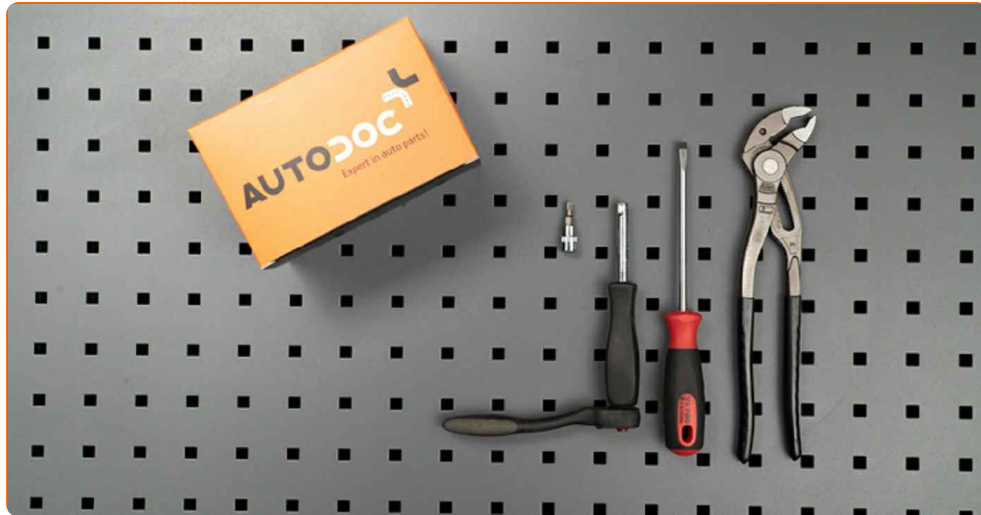

- Torx bit T25
- Ratchet wrench
- Flat Screwdriver
- Water pump pliers
- Fender cover


BUY TOOLS

AUTODOC recommends:

- Replacement: air filter – BMW E92. Follow the maintenance schedule, recommendations, and requirements specified by the manufacturer.
- All work should be done with the engine stopped.

REPLACEMENT: AIR FILTER – BMW E92. TAKE THE FOLLOWING STEPS:


1 Open the bonnet.

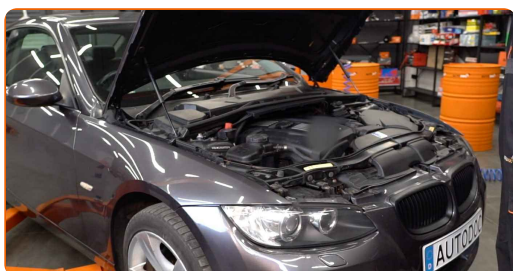

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



3 Undo the fastening screws of the air filter cover. Use Torx T25. Use a ratchet wrench.

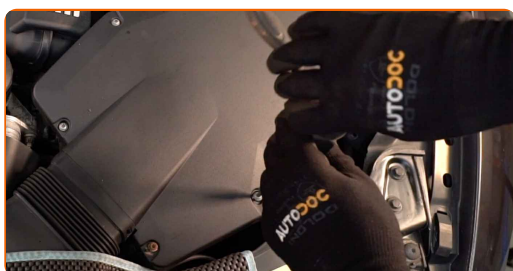

4

Disconnect the air intake pipe from the air filter housing. Use a flat screwdriver.



5

Take off the filter lid.



6

Remove the filter element from the filter housing. Use water pump pliers.



7

Clean the air filter cover and housing.



Replacement: air filter – BMW E92. Professionals recommend:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

8

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



AUTODOC recommends:


- Replacement: air filter – BMW E92. Be sure to position the filtering element correctly. Avoid misalignment.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

9


Reinstall the air filter cover. Fasten it.



10 Connect the air intake pipe to the air filter housing.

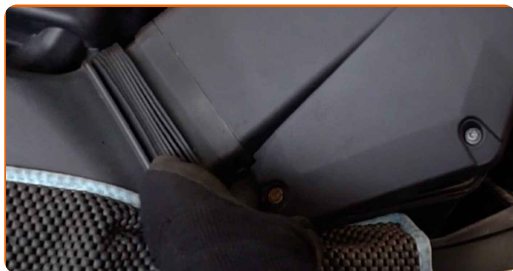


11 Screw in the fastening screws of the air filter cover. Use Torx T25. Use a ratchet wrench.

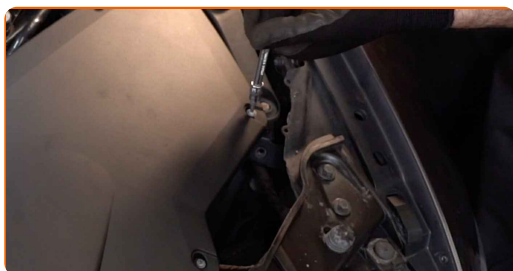

12 Remove the fender protection cover.



13 Close the hood.

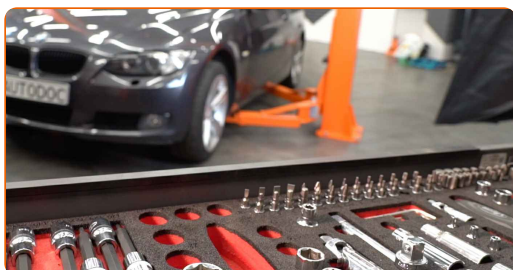

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR BMW

AIR FILTER: A WIDE SELECTION