

# **ADB interface driver**

**Version 1.0**

### Version History

Version	Date	Handled by	Comments
V1.0	27-May-2019	ZL Chen	First version release.

Precondition Setting:


N/A

Please follow the implement as below:


Step 1:

Please insert the micro USB to any computer and DUT (Android System).

DUT (Android System):

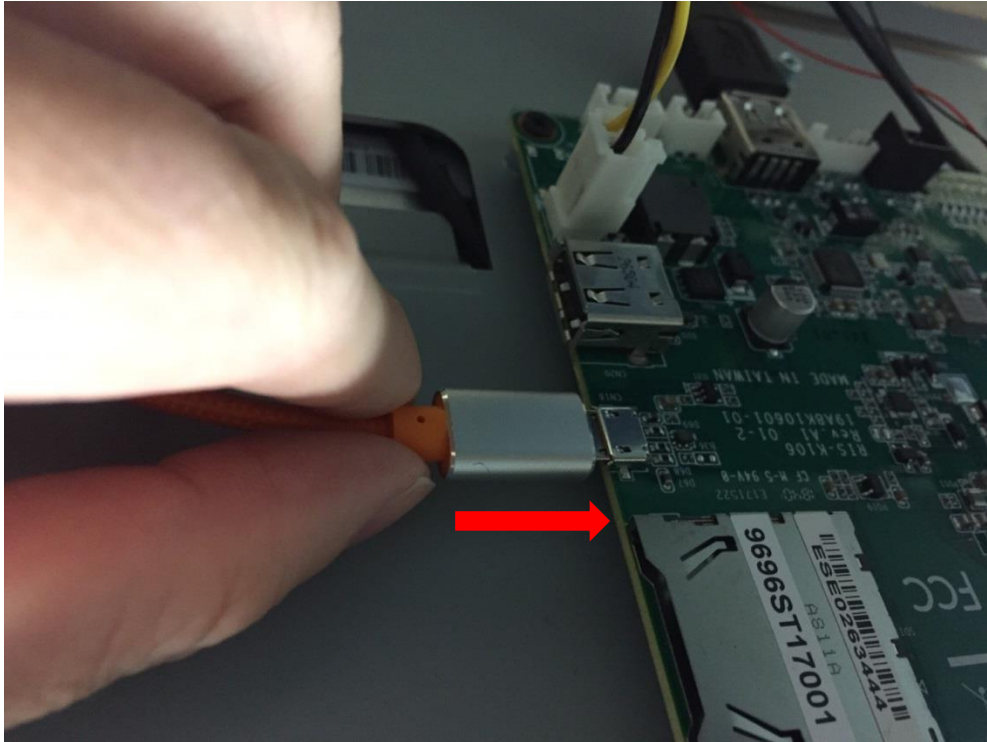


computer:

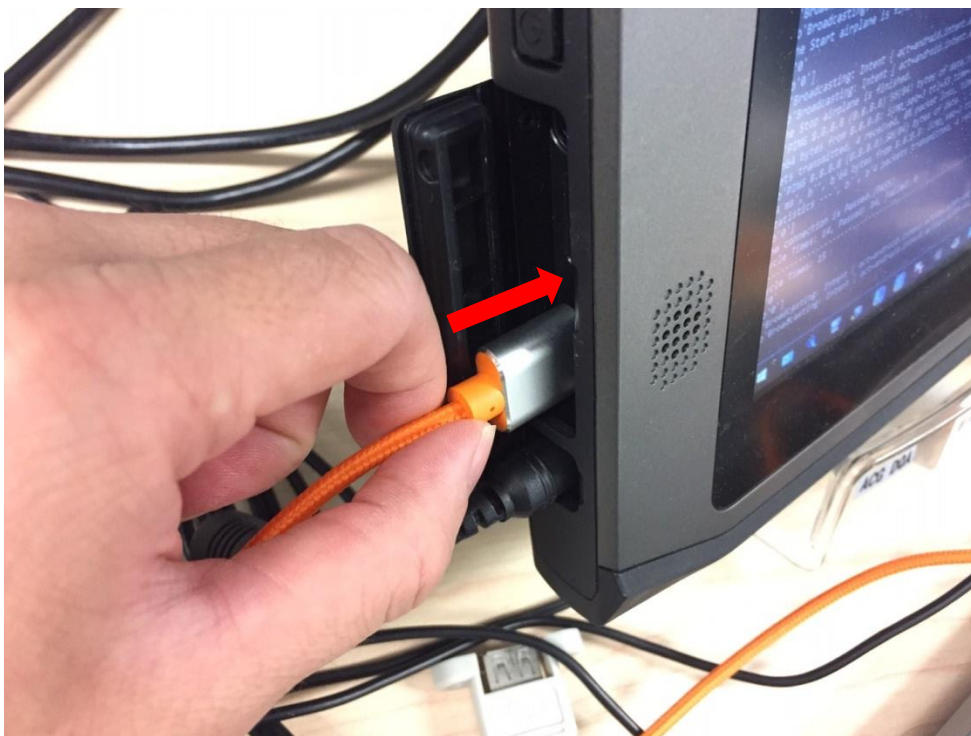

## Step 2:

Install the ADB Interface driver by USB driver under the device manager.

The USB driver is under the installer folder. (\\automation\\installer\\usb\_driver)

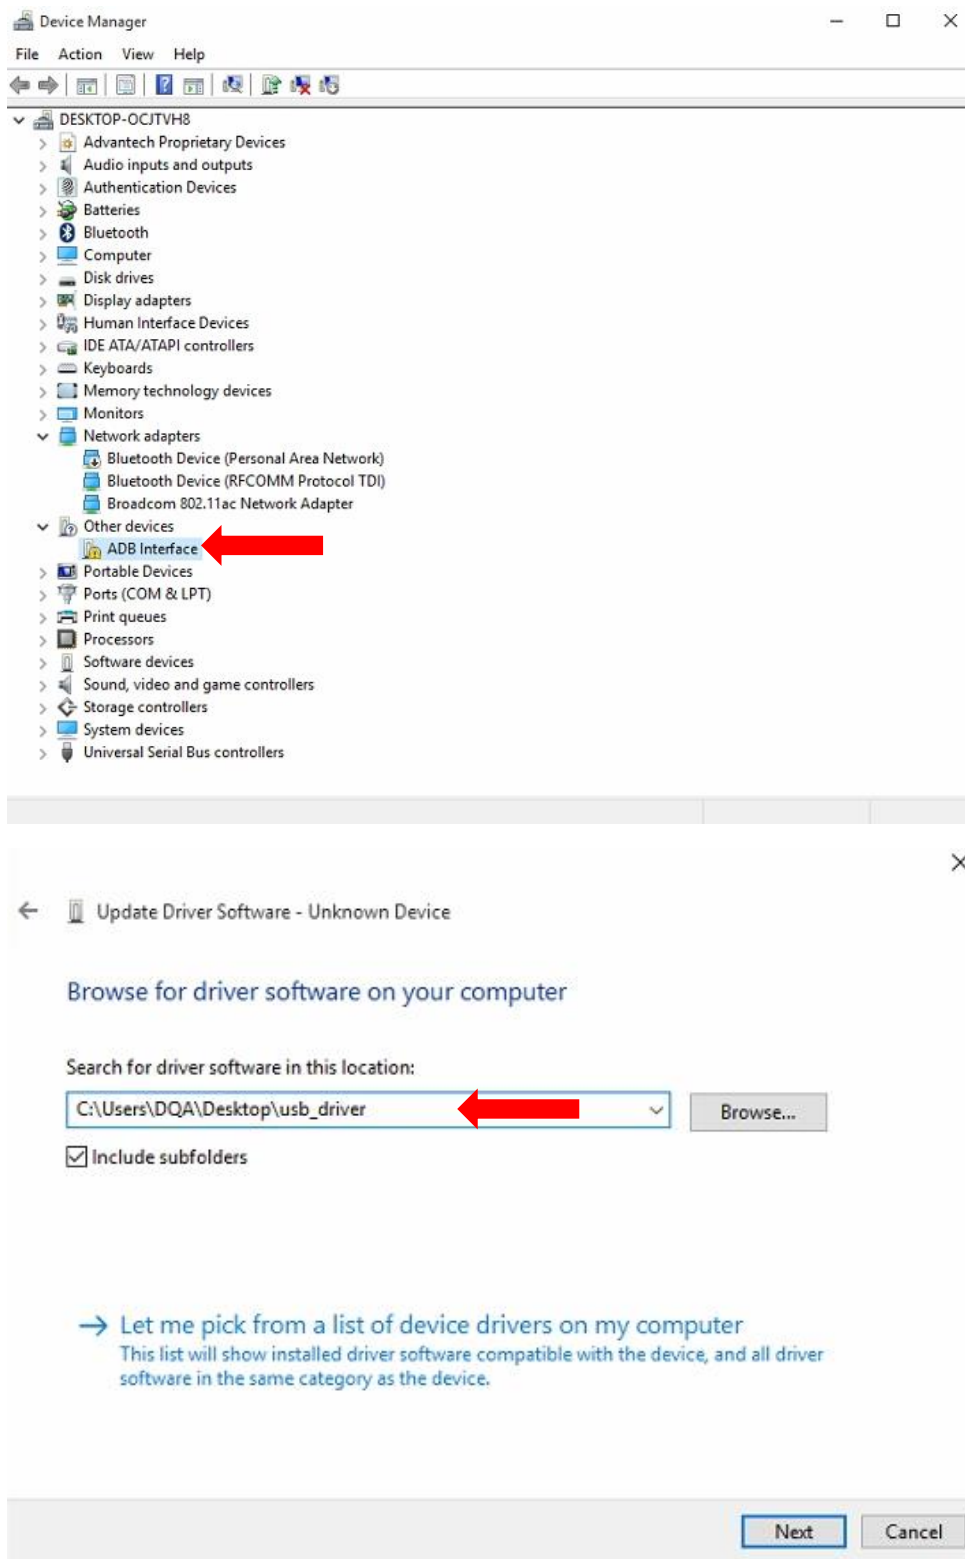

Step 3:

Open the “Developer options” in the Setting button and launch the “USB debugging”.

