

# Luminance Pattern

Version 1.0

### Version History

Version	Date	Handled by	Comments
V1.0	19-Aug-2019	ZL Chen	First version release.

### Precondition Setting:


Please make sure the DUT is connected to the internet.

- Install the Python 3.6.8.
  - ✓ Please refer to the “[Python 3.6.8 installation.pdf](#)” attachment.  
(\automation\sop\Python 3.6.8 installation.pdf)
- Install the wkhtmltox-0.12.5-1.msvc2015-win64.exe
  - ✓ Please refer to the “[wkhtmltox installation.pdf](#)” attachment.  
(\automation\sop\wkhtmltox installation.pdf)
- Install the third party library.
  - ✓ Double click the “[Envir\\_Install.exe](#)” under the installer folder.  
(\automation\installer\Envir\_Install.exe)


Please follow the implement as below:

### Step 1:

Please copy the folder of the suite to the device's desktop.

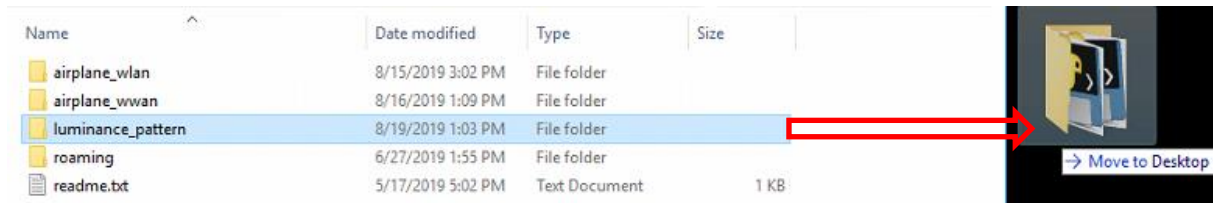

Implement the luminance\_pattern.exe under the “\luminance\_pattern\” folder, then input the information base on the specification.

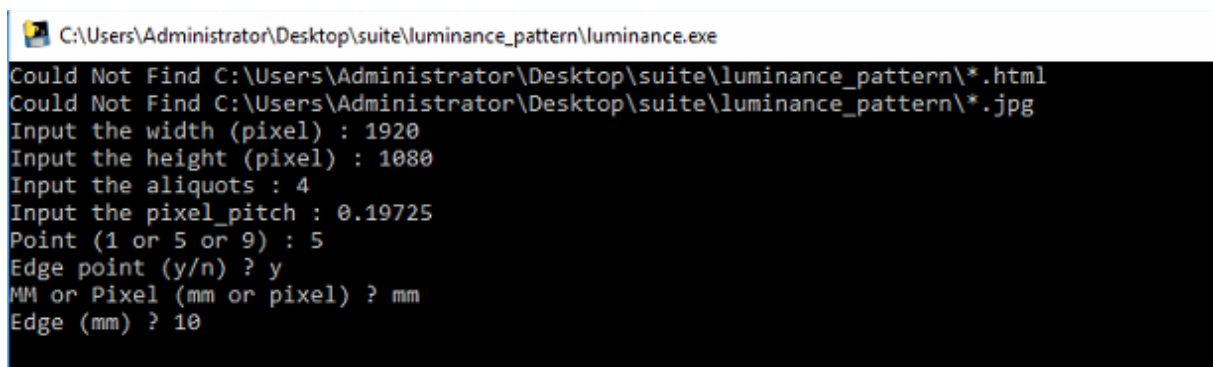

### Step 2:

The program export the JPG data under the “\luminance\_pattern\” folder.

