



# eMMC Connection Check in BIOS


You can check if your eMMC memory is connected properly on H4 in the BIOS.  
Move to Advanced → SDIO Configuration

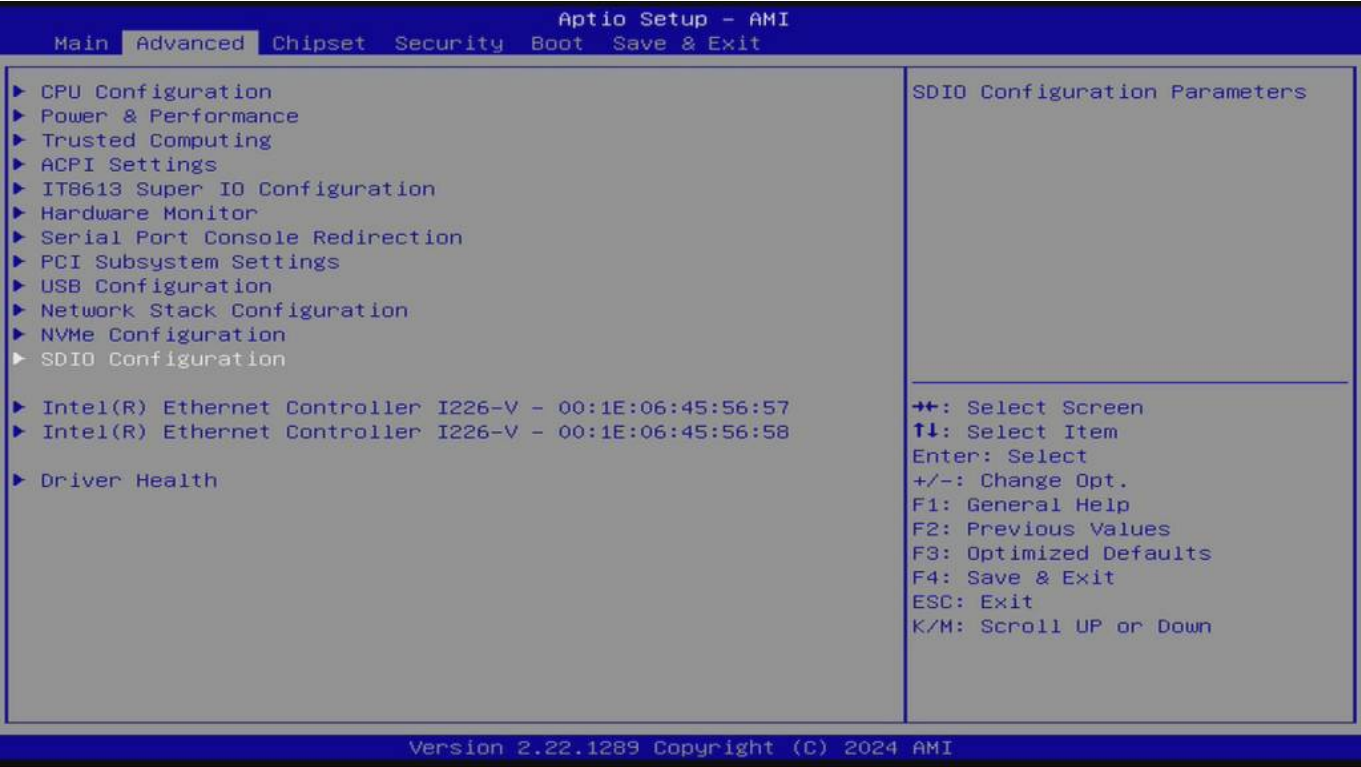

## When the eMMC not connected with H4

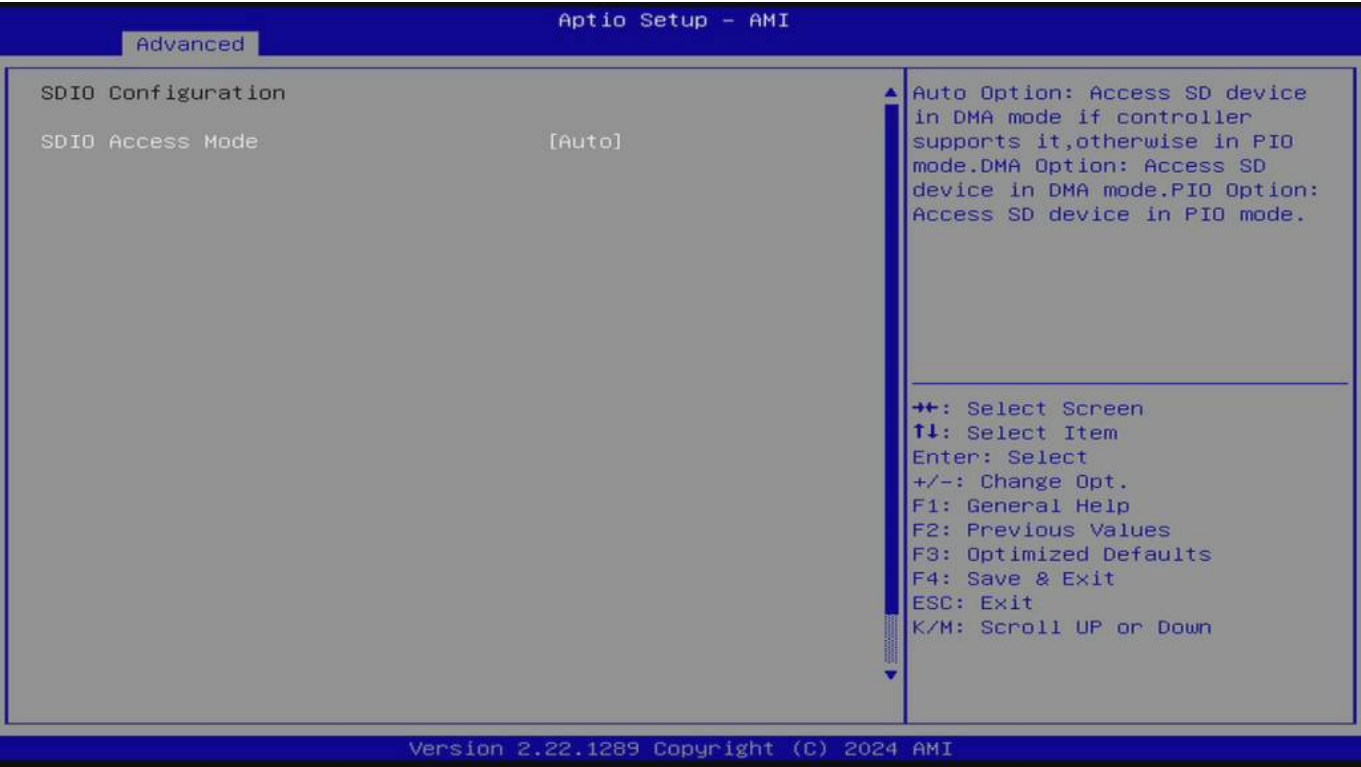

# When the eMMC connected well with H4

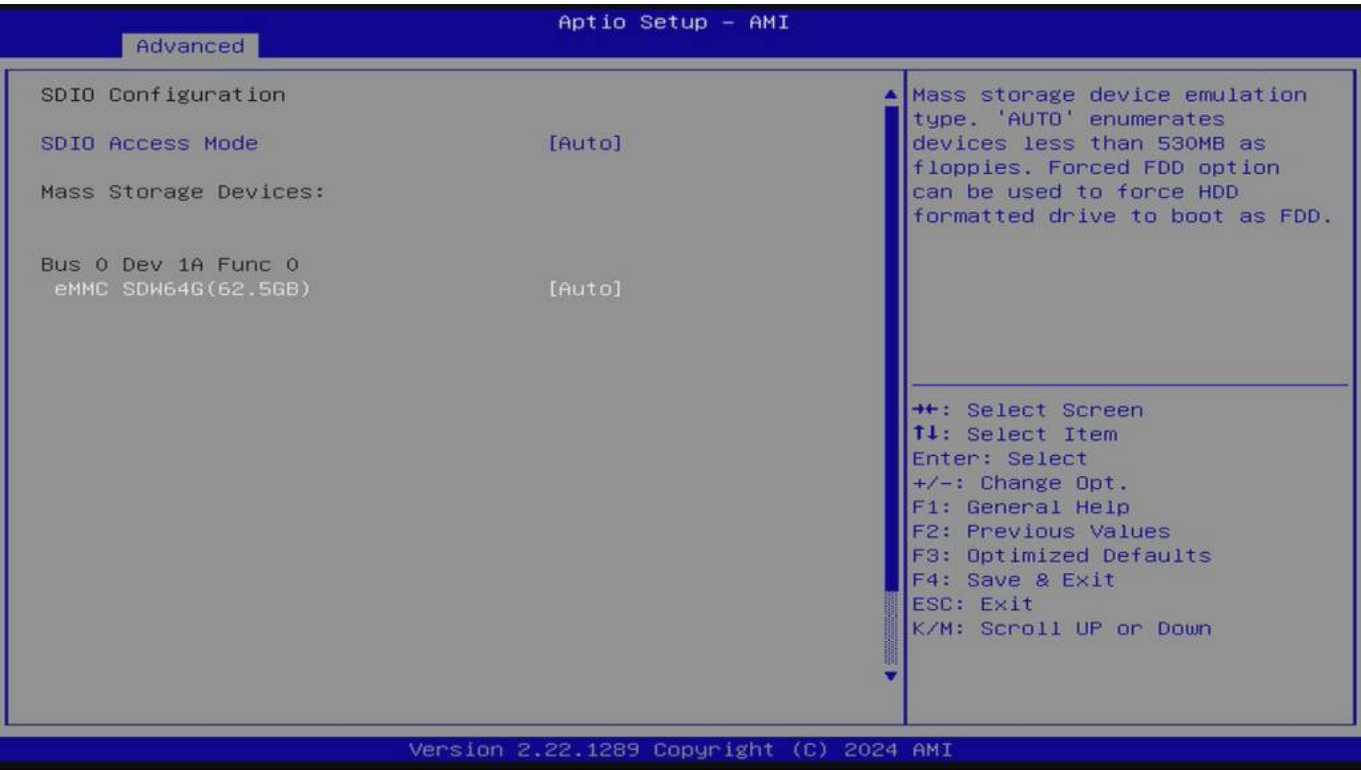

From:  
<https://wiki.odroid.com/> - **ODROID Wiki**

Permanent link:  
[https://wiki.odroid.com/odroid-h4/hardware/check\\_emmc\\_on\\_bios](https://wiki.odroid.com/odroid-h4/hardware/check_emmc_on_bios)

Last update: **2024/04/16 14:51**

