

Auto Start Of System When Power Applied

You can set how H4 does when power is applied.


Thanks to this configuration, you can make it keeps in online even if it turns off unexpectedly when you're not at home.

This option is located at

Chipset → PCH-IO Configuration → State After G3

G3 (G3 State) means the **Mechanical Off**, which is one of the ACPI power states.



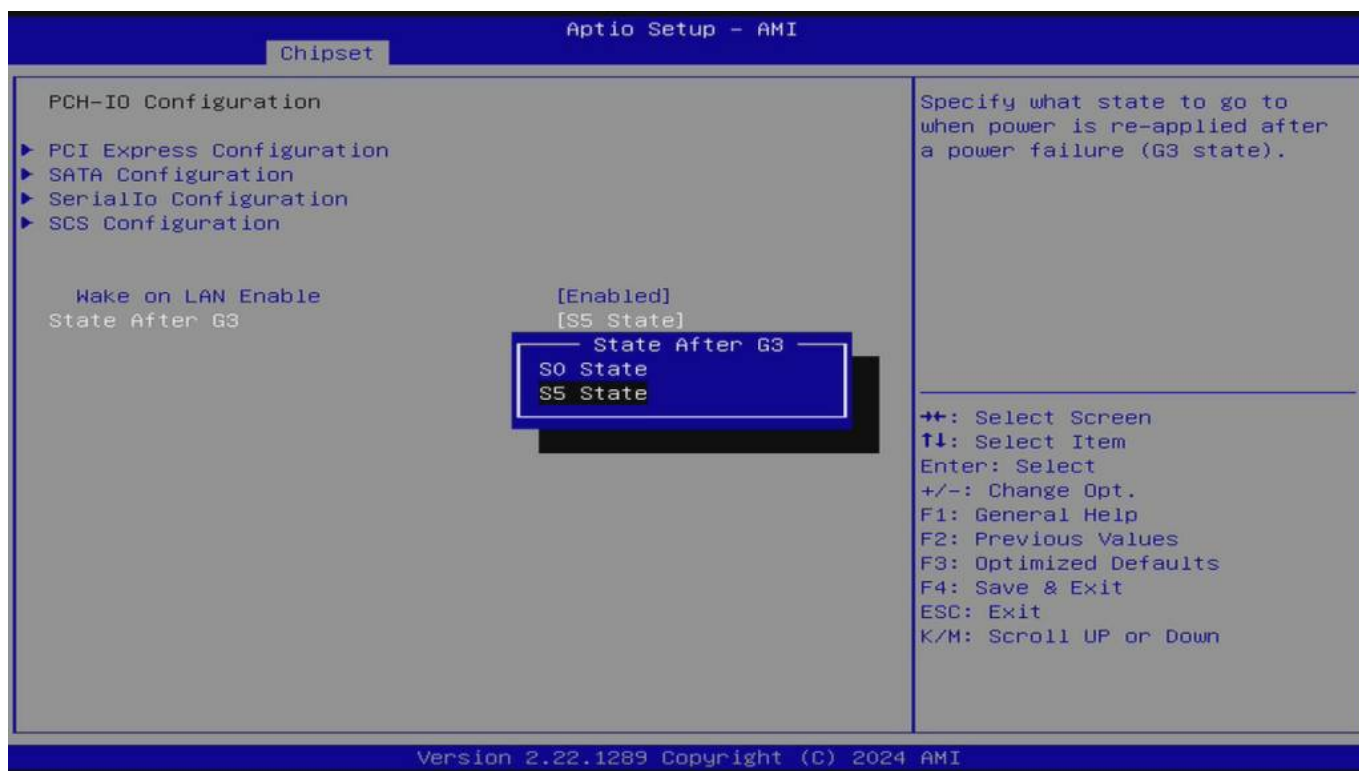

There're two options you can select.

- **S0 State**: System will boot directly as soon as power is applied.
- **S5 State**: System keeps in power-off state until the power button is pressed.

So if you select **S0 State**, it makes your H4 will auto-start whenever AC power is on.

If you want to know further information about the power states, please refer to the references.

References

[1] https://en.wikipedia.org/wiki/Advanced_Configuration_and_Power_Interface

[2] <https://www.cnx-software.com/2013/04/05/how-to-autostart-a-pc-automatically-when-connecting-it-to-the-mains-power/>

From:
<https://wiki.odroid.com/> - **ODROID Wiki**

Permanent link:
https://wiki.odroid.com/odroid-h4/application_note/autostart_when_power_applied

Last update: **2024/04/16 14:44**

