

ALARM BAR

The Alarm Bar, as seen in **FIGURE ERROR! No text of specified style in document.-1**, provides a means to readily visualize any Alarm/Alert being currently emitted by the system. These alarms will flash, and the system will emit an audible alarm (if turned on in settings), until acknowledged by a system end-user. Once acknowledged, the Alarm/Alert will remain visible, and silent, until the issue is resolved.



Figure Error! No text of specified style in document.-1 Alarm Bar

To acknowledge an Alarm/Alert, perform the following steps.

1. Hover over the Alarm/Alert, as seen in **FIGURE ERROR! No text of specified style in document.-2**. This will provide a date/time stamp of the event.

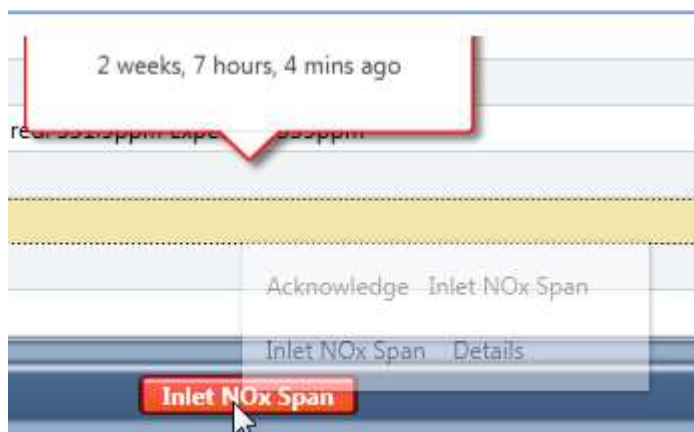


Figure Error! No text of specified style in document.-2 Acknowledge Alarms & Alerts

2. Right-click on the Alarm/Alert, which will bring up a context menu that will allow the end-user to acknowledge the Alarm/Alert, or provide further detail.
3. As stated above, the Alarm/Alert will remain visible until the issues causing the event are resolved. Using the *Details* selection in the context menu will allow the end-user to obtain the information needed to effect the necessary changes required to resolve the issue.