

## OVERVIEW

The *Overview Tab* is, as it states, an overview of the real time conditions, logs and readings. The values displayed on the overview tab are from defined tags (see Tag Administration). The right side pane, as seen in **FIGURE ERROR! No text of specified style in document.-1**, contains information related to all of the units at a given site. This pane doubles as the selection mechanism for the main pane in the Overview Tab.

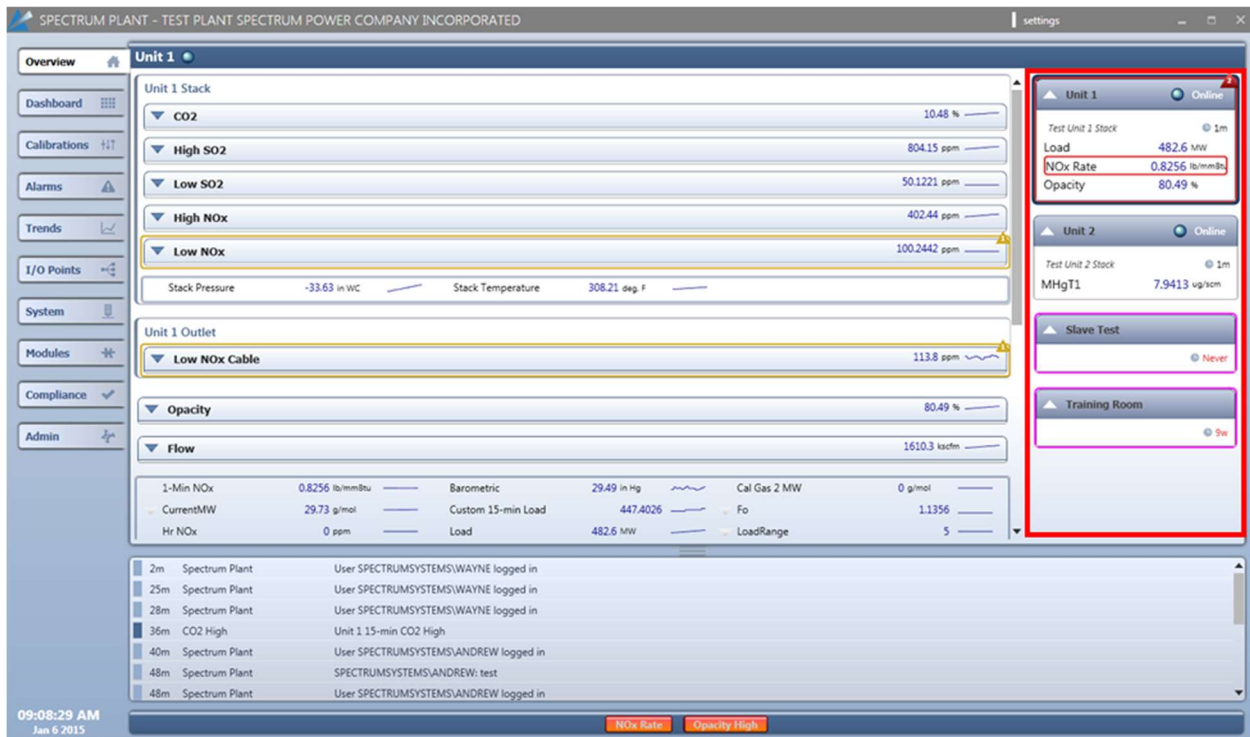


Figure Error! No text of specified style in document.-1 Unit Pane

Each of these unit displays may be expanded to show selected status data for each unit, as seen in **FIGURE ERROR! No text of specified style in document.-2**.

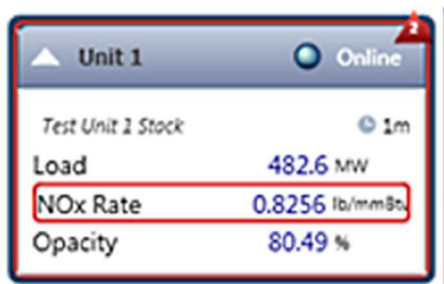


Figure Error! No text of specified style in document.-2 Expanded Unit in Unit Pane

The center pane, as seen in **FIGURE ERROR! No text of specified style in document.-3**, contains a complete listing of the unit's information, and, as mentioned above, represents the unit selected in the unit pane.

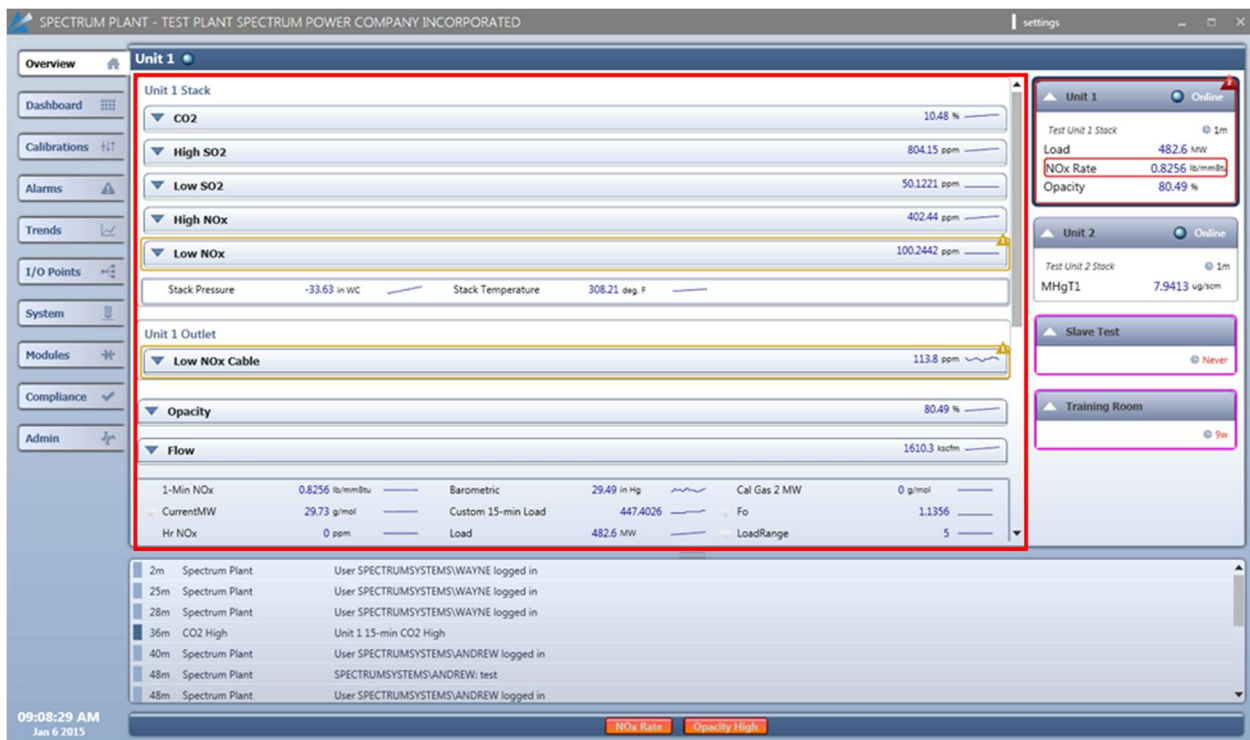


Figure Error! No text of specified style in document.-3 Full Unit Information

This includes data such as stack probe readings and information, analog readings, and digital status readings, as seen in **FIGURE ERROR! No text of specified style in document.-4.**

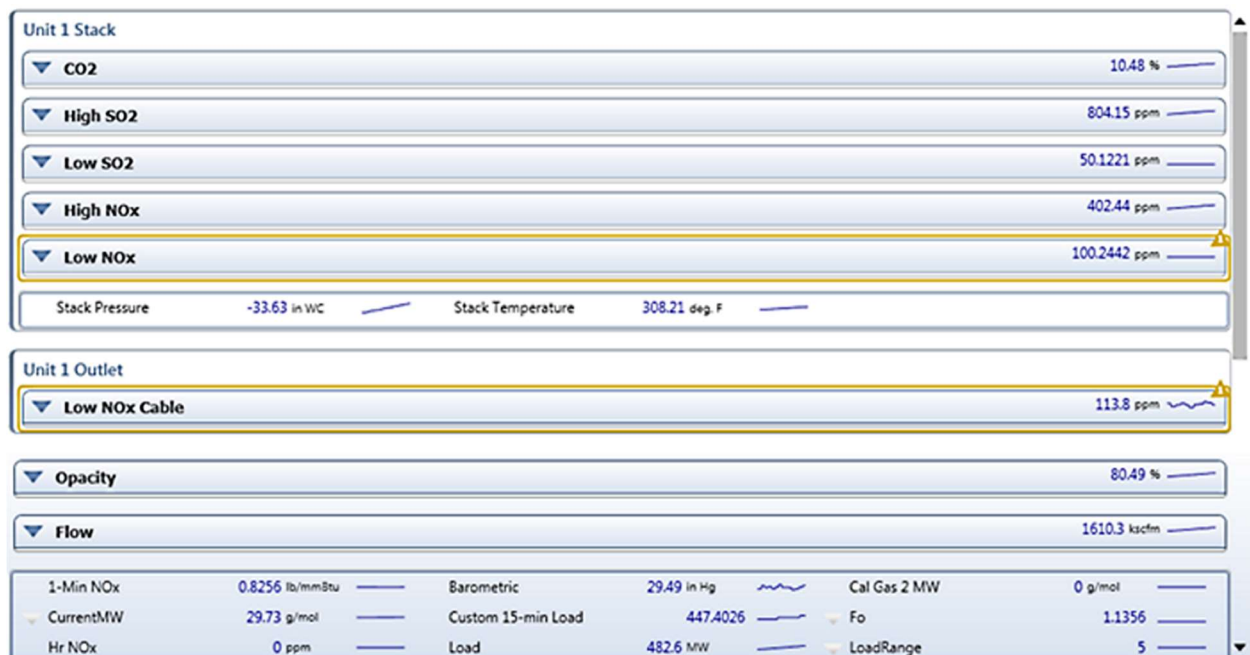


Figure Error! No text of specified style in document.-4 Unit Detail

The data lists that are located in the center of the tab are drillable, as explained in [ERROR! REFERENCE SOURCE NOT FOUND.](#) and [ERROR! REFERENCE SOURCE NOT FOUND.](#), as seen in **FIGURE ERROR! No text of specified style in document.-5**.



Figure **Error! No text of specified style in document.-5** Overview Tab Drill-Down