

Downtime Sub-Tab

The *Downtime Sub-Tab* allows the end-user to view any downtime incidents of the selected unit, as seen in **FIGURE ERROR! No text of specified style in document.-1**. The timeline zoom bar, located at the bottom of the pane, allows for selecting the date range.

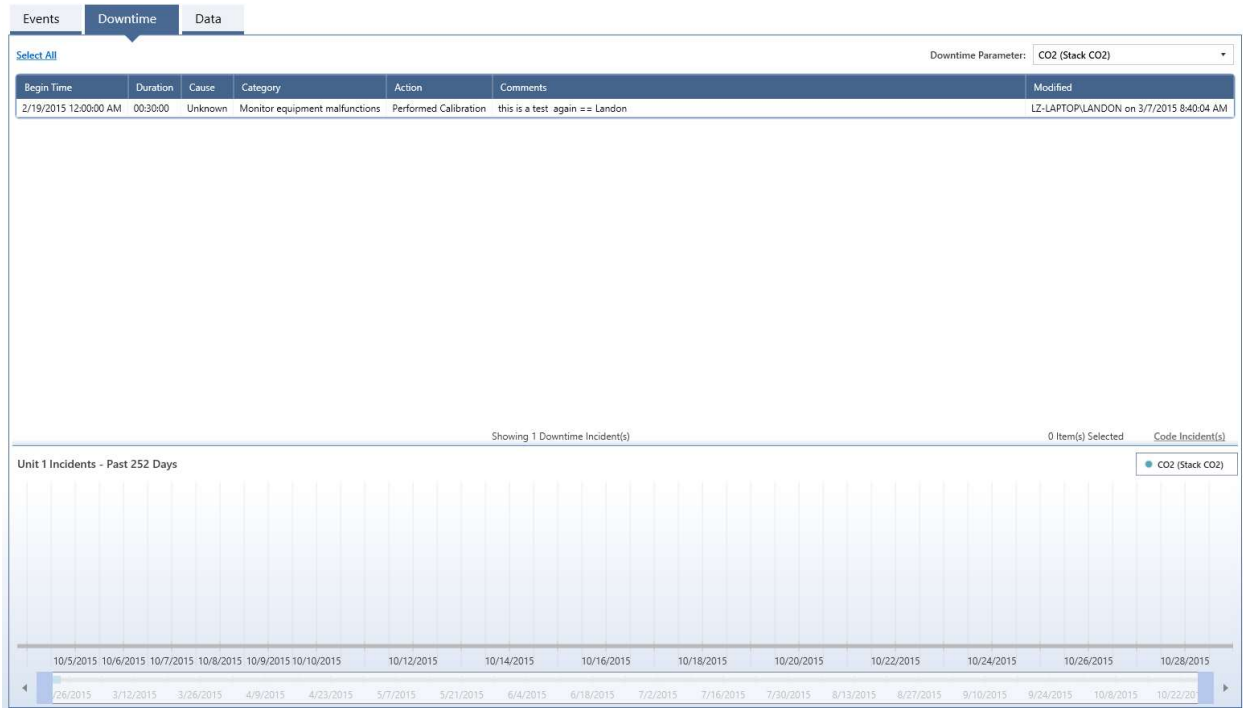


Figure Error! No text of specified style in document.-1 Downtime Sub-Tab