


# Reweighs – Scaling Freight

N-08

## Weigh-Tronix Lift Truck Scales

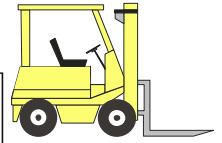

1. Hit any key to start



2. Enter your dock number.

3. Make sure scale is 'zeroed'.

### TO ZERO THE SCALE:


Make sure the forks of the lift truck are off the ground and empty, then press the **ZERO** key.



4. Scan Pro Number bar code

5. Weigh 1<sup>st</sup> handling unit  
- Hit **STORE** (above F4) -

6. Make sure display shows 'Storing Pro'

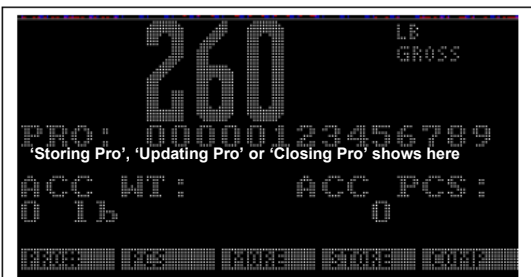

7. Weigh any additional handling units

- Hit **STORE** (above F4) for each unit -

8. Make sure display shows 'Updating Pro' for all additional handling units

9. When all units on Pro are weighed & stored, hit **COMP** (above F5)

10. Make sure display shows 'Closing Pro'.

**Always Verify**

- ZERO on your scale
- Display shows 'Storing Pro', 'Updating Pro' or 'Closing Pro' when appropriate

Dock Training Module



See Pete Roberts/W&I with any questions

Work Methods

N-08DOCK-WM-July2012-Reweighs 7/03