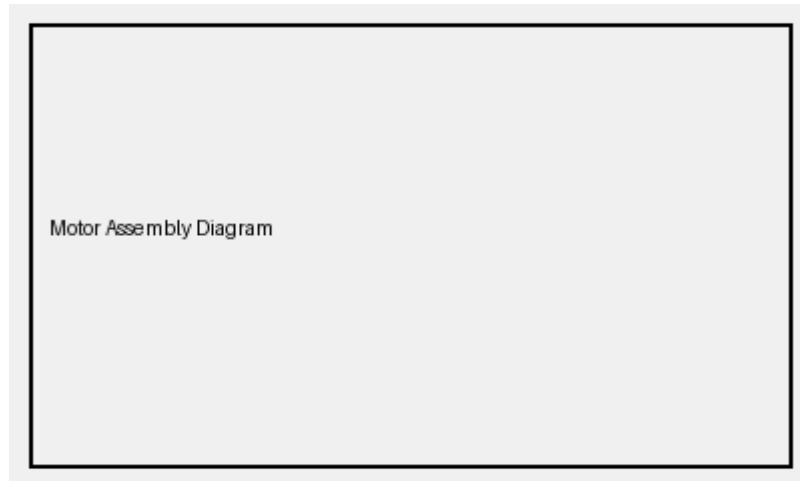


# Motor Maintenance Manual

This manual explains basic motor maintenance procedures. Proper belt alignment is essential for smooth motor operation.



*Figure 1 shows the internal motor assembly and belt positioning.*