


MENU Formatting the Card


If the card is new or was previously formatted by another camera or personal computer, format the card with the camera.

- !** **Formatting the card will erase everything in the card. Even protected images will be erased, so make sure there is nothing you need to keep. If necessary, transfer the images to a personal computer before formatting the card.**

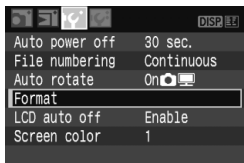

1 Select [Format].

- Under the [M] tab, select [Format], then press <SET>.

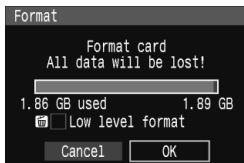

2 Format the card.

- Select [OK], then press <SET>.
- ▶ The card will be formatted.
- ▶ When the formatting is completed, the menu will reappear.
- For low-level formatting, press the <W> button, checkmark [Low level format] with <✓>, then select [OK].