



Operating

Lowering ROPS Crossbar

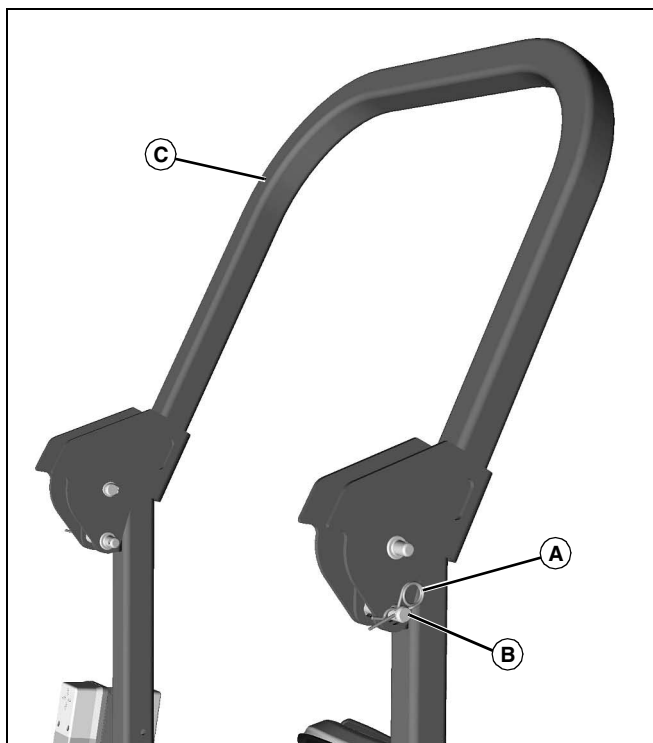

1. Remove spring locking pin (A) and drilled pin (B) on each side of the ROPS.
2. Carefully lower ROPS crossbar (C) about half way down.

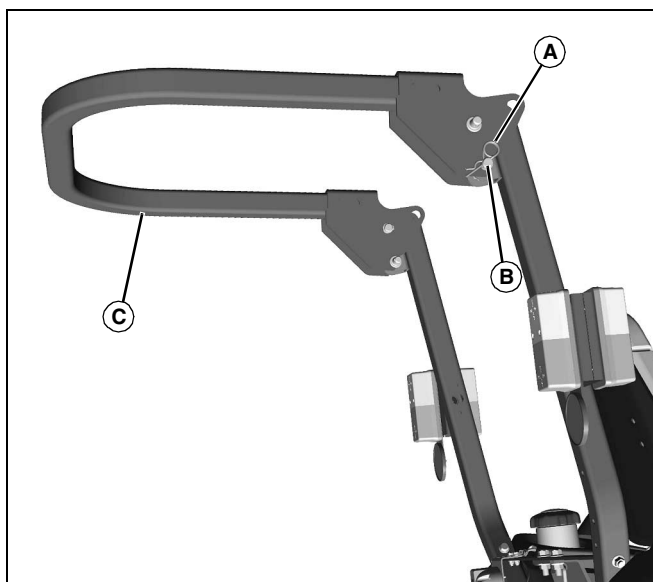

3. Install drilled pins (B) and spring locking pins (A) and lower crossbar (C) onto drilled pins (B).

Raising ROPS Crossbar

1. Raise the crossbar just enough to remove spring locking pins (A) and drilled pins (B) on each side of the ROPS.

2. Carefully raise ROPS crossbar (C) to the operating position.
3. Align crossbar bracket holes with support bracket holes on each side of the ROPS.
4. Install drilled pins (B) and spring locking pins (A) to lock crossbar (C) in the raised position.