


7.9.1.2 Clearing Maximum Torque Data


The data for the maximum torque can be cleared when the maximum torque-related information is being displayed.

1. Select {DATA} under the menu.
 - The clear max torque window appears

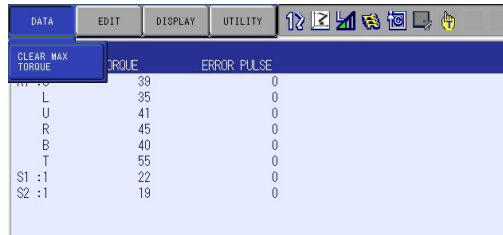

CLEAR MAX TORQUE	TORQUE	ERROR PULSE
R1 :S	39	0
L	35	0
U	41	0
R	45	0
B	40	0
T	55	0
S1 :1	22	0
S2 :1	19	0

2. Select {CLEAR MAX TORQUE}.
 - The maximum torque data is cleared.

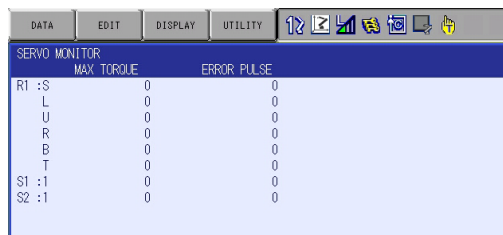

SERVO MONITOR	MAX TORQUE	ERROR PULSE
R1 :S	0	0
L	0	0
U	0	0
R	0	0
B	0	0
T	0	0
S1 :1	0	0
S2 :1	0	0