

STARTING SYSTEMS

TABLE OF CONTENTS

	page		page
DESCRIPTION AND OPERATION		STARTER RELAY	8
STARTING SYSTEM	1	REMOVAL AND INSTALLATION	
STARTER MOTOR.....	2	STARTER MOTOR.....	10
STARTER RELAY	3	STARTER RELAY	12
DIAGNOSIS AND TESTING		SPECIFICATIONS	
STARTING SYSTEM	3	STARTING SYSTEM	13
STARTER MOTOR.....	8		

DESCRIPTION AND OPERATION

STARTING SYSTEM

DESCRIPTION

An electrically operated engine starting system is standard factory-installed equipment on this model. The starting system is designed to provide the vehicle operator with a convenient, efficient and reliable means of cranking and starting the internal combustion engine used to power the vehicle and all of its accessory systems from within the safe and secure confines of the passenger compartment. See the owner's manual in the vehicle glove box for more information and instructions on the recommended use and operation of the factory-installed starting system.

The starting system consists of the following components:

- Battery
- Starter relay
- Starter motor (including an integral starter solenoid)
- Ignition switch
- Clutch pedal position switch (manual transmission)
- Park/neutral position switch (automatic transmission)
- Wire harnesses and connections (including the battery cables).

This group provides complete service information for the starter motor and the starter relay. Complete service information for the other starting system components can be located as follows:

- Refer to **Battery** in the proper section of Group 8A - Battery for complete service information for the battery.
- Refer to **Ignition Switch and Key Lock Cylinder** in the proper section of Group 8D - Ignition System for complete service information for the ignition switch.

- Refer to **Clutch Pedal Position Switch** in the proper section of Group 6 - Clutch for complete service information for the clutch pedal position switch.

- Refer to **Park/Neutral Position Switch** in the proper section of Group 21 - Transmission for complete service information for the park/neutral position switch.

- Refer to the proper section of **Group 8W - Wiring Diagrams** for complete service information and circuit diagrams for the starting system wiring components.

Group 8A covers the Battery, Group 8B covers the Starting Systems, and Group 8C covers the Charging System. We have separated these systems to make it easier to locate the information you are seeking within this Service Manual. However, when attempting to diagnose any of these systems, it is important that you keep their interdependency in mind.

The battery, starting, and charging systems in the vehicle operate with one another, and must be tested as a complete system. In order for the vehicle to start and charge properly, all of the components that are used in these systems must perform within specifications.

The diagnostic procedures used in each of these groups include the most basic conventional diagnostic methods, to the more sophisticated On-Board Diagnostics (OBD) built into the Powertrain Control Module (PCM). Use of an induction-type milliamperere ammeter, volt/ohmmeter, battery charger, carbon pile rheostat (load tester), and 12-volt test lamp may be required.

All OBD-sensed systems are monitored by the PCM. Each monitored circuit is assigned a Diagnostic Trouble Code (DTC). The PCM will store a DTC in electronic memory for any failure it detects. Refer to **On-Board Diagnostic Test For Charging System** in the Diagnosis and Testing section of Group 8C - Charging System for more information.

DESCRIPTION AND OPERATION (Continued)

OPERATION

The starting system components form two separate circuits. A high-amperage feed circuit that feeds the starter motor between 150 and 350 amperes, and a low-amperage control circuit that operates on less than 20 amperes. The high-amperage feed circuit components include the battery, the battery cables, the contact disc portion of the starter solenoid, and the starter motor. The low-amperage control circuit components include the ignition switch, the clutch pedal position switch (manual transmission), the park/neutral position switch (automatic transmission), the starter relay, the electromagnetic windings of the starter solenoid, and the connecting wire harness components.

If the vehicle is equipped with a manual transmission, it has a clutch pedal position switch installed in series between the ignition switch and the coil battery terminal of the starter relay. This normally open switch prevents the starter relay from being energized when the ignition switch is turned to the momentary Start position, unless the clutch pedal is depressed. This feature prevents starter motor operation while the clutch disc and the flywheel are engaged. The starter relay coil ground terminal is always grounded on vehicles with a manual transmission.

If the vehicle is equipped with an automatic transmission, battery voltage is supplied through the low-amperage control circuit to the coil battery terminal of the starter relay when the ignition switch is turned to the momentary Start position. The park/neutral position switch is installed in series between the starter relay coil ground terminal and ground. This normally open switch prevents the starter relay from being energized and the starter motor from operating unless the automatic transmission gear selector is in the Neutral or Park positions.

When the starter relay coil is energized, the normally open relay contacts close. The relay contacts connect the relay common feed terminal to the relay normally open terminal. The closed relay contacts energize the starter solenoid coil windings.

The energized solenoid pull-in coil pulls in the solenoid plunger. The solenoid plunger pulls the shift lever in the starter motor. This engages the starter overrunning clutch and pinion gear with the starter ring gear on the manual transmission flywheel or on the automatic transmission torque converter or torque converter drive plate.

As the solenoid plunger reaches the end of its travel, the solenoid contact disc completes the high-amperage starter feed circuit and energizes the solenoid plunger hold-in coil. Current now flows between the solenoid battery terminal and the starter motor, energizing the starter.

Once the engine starts, the overrunning clutch protects the starter motor from damage by allowing the starter pinion gear to spin faster than the pinion shaft. When the driver releases the ignition switch to the On position, the starter relay coil is de-energized. This causes the relay contacts to open. When the relay contacts open, the starter solenoid plunger hold-in coil is de-energized.

When the solenoid plunger hold-in coil is de-energized, the solenoid plunger return spring returns the plunger to its relaxed position. This causes the contact disc to open the starter feed circuit, and the shift lever to disengage the overrunning clutch and pinion gear from the starter ring gear.

Following are general descriptions of the major components in the starting system.

STARTER MOTOR

DESCRIPTION

The starter motors used for all 2.5L engines and the 4.7L engines with an automatic transmission available in this model are not interchangeable with the starter motors used for the other available engines or with each other. The starter motors used for all 3.9L engines, 5.9L engines and the 4.7L engines with a manual transmission available in this model are interchangeable.

The 2.5L starter motor is mounted with two screws to the manual transmission clutch housing on the right side of the engine. The 4.7L automatic transmission starter motor is mounted with two screws to the automatic transmission torque converter housing on the left side of the engine. The starter motors for all of the remaining engine and transmission combinations are mounted with one screw, a stud and a nut to the manual transmission clutch housing or automatic transmission torque converter housing and are located on the left side of the engine.

Each of these starter motors incorporates several of the same features to create a reliable, efficient, compact, lightweight and powerful unit. The electric motors of both starters have four brushes contacting the motor commutator. The 2.5L starter motor uses four permanent magnets for the field poles, while the other starter motors feature four electromagnetic field coils wound around four pole shoes. The 2.5L starter motor is rated at 1.2 kilowatts (about 1.6 horsepower) output at 12 volts, while the other starter motor is rated at 1.4 kilowatts (about 1.9 horsepower) output at 12 volts.

These starter motors are serviced only as a unit with their starter solenoids, and cannot be repaired. If either component is faulty or damaged, the entire starter motor and starter solenoid unit must be replaced.

DESCRIPTION AND OPERATION (Continued)

OPERATION

These starter motors are equipped with a gear reduction (intermediate transmission) system. The gear reduction system consists of a gear that is integral to the output end of the electric motor armature shaft that is in continual engagement with a larger gear that is splined to the input end of the starter pinion gear shaft. This feature makes it possible to reduce the dimensions of the starter. At the same time, it allows higher armature rotational speed and delivers increased torque through the starter pinion gear to the starter ring gear.

The starter motors for all engines are activated by an integral heavy duty starter solenoid switch mounted to the overrunning clutch housing. This electromechanical switch connects and disconnects the feed of battery voltage to the starter motor and actuates a shift fork that engages and disengages the starter pinion gear with the starter ring gear.

These starter motors use an overrunning clutch and starter pinion gear unit to engage and drive a starter ring gear that is integral to the flywheel (manual transmission), torque converter or torque converter drive plate (automatic transmission) mounted on the rear crankshaft flange.

STARTER RELAY**DESCRIPTION**

The starter relay is an electromechanical device that switches battery current to the pull-in coil of the starter solenoid when the ignition switch is turned to the Start position. The starter relay is located in the Power Distribution Center (PDC), in the engine compartment. See the fuse and relay layout label affixed to the inside surface of the PDC cover for starter relay identification and location.

The starter relay is a International Standards Organization (ISO) micro-relay. Relays conforming to the ISO specifications have common physical dimensions, current capacities, terminal patterns, and terminal functions. The ISO micro-relay terminal functions are the same as a conventional ISO relay. However, the ISO micro-relay terminal pattern (or footprint) is different, the current capacity is lower, and the physical dimensions are smaller than those of the conventional ISO relay.

The starter relay cannot be repaired or adjusted and, if faulty or damaged, it must be replaced.

OPERATION

The ISO relay consists of an electromagnetic coil, a resistor or diode, and three (two fixed and one mov-

able) electrical contacts. The movable (common feed) relay contact is held against one of the fixed contacts (normally closed) by spring pressure. When the electromagnetic coil is energized, it draws the movable contact away from the normally closed fixed contact, and holds it against the other (normally open) fixed contact.

When the electromagnetic coil is de-energized, spring pressure returns the movable contact to the normally closed position. The resistor or diode is connected in parallel with the electromagnetic coil in the relay, and helps to dissipate voltage spikes that are produced when the coil is de-energized.

DIAGNOSIS AND TESTING**STARTING SYSTEM****DIAGNOSIS**

The battery, starting, and charging systems operate with one another, and must be tested as a complete system. In order for the vehicle to start and charge properly, all of the components involved in these systems must perform within specifications.

Group 8A covers the Battery, Group 8B covers the Starting Systems, and Group 8C covers the Charging System. We have separated these systems to make it easier to locate the information you are seeking within this Service Manual. However, when attempting to diagnose any of these systems, it is important that you keep their interdependency in mind.

The diagnostic procedures used in these groups include the most basic conventional diagnostic methods, to the more sophisticated On-Board Diagnostics (OBD) built into the Powertrain Control Module (PCM). Use of an induction-type milliampere ammeter, volt/ohmmeter, battery charger, carbon pile rheostat (load tester), and 12-volt test lamp may be required.

All OBD-sensed systems are monitored by the PCM. Each monitored circuit is assigned a Diagnostic Trouble Code (DTC). The PCM will store a DTC in electronic memory for any failure it detects. Refer to **On-Board Diagnostic Test For Charging System** in the Diagnosis and Testing section of Group 8C - Charging System for more information.

DIAGNOSIS AND TESTING (Continued)

Starting System Diagnosis		
CONDITION	POSSIBLE CAUSE	CORRECTION
STARTER FAILS TO OPERATE.	<ol style="list-style-type: none"> 1. Battery discharged or faulty. 2. Starting circuit wiring faulty. 3. Starter relay faulty. 4. Ignition switch faulty. 5. Clutch pedal position switch faulty. 6. Park/Neutral position switch faulty or misadjusted. 7. Starter solenoid faulty. 8. Starter motor faulty. 	<ol style="list-style-type: none"> 1. Refer to Battery in the Diagnosis and Testing section of Group 8A - Battery. Charge or replace the battery, if required. 2. Refer to Starting System in Group 8W - Wiring Diagrams. Test and repair the starter feed and/or control circuits, if required. 3. Refer to Starter Relay in the Diagnosis and Testing section of this group. Replace the starter relay, if required. 4. Refer to Ignition Switch and Key Lock Cylinder in the Diagnosis and Testing section of Group 8D - Ignition System. Replace the ignition switch, if required. 5. Refer to Clutch Pedal Position Switch in the Diagnosis and Testing section of Group 6 - Clutch. 6. Refer to Park/Neutral Position Switch in the Diagnosis and Testing section of Group 21 - Transmission. Replace the park/neutral position switch, if required. 7. Refer to Starter Motor in the Diagnosis and Testing section of this group. Replace the starter motor assembly, if required. 8. If all other starting system components and circuits test OK, replace the starter motor assembly.
STARTER ENGAGES, FAILS TO TURN ENGINE.	<ol style="list-style-type: none"> 1. Battery discharged or faulty. 2. Starting circuit wiring faulty. 3. Starter motor faulty. 4. Engine seized. 	<ol style="list-style-type: none"> 1. Refer to Battery in the Diagnosis and Testing section of Group 8A - Battery. Charge or replace the battery, if required. 2. Refer to Starting System in Group 8W - Wiring Diagrams. Test and repair the starter feed and/or control circuits, if required. 3. If all other starting system components and circuits test OK, replace the starter motor assembly. 4. Refer to Engine Diagnosis in the Diagnosis and Testing section of Group 9 - Engine.
STARTER ENGAGES, SPINS OUT BEFORE ENGINE STARTS.	<ol style="list-style-type: none"> 1. Starter ring gear faulty. 2. Starter motor faulty. 	<ol style="list-style-type: none"> 1. Refer to Starter Motor in the Removal and Installation section of this group. Remove the starter motor to inspect the starter ring gear. Replace the starter ring gear, if required. 2. If all other starting system components and circuits test OK, replace the starter motor assembly.
STARTER DOES NOT DISENGAGE.	<ol style="list-style-type: none"> 1. Starter motor improperly installed. 2. Starter relay faulty. 3. Ignition switch faulty. 4. Starter motor faulty. 	<ol style="list-style-type: none"> 1. Refer to Starter Motor in the Removal and Installation section of this group. Tighten the starter mounting hardware to the correct tightness specifications. 2. Refer to Starter Relay in the Diagnosis and Testing section of this group. Replace the starter relay, if required. 3. Refer to Ignition Switch and Key Lock Cylinder in the Diagnosis and Testing section of Group 8D - Ignition System. Replace the ignition switch, if required. 4. If all other starting system components and circuits test OK, replace the starter motor assembly.

DIAGNOSIS AND TESTING (Continued)

INSPECTION

For complete circuit diagrams, refer to **Starting System** in the Contents of Group 8W - Wiring Diagrams. Before removing any unit from the starting system for repair or diagnosis, perform the following inspections:

WARNING: ON VEHICLES EQUIPPED WITH AIR-BAGS, REFER TO GROUP 8M - PASSIVE RESTRAINT SYSTEMS BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIR-BAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

- **Battery** - Visually inspect the battery for indications of physical damage and loose or corroded cable connections. Determine the state-of-charge and cranking capacity of the battery. Charge or replace the battery, if required. Refer to **Battery** in the proper section of Group 8A - Battery for complete service information for the battery.
- **Ignition Switch** - Visually inspect the ignition switch for indications of physical damage and loose or corroded wire harness connections. Refer to **Ignition Switch and Key Lock Cylinder** in the proper section of Group 8D - Ignition System for complete service information for the ignition switch.
- **Clutch Pedal Position Switch** - If the vehicle is equipped with a manual transmission, visually inspect the clutch pedal position switch for indications of physical damage and loose or corroded wire harness connections. Refer to **Clutch Pedal Position Switch** in the proper section of Group 6 - Clutch for complete service information for the clutch pedal position switch.
- **Park/Neutral Position Switch** - If the vehicle is equipped with an automatic transmission, visually inspect the park/neutral position switch for indications of physical damage and loose or corroded wire harness connections. Refer to **Park/Neutral Position Switch** in the proper section of Group 21 - Transmission for complete service information for the park/neutral position switch.
- **Starter Relay** - Visually inspect the starter relay for indications of physical damage and loose or corroded wire harness connections.
- **Starter Motor** - Visually inspect the starter motor for indications of physical damage and loose or corroded wire harness connections.
- **Starter Solenoid** - Visually inspect the starter solenoid for indications of physical damage and loose or corroded wire harness connections.
- **Wiring** - Visually inspect the wire harnesses for damage. Repair or replace any faulty wiring, as


required. Refer to the proper section of **Group 8W - Wiring Diagrams** for complete service information and circuit diagrams for the starting system wiring components.

TESTING

COLD CRANKING TEST

For complete circuit diagrams, refer to **Starting System** in the Contents of Group 8W - Wiring Diagrams. The battery must be fully-charged and load-tested before proceeding. Refer to **Battery** in the Diagnosis and Testing section of Group 8A - Battery for the procedures.

(1) Connect a suitable volt-ampere tester to the battery terminals (Fig. 1). See the instructions provided by the manufacturer of the volt-ampere tester being used.

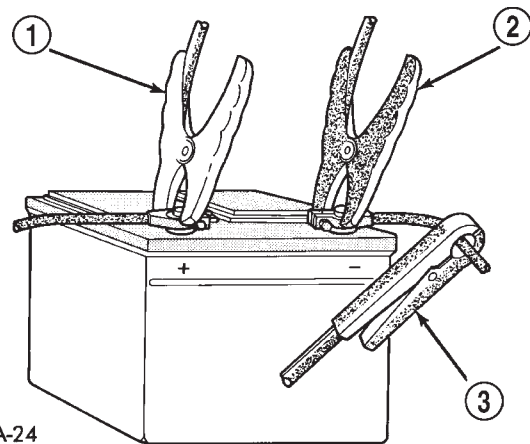

948A-24

Fig. 1 Volts-Amps Tester Connections - Typical

- 1 - POSITIVE CLAMP
- 2 - NEGATIVE CLAMP
- 3 - INDUCTION AMMETER CLAMP

(2) Fully engage the parking brake.

(3) If the vehicle is equipped with a manual transmission, place the gearshift selector lever in the Neutral position and block the clutch pedal in the fully depressed position. If the vehicle is equipped with an automatic transmission, place the gearshift selector lever in the Park position.

(4) Verify that all lamps and accessories are turned off.

(5) To prevent the engine from starting, remove the Automatic ShutDown (ASD) relay. The ASD relay is located in the Power Distribution Center (PDC), in the engine compartment. Refer to the fuse and relay layout label affixed to the underside of the PDC cover for ASD relay identification and location.

(6) Rotate and hold the ignition switch in the Start position. Note the cranking voltage and current (amperage) draw readings shown on the volt-ampere tester.

DIAGNOSIS AND TESTING (Continued)

(a) If the voltage reads below 9.6 volts, refer to **Starter Motor** in the Diagnosis and Testing section of this group. If the starter motor is OK, refer to **Engine Diagnosis** in the Diagnosis and Testing section of Group 9 - Engine for further testing of the engine. If the starter motor is not OK, replace the faulty starter motor.

(b) If the voltage reads above 9.6 volts and the current (amperage) draw reads below specifications, refer to **Feed Circuit Test** in this section.

(c) If the voltage reads 12.5 volts or greater and the starter motor does not turn, refer to **Control Circuit Testing** in this section.

(d) If the voltage reads 12.5 volts or greater and the starter motor turns very slowly, refer to **Feed Circuit Test** in this section.

NOTE: A cold engine will increase the starter current (amperage) draw reading, and reduce the battery voltage reading.

FEED CIRCUIT TEST

The starter feed circuit test (voltage drop method) will determine if there is excessive resistance in the high-amperage feed circuit. For complete circuit diagrams, refer to **Starting System** in the Contents of Group 8W - Wiring Diagrams.

When performing these tests, it is important to remember that the voltage drop is giving an indication of the resistance between the two points at which the voltmeter probes are attached.


Example: When testing the resistance of the battery positive cable, touch the voltmeter leads to the battery positive cable clamp and the cable connector at the starter solenoid. If you probe the battery positive terminal post and the cable connector at the starter solenoid, you are reading the combined voltage drop in the battery positive cable clamp-to-terminal post connection and the battery positive cable.

The following operation will require a voltmeter accurate to 1/10 (0.10) volt. Before performing the tests, be certain that the following procedures are accomplished:

- Battery is fully-charged and load-tested. Refer to **Battery** in the Diagnosis and Testing section of Group 8A - Battery for the procedures.
- Fully engage the parking brake.
- If the vehicle is equipped with a manual transmission, place the gearshift selector lever in the Neutral position and block the clutch pedal in the fully depressed position. If the vehicle is equipped with an automatic transmission, place the gearshift selector lever in the Park position.
- Verify that all lamps and accessories are turned off.

- To prevent the engine from starting, remove the Automatic ShutDown (ASD) relay. The ASD relay is located in the Power Distribution Center (PDC), in the engine compartment. Refer to the fuse and relay layout label affixed to the underside of the PDC cover for ASD relay identification and location.

(1) Connect the positive lead of the voltmeter to the battery negative terminal post. Connect the negative lead of the voltmeter to the battery negative cable clamp (Fig. 2). Rotate and hold the ignition switch in the Start position. Observe the voltmeter. If voltage is detected, correct the poor contact between the cable clamp and the terminal post.

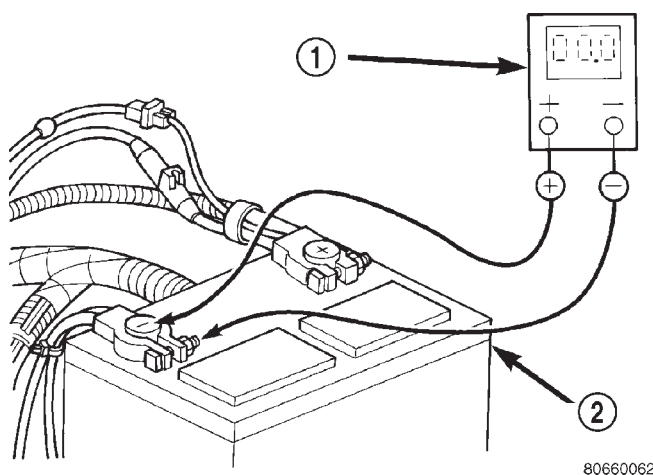

80660062

Fig. 2 Test Battery Negative Connection Resistance - Typical


- 1 - VOLTMETER
2 - BATTERY

(2) Connect the positive lead of the voltmeter to the battery positive terminal post. Connect the negative lead of the voltmeter to the battery positive cable clamp (Fig. 3). Rotate and hold the ignition switch in the Start position. Observe the voltmeter. If voltage is detected, correct the poor contact between the cable clamp and the terminal post.

(3) Connect the voltmeter to measure between the battery positive terminal post and the starter solenoid battery terminal stud (Fig. 4). Rotate and hold the ignition switch in the Start position. Observe the voltmeter. If the reading is above 0.2 volt, clean and tighten the battery cable connection at the solenoid. Repeat the test. If the reading is still above 0.2 volt, replace the faulty battery positive cable.

(4) Connect the voltmeter to measure between the battery negative terminal post and a good clean ground on the engine block (Fig. 5). Rotate and hold the ignition switch in the Start position. Observe the voltmeter. If the reading is above 0.2 volt, clean and tighten the battery negative cable attachment on the engine block. Repeat the test. If the reading is still


DIAGNOSIS AND TESTING (Continued)

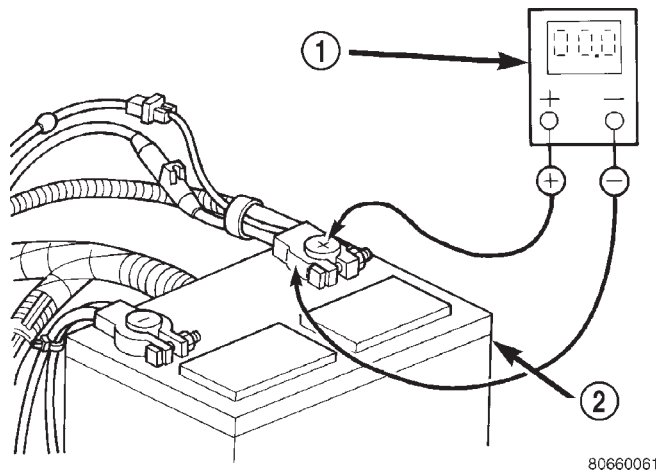

80660061

Fig. 3 Test Battery Positive Connection Resistance - Typical

- 1 - VOLTMETER
2 - BATTERY

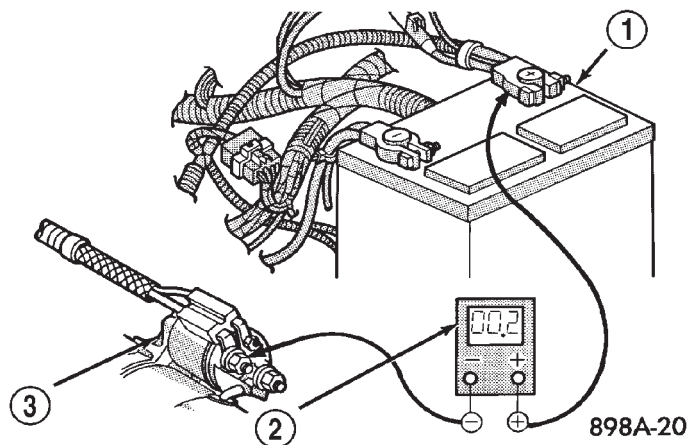

898A-20


Fig. 4 Test Battery Positive Cable Resistance - Typical

- 1 - BATTERY
2 - VOLTMETER
3 - STARTER MOTOR

above 0.2 volt, replace the faulty battery negative cable.

(5) Connect the positive lead of the voltmeter to the starter housing. Connect the negative lead of the voltmeter to the battery negative terminal post (Fig. 6). Rotate and hold the ignition switch in the Start position. Observe the voltmeter. If the reading is above 0.2 volt, correct the poor starter to engine block ground contact.


If the resistance tests detect no feed circuit problems, refer to **Starter Motor** in the Diagnosis and Testing section of this group.

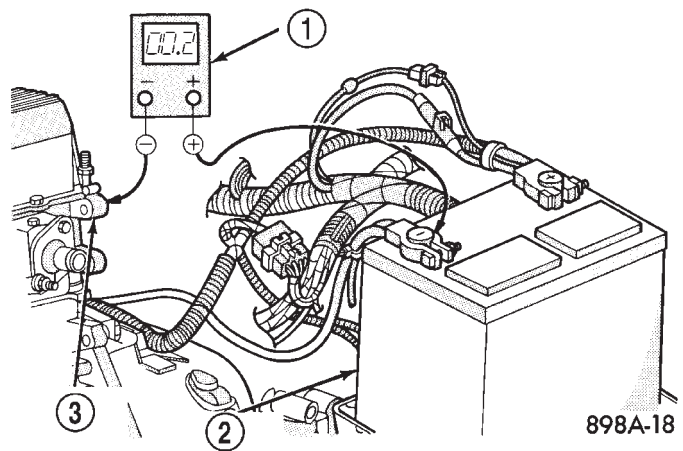

898A-18

Fig. 5 Test Ground Circuit Resistance - Typical

- 1 - VOLTMETER
2 - BATTERY
3 - ENGINE GROUND

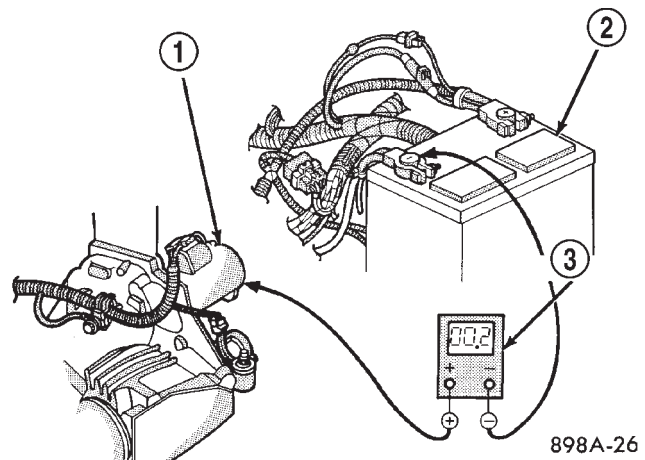

898A-26

Fig. 6 Test Starter Ground - Typical

- 1 - STARTER MOTOR
2 - BATTERY
3 - VOLTMETER

CONTROL CIRCUIT TESTING

The starter control circuit components should be tested in the order in which they are listed, as follows:

- **Starter Relay** - Refer to **Starter Relay** in the Diagnosis and Testing section of this group for the procedures.

- **Starter Solenoid** - Refer to **Starter Motor** in the Diagnosis and Testing section of this group for the procedures.

- **Ignition Switch** - Refer to **Ignition Switch and Key Lock Cylinder** in the Diagnosis and Testing section of Group 8D - Ignition System for the procedures.

DIAGNOSIS AND TESTING (Continued)

• **Clutch Pedal Position Switch** - If the vehicle is equipped with a manual transmission, refer to **Clutch Pedal Position Switch** in the Diagnosis and Testing section of Group 6 - Clutch for the procedures.

• **Park/Neutral Position Switch** - If the vehicle is equipped with an automatic transmission, refer to **Park/Neutral Position Switch** in the Diagnosis and Testing section of Group 21 - Transmission for the procedures.

• **Wire harnesses and connections** - Refer to **Starting System** in the Contents of Group 8W - Wiring Diagrams for complete circuit diagrams.

STARTER MOTOR

Correct starter motor operation can be confirmed by performing the following free running bench test. This test can only be performed with the starter motor removed from the vehicle. Refer to **Starting System** in the Specifications section of this group for the starter motor specifications.

(1) Remove the starter motor from the vehicle. Refer to **Starter Motor** in the Removal and Installation section of this group for the procedures.

(2) Mount the starter motor securely in a soft-jawed bench vise. The vise jaws should be clamped on the mounting flange of the starter motor. Never clamp on the starter motor by the field frame.

(3) Connect a suitable volt-ampere tester and a 12-volt battery to the starter motor in series, and set the ammeter to the 100 ampere scale. See the instructions provided by the manufacturer of the volt-ampere tester being used.

(4) Install a jumper wire from the solenoid terminal to the solenoid battery terminal. The starter motor should operate. If the starter motor fails to operate, replace the faulty starter motor assembly.

(5) Adjust the carbon pile load of the tester to obtain the free running test voltage. Refer to **Starting System** in the Specifications section of this group for the starter motor free running test voltage specifications.

(6) Note the reading on the ammeter and compare this reading to the free running test maximum amperage draw. Refer to **Starting System** in the Specifications section of this group for the starter motor free running test maximum amperage draw specifications.

(7) If the ammeter reading exceeds the maximum amperage draw specification, replace the faulty starter motor assembly.

STARTER SOLENOID

This test can only be performed with the starter motor removed from the vehicle.

(1) Remove the starter motor from the vehicle. Refer to **Starter Motor** in the Removal and Installation section of this group for the procedures.

(2) Disconnect the wire from the solenoid field coil terminal.

(3) Check for continuity between the solenoid terminal and the solenoid field coil terminal with a continuity tester (Fig. 7) or (Fig. 8). There should be continuity. If OK, go to Step 4. If not OK, replace the faulty starter motor assembly.

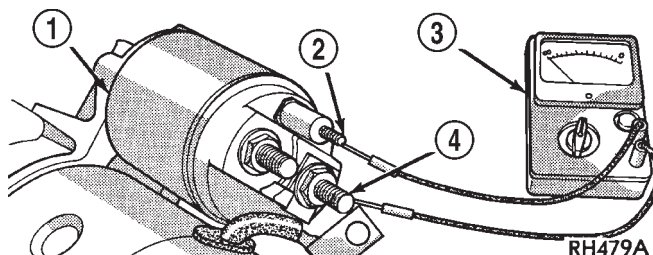


Fig. 7 Continuity Test Between Solenoid Terminal and Field Coil Terminal - 2.5L Engine - Typical

- 1 - SOLENOID
- 2 - SOLENOID TERMINAL
- 3 - OHMMETER
- 4 - FIELD COIL TERMINAL

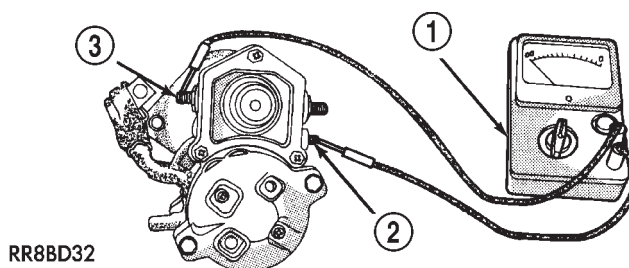


Fig. 8 Continuity Test Between Solenoid Terminal and Field Coil Terminal - 3.9L, 4.7L, 5.9L Engine - Typical

- 1 - OHMMETER
- 2 - SOLENOID TERMINAL
- 3 - FIELD COIL TERMINAL

(4) Check for continuity between the solenoid terminal and the solenoid case (Fig. 9) or (Fig. 10). There should be continuity. If not OK, replace the faulty starter motor assembly.

STARTER RELAY

The starter relay (Fig. 11) is located in the Power Distribution Center (PDC), in the engine compartment. Refer to the fuse and relay layout label affixed to the underside of the PDC cover for starter relay identification and location. Refer to **Starting System** in the index of this service manual for the location of complete starting system wiring diagrams.

DIAGNOSIS AND TESTING (Continued)

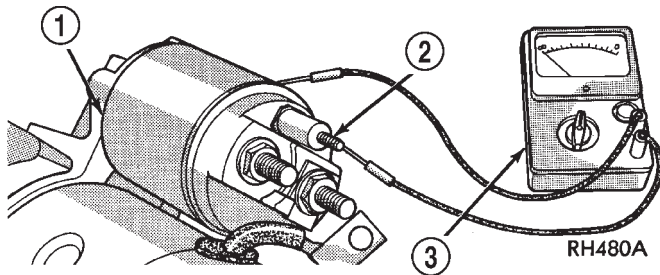


Fig. 9 Continuity Test Between Solenoid Terminal and Solenoid Case - 2.5L Engine - Typical

- 1 - SOLENOID
- 2 - SOLENOID TERMINAL
- 3 - OHMMETER

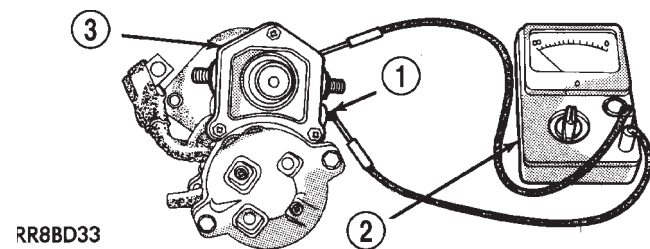


Fig. 10 Continuity Test Between Solenoid Terminal and Solenoid Case - 3.9L, 4.7L, 5.9L Engine - Typical

- 1 - SOLENOID TERMINAL
- 2 - OHMMETER
- 3 - SOLENOID

RELAY TEST

(1) Remove the starter relay from the PDC. Refer to **Starter Relay** in the index of this service manual for the location of the proper starter relay removal and installation procedures.

(2) A relay in the de-energized position should have continuity between terminals 87A and 30, and no continuity between terminals 87 and 30. If OK, go to Step 3. If not OK, replace the faulty relay.


(3) Resistance between terminals 85 and 86 (electromagnet) should be 75 ± 5 ohms. If OK, go to Step 4. If not OK, replace the faulty relay.

(4) Connect a battery to terminals 85 and 86. There should now be continuity between terminals 30 and 87, and no continuity between terminals 87A and 30. If OK, perform the Relay Circuit Test that follows. If not OK, replace the faulty relay.

RELAY CIRCUIT TEST

(1) The relay common feed terminal cavity (30) is connected to battery voltage and should be hot at all times. If OK, go to Step 2. If not OK, repair the open circuit to the fused B(+) fuse in the PDC as required.

(2) The relay normally closed terminal (87A) is connected to terminal 30 in the de-energized position, but is not used for this application. Go to Step 3.

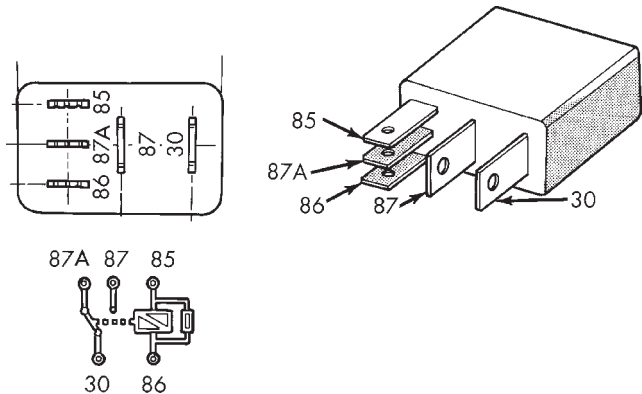

TERMINAL LEGEND	
NUMBER	IDENTIFICATION
30	COMMON FEED
85	COIL GROUND
86	COIL BATTERY
87	NORMALLY OPEN
87A	NORMALLY CLOSED

Fig. 11 Starter Relay

(3) The relay normally open terminal (87) is connected to the common feed terminal (30) in the energized position. This terminal supplies battery voltage to the starter solenoid field coil. There should be continuity between the cavity for relay terminal 87 and the starter solenoid terminal at all times. If OK, go to Step 4. If not OK, repair the open engine starter motor relay output circuit to the starter solenoid as required.

(4) The coil battery terminal (86) is connected to the electromagnet in the relay. It is energized when the ignition switch is held in the Start position. On vehicles with a manual transmission, the clutch pedal must be blocked in the fully depressed position for this test. Check for battery voltage at the cavity for relay terminal 86 with the ignition switch in the Start position, and no voltage when the ignition switch is released to the On position. If OK, go to Step 5. If not OK with a manual transmission, disconnect the clutch pedal position switch wire harness connector and install a jumper wire between the two cavities in the body half of the connector and check for battery voltage again at the cavity for relay terminal 86. If now OK, replace the faulty clutch pedal position switch. If still not OK with a manual transmission or if not OK with an automatic transmission, check for an open or shorted fused ignition switch output (start) circuit to the ignition switch and repair, as required. If the fused ignition switch output (start) circuit is OK, refer to **Ignition Switch and Key Lock Cylinder** in the index of this service manual for the location of the proper ignition switch diagnosis and testing procedures.

DIAGNOSIS AND TESTING (Continued)

(5) The coil ground terminal (85) is connected to the electromagnet in the relay. On vehicles with a manual transmission, it is grounded at all times. On vehicles with an automatic transmission, it is grounded through the park/neutral position switch only when the gearshift selector lever is in the Park or Neutral positions. Check for continuity to ground at the cavity for relay terminal 85. If not OK with a manual transmission, repair the open park/neutral position switch sense circuit to ground as required. If not OK with an automatic transmission, check for an open or shorted park/neutral position switch sense circuit to the park/neutral position switch and repair, as required. If the park/neutral position switch sense circuit checks OK, refer to **Park/Neutral Position Switch** in the index of this service manual for the location of the proper park/neutral position switch diagnosis and testing procedures.

REMOVAL AND INSTALLATION

STARTER MOTOR

REMOVAL

2.5L ENGINE

(1) Disconnect and isolate the battery negative cable.

(2) Raise and support the vehicle.

(3) Remove the screw and washer (forward facing) that secures the lower mounting flange of the starter motor to the manual transmission clutch housing (Fig. 12).


(4) While supporting the starter motor with one hand, use the other hand to remove the screw and washer (rearward facing) that secures the upper mounting flange of the starter motor to the manual transmission clutch housing.

(5) Lower the starter motor from the front of the manual transmission clutch housing far enough to access and remove the nut that secures the battery positive cable eyelet terminal to the starter solenoid B(+) terminal stud. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(6) Remove the battery positive cable eyelet terminal from the solenoid B(+) terminal stud. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(7) Disconnect the battery positive cable solenoid terminal wire harness connector from the connector receptacle on the starter solenoid. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(8) Remove the starter motor from the manual transmission clutch housing.

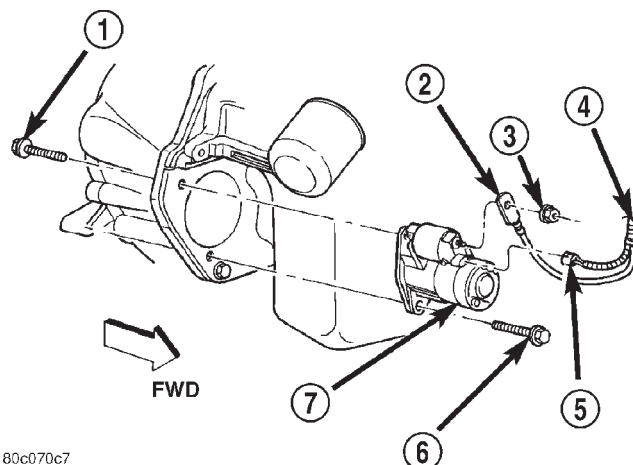

80c070c7

Fig. 12 Starter Motor Remove/Install - 2.5L Engine

- 1 - SCREW AND WASHER
- 2 - EYELET TERMINAL
- 3 - NUT
- 4 - BATTERY POSITIVE CABLE WIRE HARNESS
- 5 - WIRE HARNESS CONNECTOR
- 6 - SCREW AND WASHER
- 7 - STARTER MOTOR

ALL 3.9L AND 5.9L ENGINE, OR 4.7L ENGINE WITH MANUAL TRANSMISSION ONLY

(1) Disconnect and isolate the battery negative cable.

(2) Raise and support the vehicle.

(3) Remove the nut and the lock washer that secures the lower mounting flange of the starter motor to the stud on the manual transmission clutch housing or the automatic transmission torque converter housing (Fig. 13).

(4) While supporting the starter motor with one hand, use the other hand to remove the screw and washer that secures the upper mounting flange of the starter motor to the manual transmission clutch housing or the automatic transmission torque converter housing.

(5) If the vehicle is equipped with an automatic transmission, slide the automatic transmission cooler tube bracket forward on the tubes far enough for the starter motor mounting flange to be removed from the lower mounting stud.

(6) Lower the starter motor from the front of the manual transmission clutch housing or the automatic transmission torque converter housing far enough to access and remove the nut that secures the battery positive cable eyelet terminal to the starter solenoid B(+) terminal stud. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(7) Remove the battery positive cable eyelet terminal from the solenoid B(+) terminal stud. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

REMOVAL AND INSTALLATION (Continued)

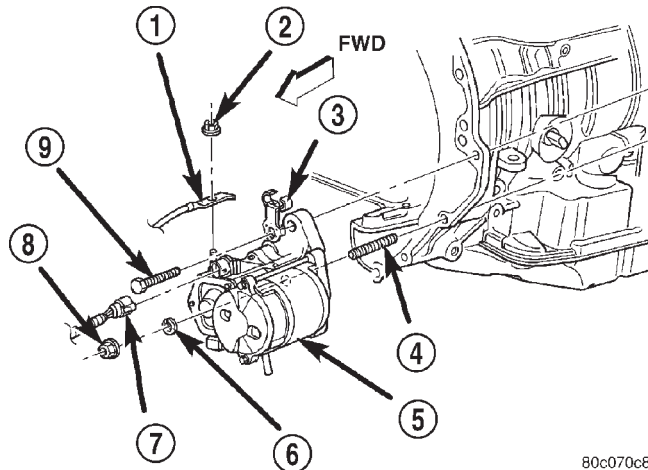


Fig. 13 Starter Motor Remove/Install - All 3.9L and 5.9L Engine, or 4.7L Engine with Manual Transmission Only

- 1 - EYELET TERMINAL
- 2 - NUT
- 3 - BRACKET
- 4 - STUD
- 5 - STARTER MOTOR
- 6 - LOCK WASHER
- 7 - WIRE HARNESS CONNECTOR
- 8 - NUT
- 9 - SCREW AND WASHER

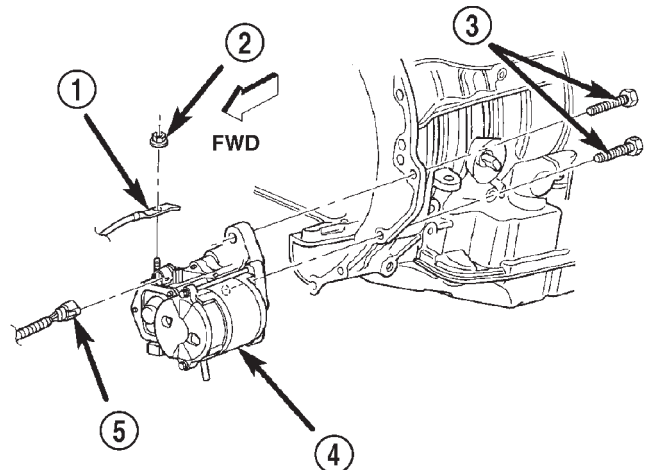


Fig. 14 Starter Motor Remove/Install - 4.7L Engine with Automatic Transmission

- 1 - EYELET TERMINAL
- 2 - NUT
- 3 - SCREW AND WASHER (2)
- 4 - STARTER MOTOR
- 5 - WIRE HARNESS CONNECTOR

(8) Disconnect the battery positive cable solenoid terminal wire harness connector from the connector receptacle on the starter solenoid. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(9) Remove the starter motor from the manual transmission clutch housing or automatic transmission torque converter housing.

4.7L ENGINE WITH AUTOMATIC TRANSMISSION

(1) Disconnect and isolate the battery negative cable.

(2) Raise and support the vehicle.

(3) Remove the screw and washer (rearward facing) that secures the lower mounting flange of the starter motor to the automatic transmission torque converter housing (Fig. 14).

(4) While supporting the starter motor with one hand, use the other hand to remove the screw and washer (rearward facing) that secures the upper mounting flange of the starter motor to the automatic transmission torque converter housing.

(5) Lower the starter motor from the front of the automatic transmission torque converter housing far enough to access and remove the nut that secures the battery positive cable eyelet terminal to the starter solenoid B(+) terminal stud. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(6) Remove the battery positive cable eyelet terminal from the solenoid B(+) terminal stud. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(7) Disconnect the battery positive cable solenoid terminal wire harness connector from the connector receptacle on the starter solenoid. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(8) Remove the starter motor from the automatic transmission torque converter housing.

INSTALLATION

2.5L ENGINE

(1) Position the starter motor to the manual transmission clutch housing.

(2) Reconnect the battery positive cable solenoid terminal wire harness connector to the connector receptacle on the starter solenoid. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(3) Install the battery positive cable eyelet terminal onto the solenoid B(+) terminal stud. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(4) Install and tighten the nut that secures the battery positive cable eyelet terminal to the starter solenoid B(+) terminal stud. Tighten the nut to 13.6 N·m (120 in. lbs.). Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

REMOVAL AND INSTALLATION (Continued)

(5) Position the starter motor mounting flange on the manual transmission clutch housing and loosely install the two screw and washer units to secure it.

(6) Tighten the two screw and washer units that secure the starter motor mounting flange to the manual transmission clutch housing. Tighten the screws to 54.2 N·m (40 ft. lbs.).

(7) Lower the vehicle.

(8) Reconnect the battery negative cable.

ALL 3.9L AND 5.9L ENGINE, OR 4.7L ENGINE WITH MANUAL TRANSMISSION ONLY

(1) Position the starter motor to the manual transmission clutch housing or automatic transmission torque converter housing.

(2) Reconnect the battery positive cable solenoid terminal wire harness connector to the connector receptacle on the starter solenoid. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(3) Install the battery positive cable eyelet terminal onto the solenoid B(+) terminal stud. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(4) Install and tighten the nut that secures the battery positive cable eyelet terminal to the starter solenoid B(+) terminal stud. Tighten the nut to 13.6 N·m (120 in. lbs.). Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(5) Position the hole in the starter motor lower mounting flange over the stud on the manual transmission clutch housing or automatic transmission torque converter housing.

(6) If the vehicle is equipped with an automatic transmission, slide the automatic transmission cooler tube bracket rearward on the tubes and into position over the starter motor upper mounting flange.

(7) Loosely install the screw and washer unit that secures the starter motor upper mounting flange to the manual transmission clutch housing or automatic transmission torque converter housing.

(8) Loosely install the lock washer and nut that secures the starter motor lower mounting flange to the stud on the manual transmission clutch housing or automatic transmission torque converter housing.

(9) Tighten the screw and washer unit and the nut that secure the starter motor mounting flange to the manual transmission clutch housing or automatic transmission torque converter housing. Tighten the screw and the nut to 67.8 N·m (50 ft. lbs.).

(10) Lower the vehicle.

(11) Reconnect the battery negative cable.

4.7L ENGINE WITH AUTOMATIC TRANSMISSION

(1) Position the starter motor to the automatic transmission torque converter housing.

(2) Reconnect the battery positive cable solenoid terminal wire harness connector to the connector receptacle on the starter solenoid. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(3) Install the battery positive cable eyelet terminal onto the solenoid B(+) terminal stud. Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(4) Install and tighten the nut that secures the battery positive cable eyelet terminal to the starter solenoid B(+) terminal stud. Tighten the nut to 13.6 N·m (120 in. lbs.). Always support the starter motor during this process. Do not let the starter motor hang from the wire harness.

(5) Position the starter motor mounting flange on the automatic transmission torque converter housing and loosely install the two screw and washer units to secure it.

(6) Tighten the two screw and washer units that secure the starter motor mounting flange to the automatic transmission torque converter housing. Tighten the screws to 67.8 N·m (50 ft. lbs.).

(7) Lower the vehicle.

(8) Reconnect the battery negative cable.

STARTER RELAY

REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Remove the cover from the Power Distribution Center (PDC) (Fig. 15).

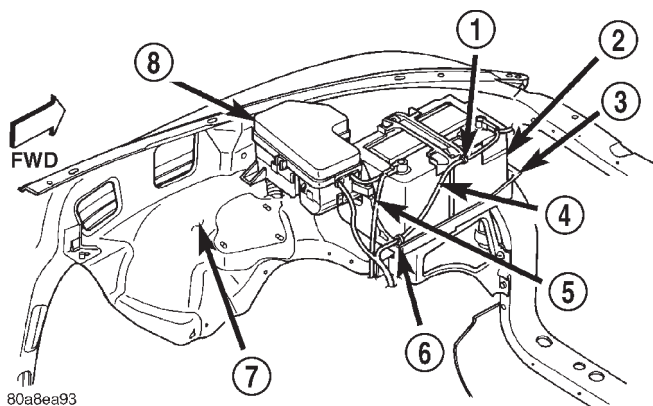


Fig. 15 Power Distribution Center

- 1 – CLIP
- 2 – BATTERY
- 3 – TRAY
- 4 – NEGATIVE CABLE
- 5 – POSITIVE CABLE
- 6 – CLIP
- 7 – FENDER INNER SHIELD
- 8 – POWER DISTRIBUTION CENTER

REMOVAL AND INSTALLATION (Continued)

(3) See the fuse and relay layout label affixed to the underside of the PDC cover for starter relay identification and location.

(4) Remove the starter relay from the PDC.

INSTALLATION

(1) See the fuse and relay layout label affixed to the underside of the PDC cover for the proper starter relay location.

(2) Position the starter relay in the proper receptacle in the PDC.

(3) Align the starter relay terminals with the terminal cavities in the PDC receptacle.

(4) Push down firmly on the starter relay until the terminals are fully seated in the terminal cavities in the PDC receptacle.

(5) Install the cover onto the PDC.

(6) Reconnect the battery negative cable.

SPECIFICATIONS

STARTING SYSTEM

Starter Motor and Solenoid			
Manufacturer	Mitsubishi	Denso	Denso
Part Number	56041013AC	56027702AC	56028715
Engine Application	2.5L	3.9L, 4.7L (Manual), 5.9L	4.7L (Auto)
Power Rating	1.2 Kilowatt (1.6 Horsepower)	1.4 Kilowatt (1.9 Horsepower)	1.4 Kilowatt (1.9 Horsepower)
Voltage	12 Volts	12 Volts	12 Volts
Pinion Teeth	9	10	10
Number of Fields	4	4	4
Number of Poles	4	4	4
Number of Brushes	4	4	4
Drive Type	Planetary Gear Reduction	Reduction Gear Train	Reduction Gear Train
Free Running Test Voltage	11.2 Volts	11 Volts	11 Volts
Free Running Test Maximum Amperage Draw	90 Amperes	73 Amperes	73 Amperes
Free Running Test Minimum Speed	2600 rpm	3601 rpm	3601 rpm
Solenoid Closing Maximum Voltage Required	7.8 Volts	7.5 Volts	7.5 Volts
*Cranking Amperage Draw Test	130 Amperes	125 - 250 Amperes	125 - 250 Amperes
*Test at operating temperature. Cold engine, tight (new) engine, or heavy oil will increase starter amperage draw.			

