



## How to use a Delta printer to print a model


After Installed Repetier host

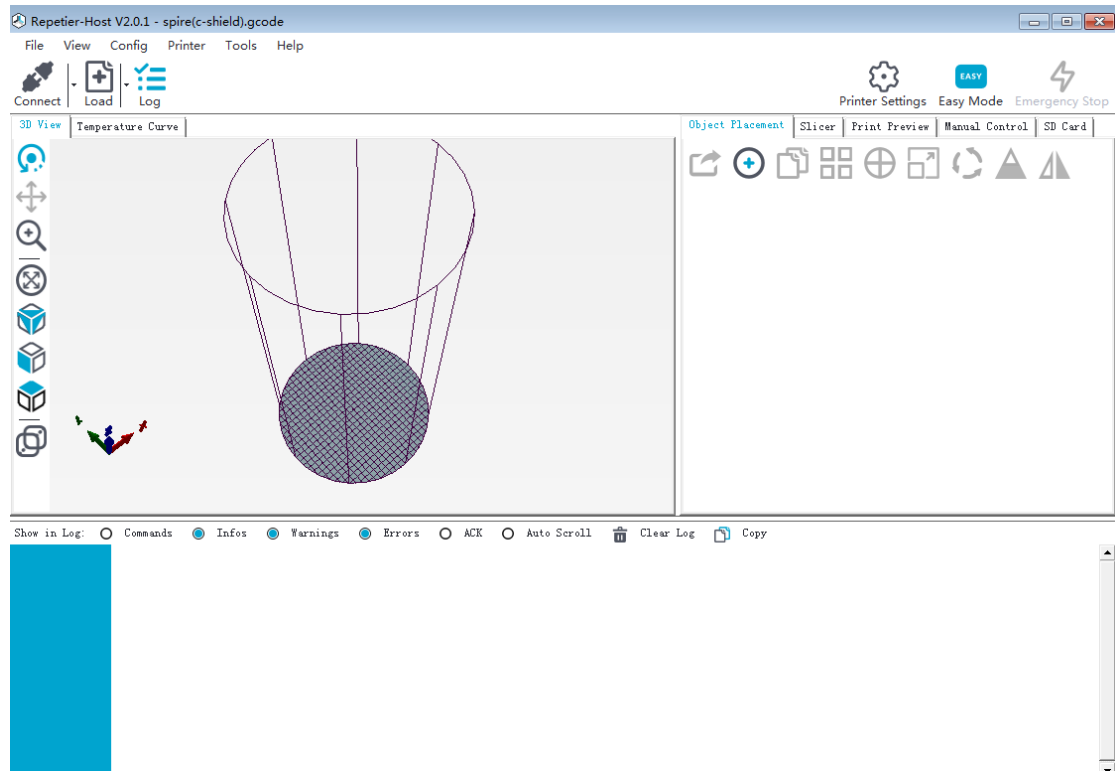


Then, set the setting for your printer:

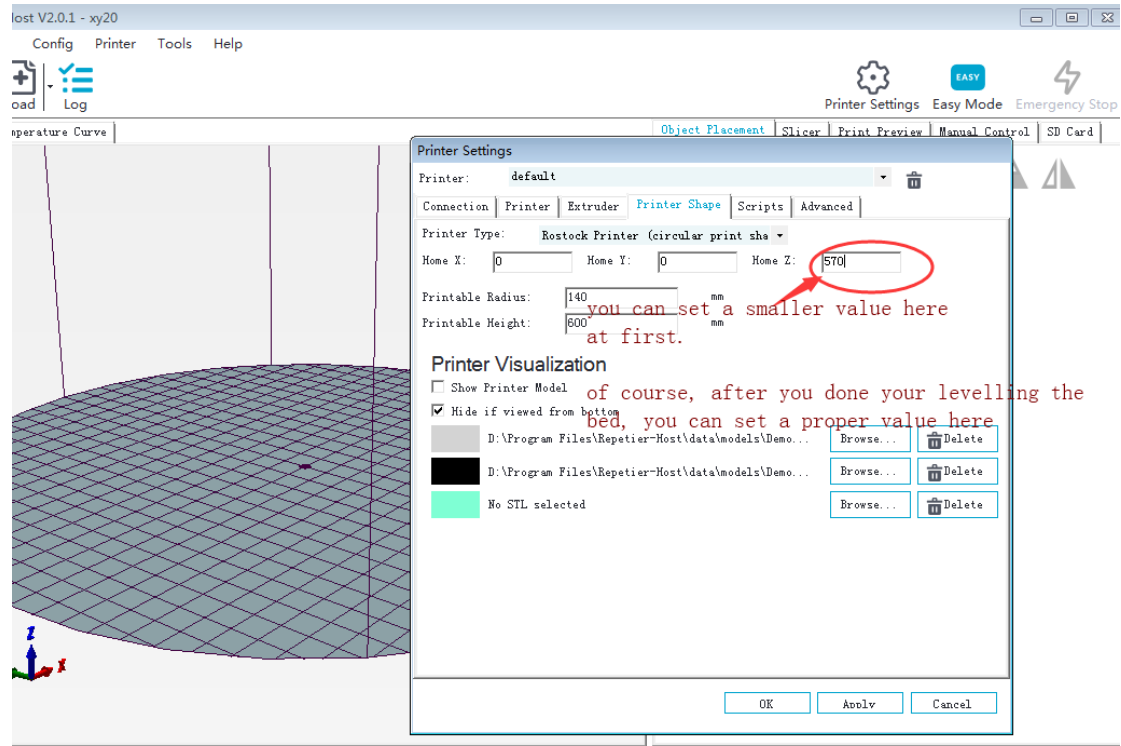


After you calibrate the printer.  
You can load a model to print.

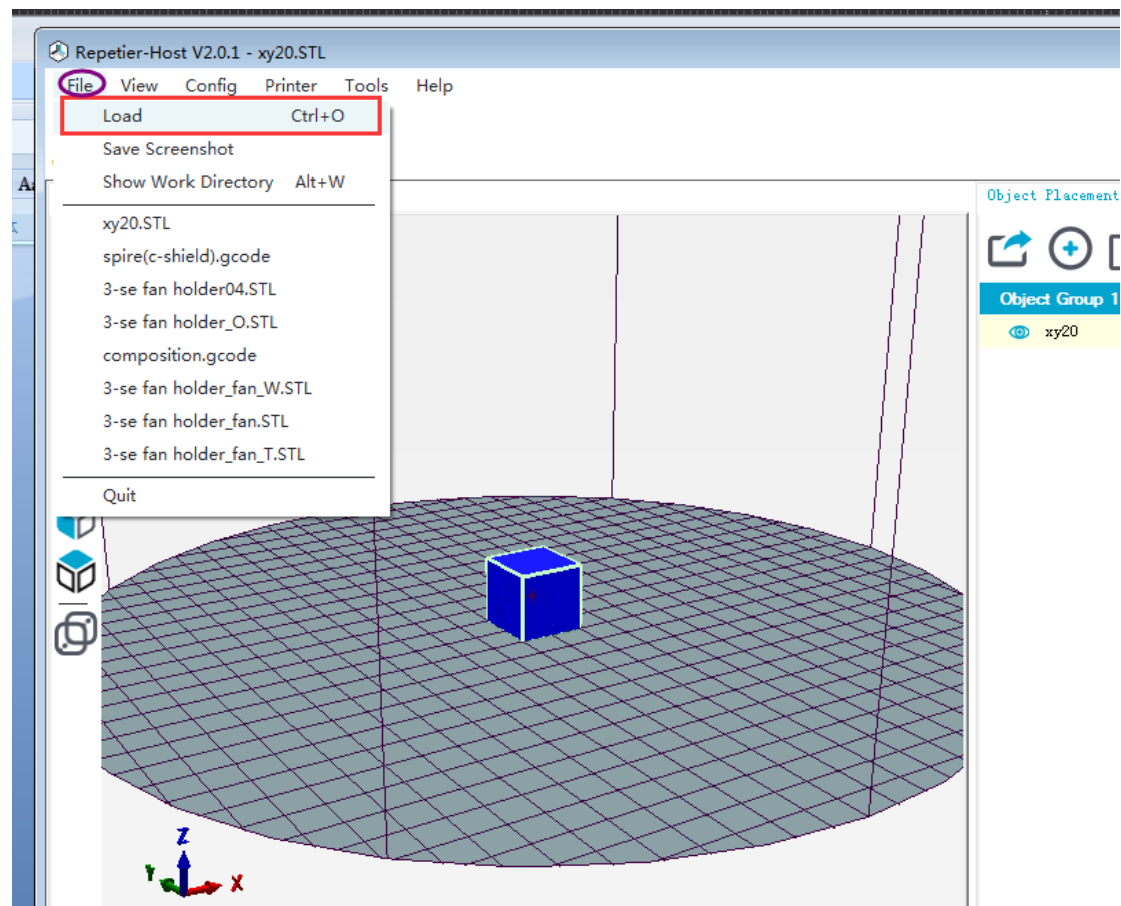


And click the Slicer Tag:

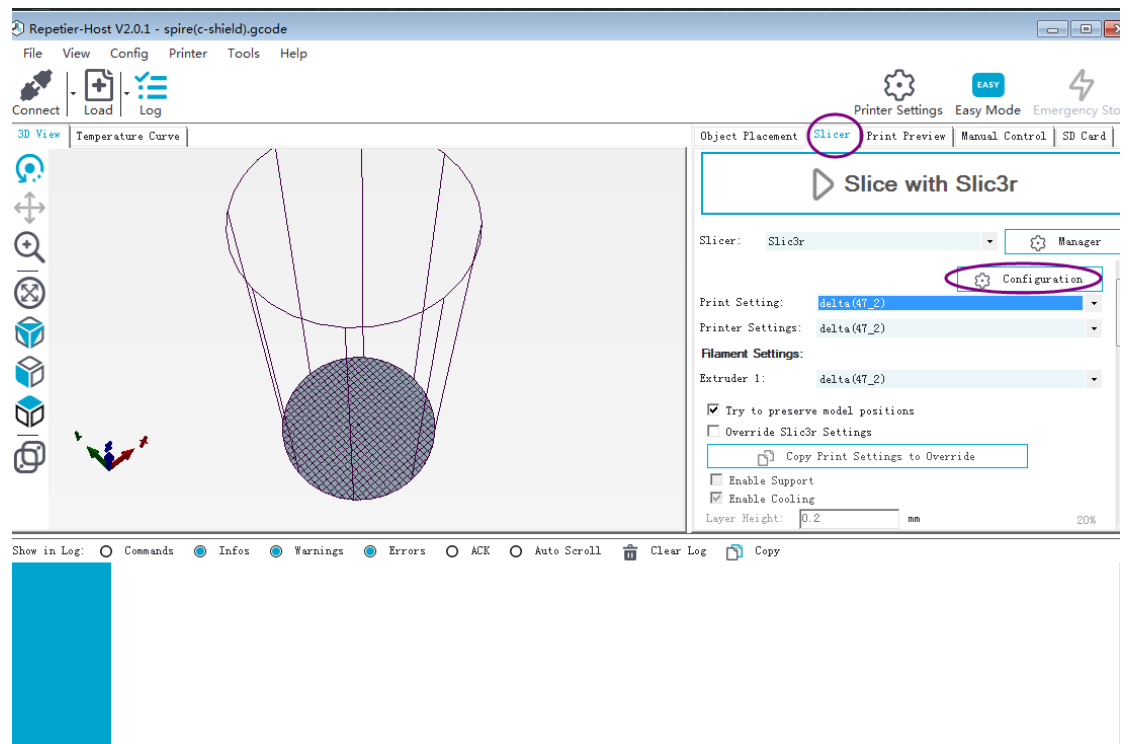

Click the configuration, just open the slic3r.

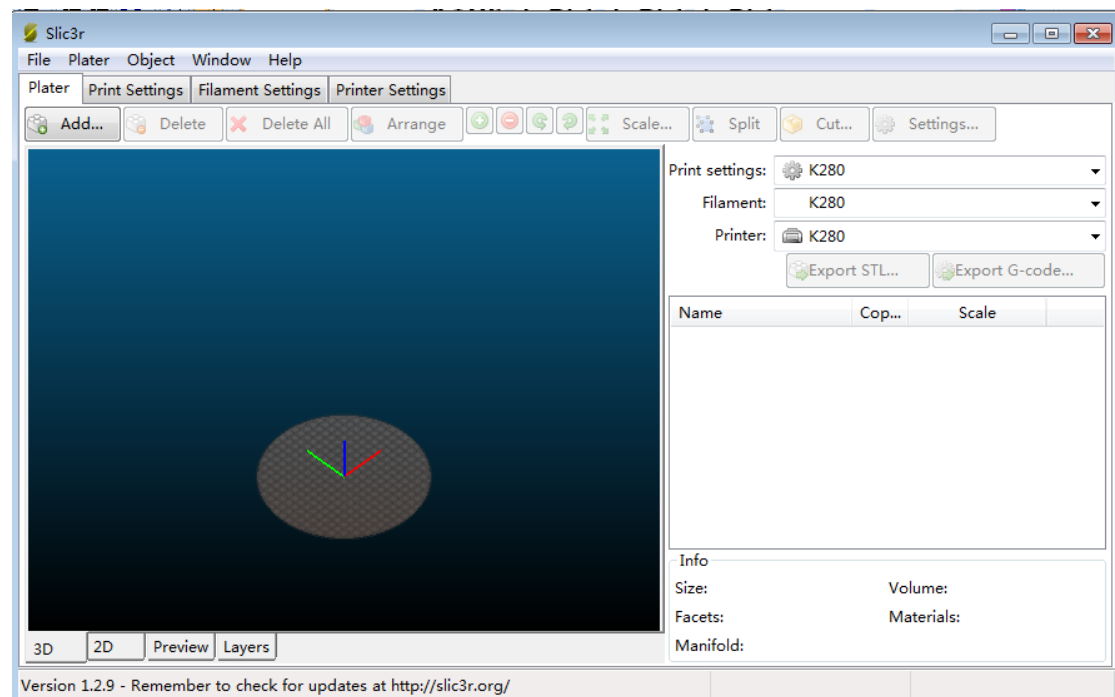


Load the config file:

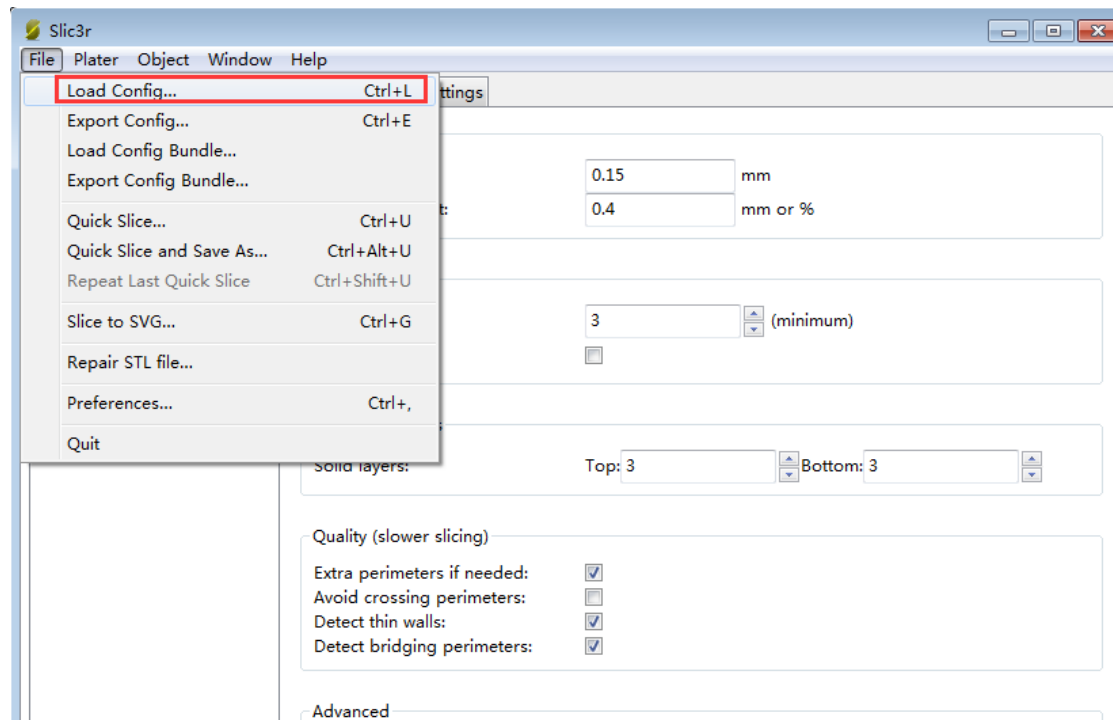

After you load a \*.ini file (config file)


Check the Print Settings Filament Settings Printer Settings

Save the \*.ini file. (after saved, character "ini" would be disappeared)

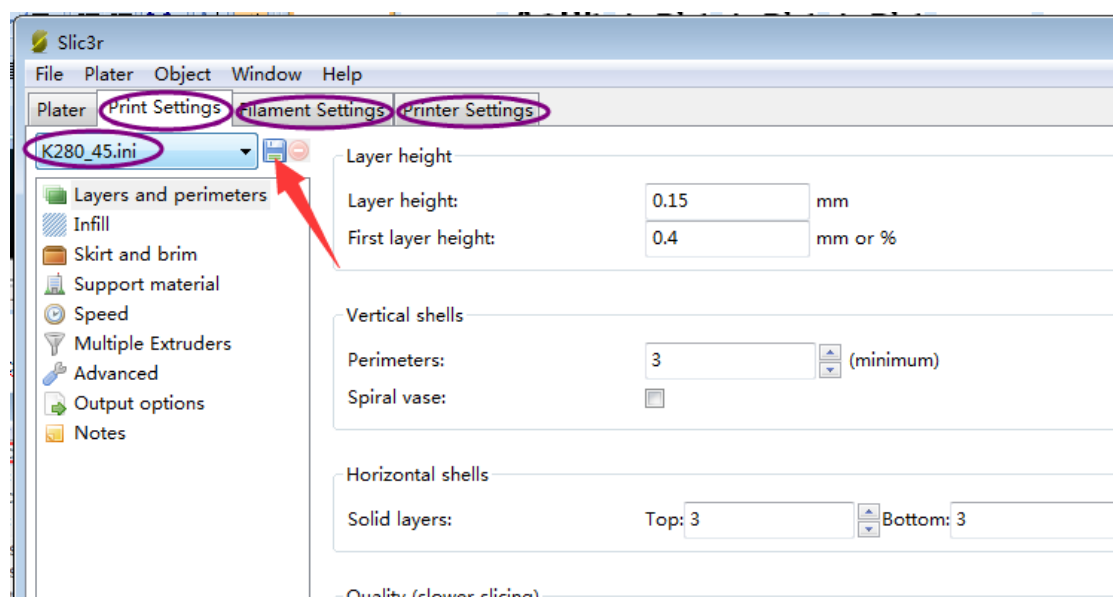


Of course , you can change these parameters as you want.


After that. You can see, in the Repetier host. The saved config file is ready

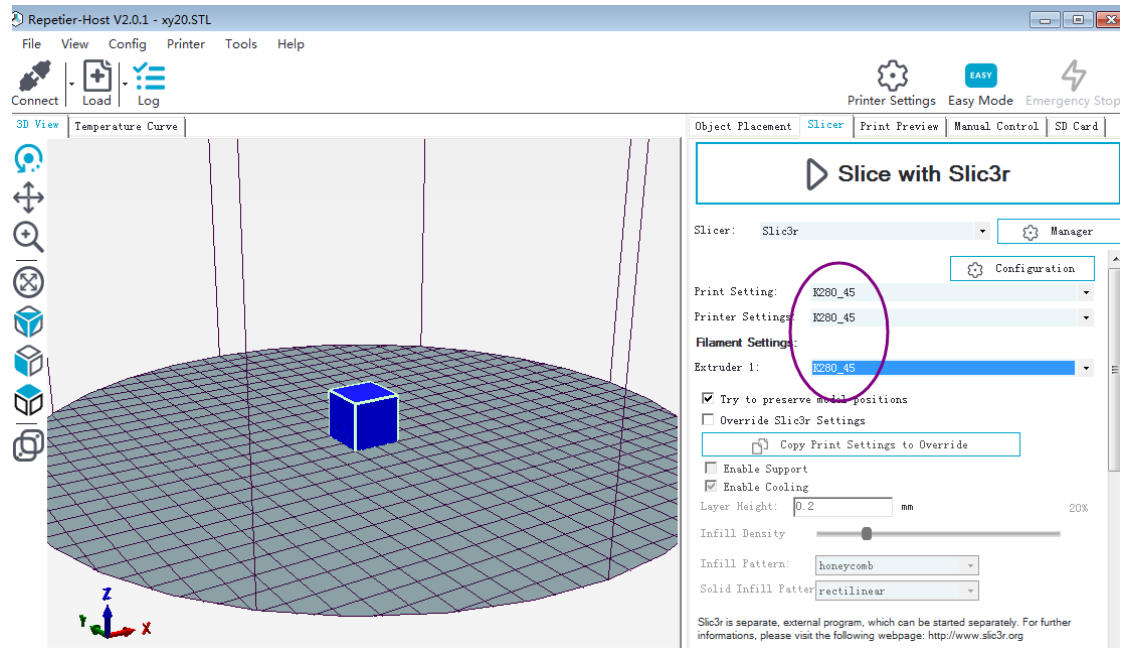

Then slice it

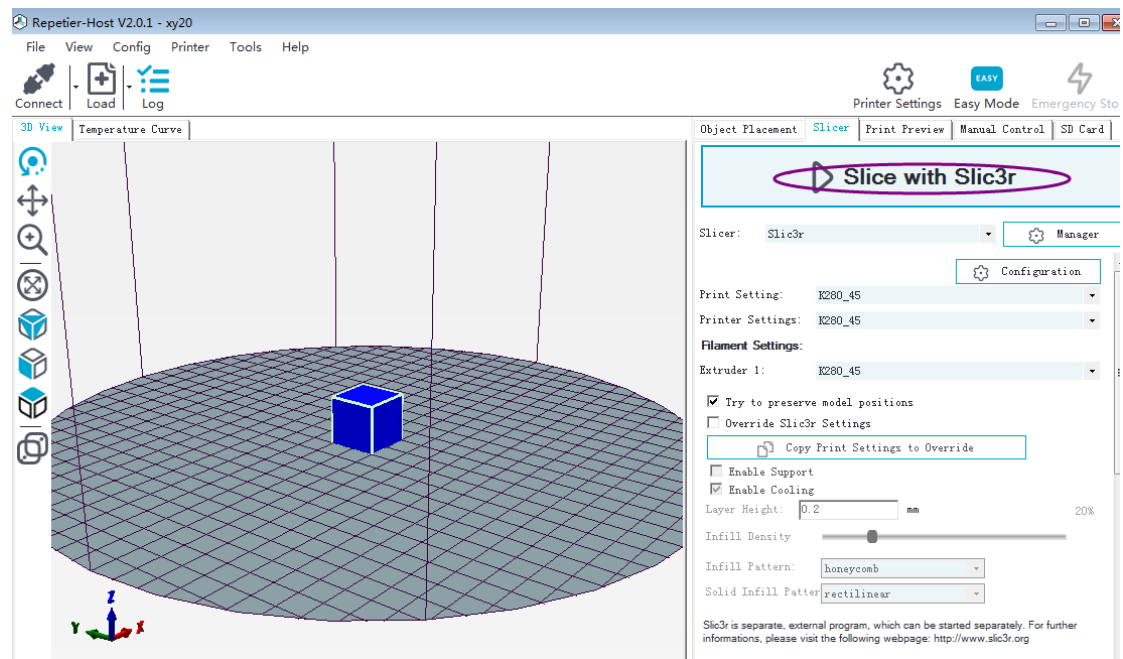

That it is :

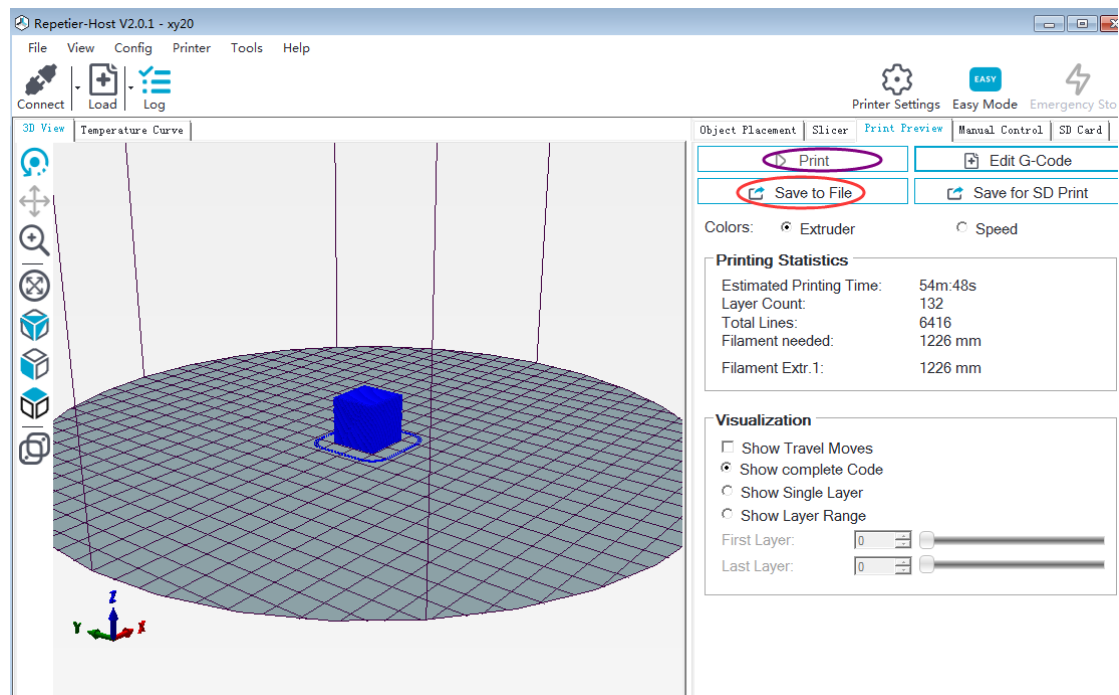

Now you can print it from computer (connect to the printer in advance)

Or

You can save the file to the SD card, and insert it to printer. And printer it from LCD screen.

Have a good time!