


DATA SHEET FOR SENSOR AND REPEATER/MASTER INSERTION

HVAC model

The sensor should be placed at a distance between 1 and 5 cm from the NCC cell, in a position central to the lamp

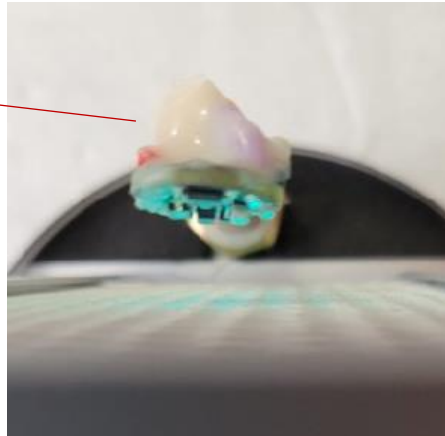

Green light
device ON



Red light
device OFF or light OFF

