



Models/Modelos/Modèles

106.5740*600

106.5741*600

Side by Side Refrigerator

Use & Care Guide


2315344

Refrigerador de dos puertas

Manual de uso y cuidado

Réfrigérateur côte à côte

Guide d'utilisation et d'entretien

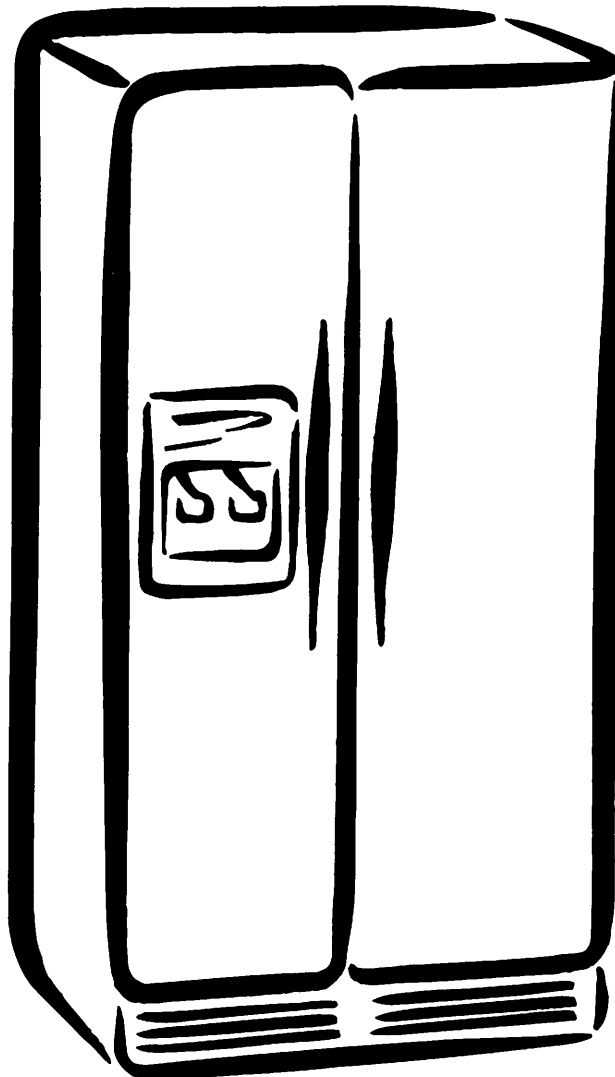

ENGLISH ESPAÑOL FRANÇAIS

KENMORE APPLIANCE WARRANTY

ONE YEAR LIMITED WARRANTY

When installed, operated and maintained according to all instructions supplied with the product, if this appliance fails due to a defect in material or workmanship within one year from the date of purchase, call 1-800-4-MY-HOME® to arrange for free repair.

If this appliance is used for other than private family purposes, this warranty applies for only 90 days from the date of purchase.

THIS WARRANTY COVERS ONLY DEFECTS IN MATERIAL AND WORKMANSHIP. SEARS WILL NOT PAY FOR:

1. Expendable items that can wear out from normal use, including but not limited to filters, belts, light bulbs, and bags.
2. A service technician to instruct the user in correct product installation, operation or maintenance.
3. A service technician to clean or maintain this product.
4. Damage to or failure of this product if it is not installed, operated or maintained according to all instructions supplied with the product.
5. Damage to or failure of this product resulting from accident, abuse, misuse or use for other than its intended purpose.
6. Damage to or failure of this product caused by the use of detergents, cleaners, chemicals or utensils other than those recommended in all instructions supplied with the product.
7. Damage to or failure of parts or systems resulting from unauthorized modifications made to this product.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

Customer's sole and exclusive remedy under this limited warranty shall be product repair as provided herein. Implied warranties, including warranties of merchantability or fitness for a particular purpose, are limited to one year or the shortest period allowed by law. Sears shall not be liable for incidental or consequential damages. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, or limitations on the duration of implied warranties of merchantability or fitness, so these exclusions or limitations may not apply to you.

This warranty applies only while this appliance is used in the United States and Canada.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co.
Dept. 817WA, Hoffman Estates, IL 60179
Sears Canada Inc.
Toronto, Ontario, Canada M5B 2B8

PRODUCT RECORD

In the space below, record your complete model number, serial number, and purchase date. You can find this information on the model and serial number label located on the product.

Have this information available to help you obtain assistance or service more quickly whenever you contact Sears concerning your appliance.

Model number _____

Serial number _____

Purchase date _____

Save these instructions and your sales receipt for future reference.

ENGLISH

INSTALLATION INSTRUCTIONS

Unpack the Refrigerator

⚠ WARNING

Excessive Weight Hazard

Use two or more people to move and install refrigerator.

Failure to do so can result in back or other injury.

Remove the Packaging

- If the ice storage bin is located on the door, remove the temporary shield from underneath the ice storage bin. See "Ice Maker and Storage Bin."
- Remove tape and glue residue from surfaces before turning on the refrigerator. Rub a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.
- Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your refrigerator. For more information see "Refrigerator Safety."

When Moving Your Refrigerator:

Your refrigerator is heavy. When moving the refrigerator for cleaning or service, be sure to protect the floor. Always pull the refrigerator straight out when moving it. Do not wiggle or "walk" the refrigerator when trying to move it, as floor damage could occur.

Clean Before Using

After you remove all of the packaging materials, clean the inside of your refrigerator before using it. See the cleaning instructions in "Refrigerator Care."

Important information to know about glass shelves and covers:

Do not clean glass shelves or covers with warm water when they are cold. Shelves and covers may break if exposed to sudden temperature changes or impact, such as bumping. For your protection, tempered glass is designed to shatter into many small, pebble-size pieces. This is normal. Glass shelves and covers are heavy. Use special care when removing them to avoid impact from dropping.

Location Requirements

⚠ WARNING




Explosion Hazard

Keep flammable materials and vapors, such as gasoline, away from refrigerator.

Failure to do so can result in death, explosion, or fire.

To ensure proper ventilation for your refrigerator, allow for ½" (1.25 cm) space on each side and at the top. When installing your refrigerator next to a fixed wall, leave 2" (5.08 cm) minimum on each side (depending on your model) to allow for the door to swing open. If your refrigerator has an ice maker, allow extra space at the back for the water line connections.

NOTE: It is recommended that you do not install the refrigerator near an oven, radiator, or other heat source. Do not install in a location where the temperature will fall below 55°F (13°C).

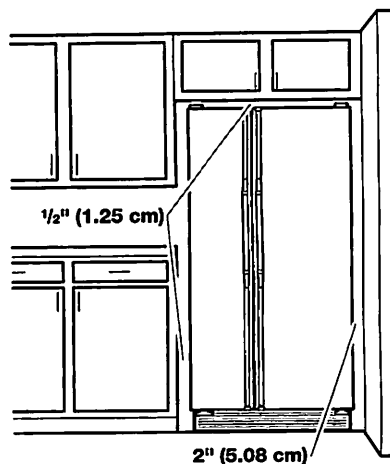

ENGLISH

Refrigerator Doors

TOOLS NEEDED: 1/4" hex-head socket wrench, 5/16" hex-head socket wrench and a flat-blade screwdriver.

IMPORTANT: Before you begin, turn the refrigerator control OFF. Unplug refrigerator or disconnect power. Remove food and any adjustable door or utility bins from doors.

NOTE: It may only be necessary to remove either the door handle or the doors to get your product through the doorway of your home. Measure the doorway to see whether you need to remove the refrigerator handles or the doors.

⚠ WARNING

Electrical Shock Hazard


Disconnect power before removing doors.

Reconnect both ground wires before operating.

Failure to do so can result in death or electrical shock.



4. Top Left Hinge

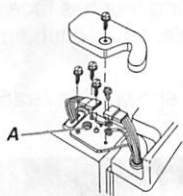


A. Do Not Remove Screw

5. Door Removal




6. Top Right Hinge

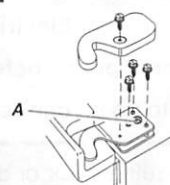

A. Do Not Remove Screw

3. Water Dispenser Tubing Connection

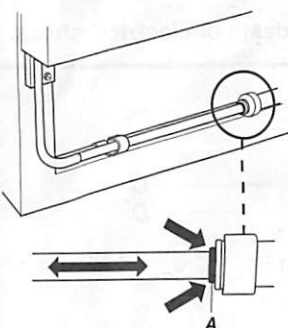


A. Red Outer Ring

1. Handle Removal (Optional)




7. Bottom Hinge

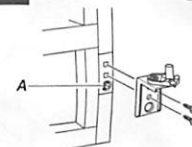


A. Do Not Remove Screw

2. Base Grille

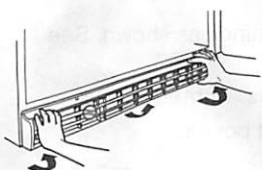


Door Closing and Alignment


8. Level

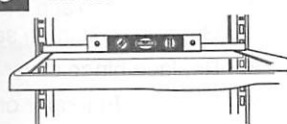

9. Door Alignment

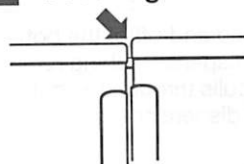

10. Front Leveling

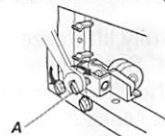

A. Leveling Screw

ENGLISH

DOOR REMOVAL

TOOLS NEEDED: 1/4 in. hex-head socket wrench, 5/16 in. hex-head socket wrench and flat-blade screwdriver.

IMPORTANT: Before you begin, turn the refrigerator control OFF. Unplug refrigerator from power. Remove food and any adjustable door or utility bins from doors.

NOTE: It may only be necessary to remove either the door handle or the doors to get the product through the doorway of your home. Measure the doorway to see if you need to remove the refrigerator handles or the doors.

⚠ WARNING

Electrical Shock Hazard

Disconnect power before removing doors.

Reconnect both ground wires before operating.

Failure to do so can result in death or electrical shock.



4 Top Left Hinge



Style 1




Style 2

1. Do Not Remove Screw

5 Door Removal




6 Top Right Hinge

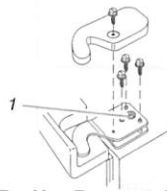


1. Do Not Remove Screw

3 Water Dispenser Tubing Connection

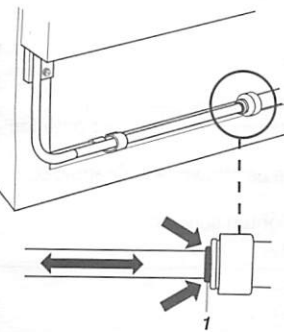

1. Red Outer Ring


2 Base Grille

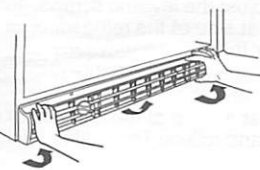


1 Style 1 Handle Removal (Optional)



1 Style 2 Handle Removal (Optional)

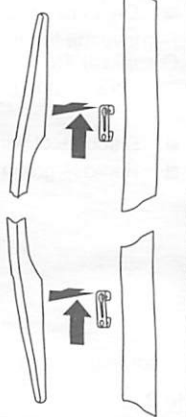


8 Door Alignment

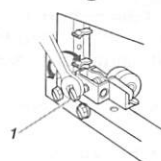

1. Leveling Screw

7 Bottom Hinge

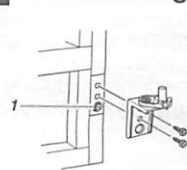

1. Do Not Remove Screw

Keep the clean water coming
six months from now

Order your next water filter from Sears:

Fill in date & affix to filter

Ask about refrigerator parts, accessories
or repair service, too.

Call 1-800-

**TO BE REMOVED
BY CUSTOMER
ONLY**

Things you should know before using your new Kenmore refrigerator

These HELPFUL HINTS address frequently asked questions. For more detailed information, see your Use & Care Guide.

Adjusting the Temperature Control


- After installation, allow 24 hours for the refrigerator to reach the recommended temperature setting.
- Under some conditions, you may need to set the control colder than the recommended setting. To lower (or raise) the temperature from the recommended setting, adjust the control only one setting at a time. Wait 24 hours between adjustments.
- Your new refrigerator may run up to 80% of the time – noticeably more than your old one. Yet, even though your new refrigerator runs more, it uses *less* energy, due to its energy-efficient design.

Internal Moisture

If the air in your kitchen is warm and humid, it may cause condensation on refrigerator shelves and pans, or ice droplets on freezer packages and walls.

Leveling and Door Alignment

Adjust the tilt if the refrigerator seems unsteady or you want the doors to close more easily. This will also adjust the alignment of the top of the doors. To ensure the best alignment, make adjustments after food has been stored in the doors. See the Use & Care Guide for detailed, easy-to-follow instructions.

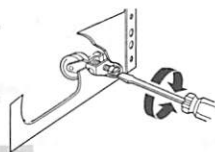


Ice Maker and Water Supply (on some models)

- Allow 24 hours for the freezer to get cold enough to begin making ice. The ice maker forms cubes about every 2 hours and may take up to 3 days to fill the storage bin.
- To make ice, a household water supply must be connected and turned on.
- Using a reverse osmosis water filtration system could lower the water pressure to your refrigerator. See your Use & Care Guide for more information.
- If no water supply is available, contact a certified plumber only. Appliance Service Technicians are not authorized to install water lines.
- Make certain the ice maker is on. For Style 1, place the wire shutoff arm in the down (ON) position. For Style 2, slide the control to the left (ON) position. If the water supply is not hooked up, turn the ice maker off. Otherwise, the ice maker will try to run without water, and a buzzing sound will result.
- As the ice maker is working, you may hear ice falling into the storage bin, followed by the sound of water flowing and possibly a mild “thump” in the water line.



Style 1

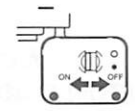

Style 2



Water Filter and Dispenser (on some models)


- To remove air from the system and avoid drips, see the “Prepare the Water System” section of your Use & Care Guide.
- Replace the water filter cartridge every 6 months or as indicated by the water filter status light (if applicable). To purchase replacement cartridges, visit your local Sears store or order online at www.sears.com.



Sears

SEARS

SEARS NATICK, MA 01403

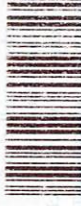

RETAIN FOR COMPARISON WITH MONTHLY STATEMENT OR FOR RETURN OR EXCHANGE.

Sears

SALESCHECK #
014030463408

DELIVER TO: CUSTOMER

PURCHASER: JEFF KORENSTEIN
CUSTOMER: JEFF KORENSTEIN
ADDRESS: 18 GROVE RD
CITY/STATE: WALTHAM, MA
ZIP CODE: 02451
PHONE: 781-894-3971 617-590-0528

Sears

DELIV. DATE: 02/02/07
DELIV INSTR: Haul Away Old Merchandise Call CUST 1
HR B-4 DEL AT 781-706-0020

Sears

TRAN# PG/STORE REG# ASSOC#
3408 10 01403 046 2238
RINGING ASSOC # 2238

MERCHANDISE ORDERED
CENTRAL DELIVERY

46 57402 KM WHT SXS SAL 999.881
ORDERED

SETUP OR DELUXE

REF-REFUNDABLE DELIVERY FEE 60.00
HAUL AWAY FEE 10.00
SUBTOTAL 1069.86
TAX 05.000% 49.99

Sears

CARD TYPE: VISA
ACCT #: W4487/0
AUTH CODE: 09135G/E
01/27/07 VISA TOTAL 1119.87

RC: 0757-3470-3676-7196

THE FOLLOWING ITEM(S) MAY BE SUBJECT
TO A CANCELLATION/RESTOCKING FEE
IF RETURNED:

46 57402 KM WHT SXS

Sears

CARDHOLDER ACKNOWLEDGES RECEIPT
OF GOODS AND/OR SERVICES IN THE

AMOUNT OF
\$1119.87
WITH AMOUNTS AS SHOWN CHARGED TO
EACH CREDIT CARD IDENTIFIED HEREON,
AND AGREES TO BE BOUND BY THE TERMS
SET FORTH IN THE CARDHOLDER'S
AGREEMENT(S) WITH THE ISSUER(S) OF
THOSE CREDIT CARDS.

Sears

CALL FOR INFORMATION:

DELIVERY (800)732-7747
PARTS (800)469-4663
INSTALLATION (800)469-4663
SERVICE (800)469-4663

Sears

SATISFACTION GUARANTEED
OR YOUR MONEY BACK

A RECEIPT DATED WITHIN 90 DAYS
IS REQUIRED FOR A RETURN OR EXCHANGE
WHICH WOULD BE 04/27/07. OTHER RULES
APPLY. SEE BACK OF RECEIPT FOR DETAILS.
RETURNED MERCHANDISE MUST INCLUDE ALL
COMPONENT PARTS. REFUND WILL BE ISSUED
IN THE ORIGINAL TENDER.

Sears

SHOP ANYTIME ON SEARS.COM