


Owner's Manual and Installation Instructions



27-Inch Wide ELECTRIC DRYERS

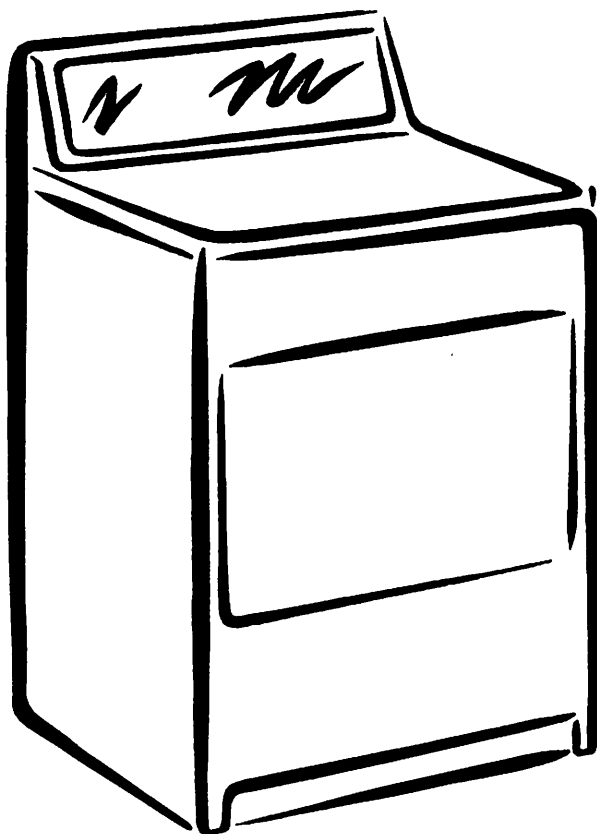

IMPORTANT:

Read and follow all safety
and operating instructions
before first use of this product.

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.
www.sears.com

TABLE OF CONTENTS

BEFORE USING YOUR NEW DRYER	2
KENMORE ELITE™ ELECTRIC DRYER WARRANTY	3
DRYER SAFETY	4
INSTALLATION INSTRUCTIONS	6
OPERATING YOUR DRYER	30
LAUNDRY TIPS	37
CARING FOR YOUR DRYER	39
TROUBLESHOOTING	43
SEARS MAINTENANCE AGREEMENT	45

BEFORE USING YOUR NEW DRYER

Please read this manual. It will help you install and operate your new Kenmore ELITE™ dryer in the most economical way.


If you need more information about the care and operation of Kenmore ELITE™ appliances call your nearest Sears store. You will need the complete model and serial numbers when requesting information. Your dryer's model and serial numbers are located on the Model and Serial Number Plate.

Use the space below to record the model number and serial number of your new Kenmore ELITE™ dryer.

Model No. _____

Serial No. _____

Date of Purchase _____

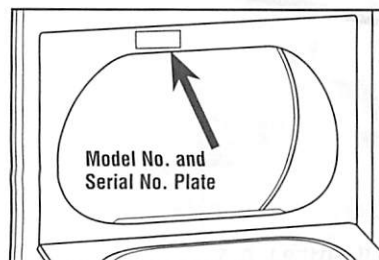

Keep this book and your Sears Salescheck (receipt) in a safe place for future reference.

KENMORE ELITE™ ELECTRIC DRYER WARRANTY

Full One Year Warranty on Mechanical and Electrical Parts

For one year from the date of purchase, if this dryer is installed and operated according to the instructions in this manual, Sears will repair or replace any of its mechanical or electrical parts if they are defective in material or workmanship.

NOTE: Exhausting your dryer with a plastic vent may void this warranty. Pages 24-28 of this manual describe the complete exhaust requirements for this dryer.

Warranty Restriction

If the dryer is subjected to other than private family use, all warranty coverage is effective for only 90 days.

Warranty Service

Warranty service is available by contacting your nearest Sears Service Center in the United States.

This warranty applies only while this dryer is in use in the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**Sears, Roebuck and Co., Dept. 817WA,
Hoffman Estates, IL 60179.**

For Sears Warranty information or to contact a Sears Service Center, call 1-800-4-MY-HOMESM (1-800-469-4663).

ENGLISH

DRYER SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol. This symbol alerts you to hazards that can kill or hurt you and others. All safety messages will be preceded by the safety alert symbol and the word "DANGER" or "WARNING." These words mean:



DANGER

You will be killed or seriously injured if you don't follow instructions.



WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

For in-home major brand repair service:

Call 24 hours a day, 7 days a week

1-800-4-MY-HOMESM (1-800-469-4663)

Para pedir servicio de reparación a domicilio — 1-800-676-5811

In Canada for all your service and parts needs call

Au Canada pour tout le service ou les pièces — **1-800-665-4455**

For the repair or replacement parts you need:

Call 6 am - 11 pm CST, 7 days a week

PartsDirectSM

1-800-366-PART (1-800-366-7278)

Para ordenar piezas con entrega a domicilio — 1-800-659-7084

For the location of a Sears Parts and Repair Center in your area:

Call 24 hours a day, 7 days a week

1-800-488-1222

**For information on purchasing a Sears Maintenance Agreement
or to Inquire about an existing Agreement:**

Call 9 am - 5 pm, Monday - Saturday

1-800-827-6655



BULKHEAD PARTS

For Model: 110.60942990
(White C.C.)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3399508	Shaft, R.H. Thread	20	690997	Ring, Tri	42	3976615	Thermistor
2	90767	Screw, 8-18 x 3/8	21	3396801	Roller, Support	43	487909	Screw, 8-18 x 1/2
3	3390647	Screw, 8-18 x 1/2	23	3394985	Outlet Housing	44	697363	Housing, Blower
4	3394984	Door, Lint Screen			Assembly	45	3390531	Lint Duct Assembly
5	697354	Air Duct Assembly	24	3394986	Spring, Lint	46	3392537	Heater Box
6	697813	Seal, Outlet Housing			Screen Door	47	3398671	Thermal Cut-Off
7	697814	Seal, Drum Front	25	697282	Complete Drum Assembly	48	3390291	Thermostat 250°F (121°C)
8	3359452	Nut, 3/8 x 16(R.H.)	26	97787	Screw, 11-16 x 3/4	49	697700	Bracket, Heater
9	3977358	Drum Hole Plug	27	697694	Seal, Drum	50	697699	Shield, Heat
10	3395196	Lens, Light	29	3395536	Clip, Exhaust Pipe	51	3387230	Screw, 10-16 x 1
14	3387747	Heater Element	32	3402715	Exhaust Pipe Assembly (Includes Illus. No. 29)	52	697771	Cover, Blower (Includes Illus. No. 62)
15	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)	33	3406125	Lamp, Incandescent	53	697693	Baffle, Drum
16	3387709	Nut, 3/8-16 (L.H.)	34	3387223	Electrode, Sensor	54	697563	Bulkhead, Front
17	3387809	Bulkhead, Rear	35	3406907	Reflector	58	8299979	Grill, Outlet
18	3387459	Washer, Support	36	3406831	Socket, Light	59	3390719	Thermal Fuse
19	3399509	Shaft, L.H. Thread	37	697772	Wheel, Blower	60	697770	Seal, Cover Plate
			40	3392258	Wire, Ground (Sensor)	62	697769	Seal, Lint Duct
						64	3390721	Lint, Screen

TOP AND CONSOLE PARTS

For Model: 110.60942990
(White C.C.)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	LT3398970	Literature Parts	2	3388665	Panel, Rear
	LT3397696	Diagram	3	3976585	Console
	LT3405602	Sheet, Tech	4	688805	Clip, Control
	LT3394896	Guide, Use & Care	5	3395382	Knob
	LT3394896	Label, Operating	5	3395382	Switch
	LT3397498	Instructions	6	3976617	Push-To-Start
	LT3397498	List, Repair Parts	7	3395683	Connector
			7	3395683	Motor
			8	3949274	Cap, End (R.H.)
			9	8271316	Bracket, Control
			10	3390646	Screw, 8-18 x 5/16
			11	3347243	Connector,
			12	388326	6-Circuit
			13	3398893	Screw, Console
			14	3951009	Jumper, Wire
			16	3397269	(Includes Item 18)
			17	3406729	Connector, Timer
			18	3951013	Harness, Console
			19	3976591	Trim, Endcap (L.H.)
					(Includes Item 14)
					Harness, Electric
			20	3402594	Timer Knob & Clip
			21	3402566	Assembly
			22	387402	Push-To-Start Knob
			23	357213	Hinge, Assembly
			24	8086034	Nut, Push-In (2)
			25	3400859	Screw, Grounding
			26	3949280	Cap, End (L.H.)
			27	3399643	Switch
			28	3391018	Tie, Cable
			30	3402572	(Push-Mount)
			31	3977564	Knob, Control
			32	3394427	Panel, Control
			33	3405151	Clip, Harness
			36	3405281	Switch,
			37	3390647	Temperature
			38	3388228	Relay
			43	351296	Screw, 8-18 x 1/2
					Terminal
					6-20 X 3/8

Following May Be Purchased
DO-IT-YOURSELF
REPAIR MANUALS
LT787207 Manual, Do-It-Yourself Repair (Dryer)

CABINET PARTS

For Model: 110.60942990
(White C.C.)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3393904	Cover, Terminal Block	21	3387560	Hinge, Door (R.H.)	39	3388674	Idler Bracket
2	3390814	Screw, 8-18 x 3/8	22	3387559	Hinge, Door (L.H.)	40	3357011	Screw, 10-16 x 1/2
3	697776	Screw, 10-32 x 5/8	23	3387565	Spring, Door (2)	41	3392266	Switch, Door
4	3397659	Block, Terminal	23	3391408	Lever, Snap Switch	42	3406908	Rack, Dry (Bottom)
5	3394881	Switch, Broken Belt	24	3394331	Cover-Plate	43	3406911	Rack, Dry Assembly
6	3398948	Wire, Jumper (Broken Belt Switch)	25	3395532	Exhaust Pipe & Bracket	44	3387242	Seal, Front Panel
7	3402264	Cabinet	26	3393657	Restrainer, Belt	46	3388229	Retainer
8	3392100	Foot, Dryer	27	3395654	Motor, Assembly 60 HZ.	47	8066045	Door, Rear
	279810	Foot - Optional (Extended Length Package Of 2) (Not Included)	28	49026	4" - 90° Elbow	48	694091	Screw, 8-18 x 3/8
9	660658	Clamp, Motor (2)	29	3389729	Pulley 60 HZ.	49	697221	Door, Front
10	3387374	Spring, Idler	30	661570	Belt, Drive	50	691581	Lever, Switch
11	3389420	Retainer, Idler	31	3388600	Clip, Lint, Duct	51	697227	Upper Front Panel
12	697750	Plug, Multivent	32	3387118	Bracket, Motor	52	696144	Strike, Door
13	3388672	Pulley Assembly	33	279393	Terminal Block Screw Kit (For Terminal Block)	54	3393008	Screw, 10-16 x 1/2
14	279318	Terminal, Brass & Tinned (3) (Includes Illus. 33)	34	98129	Screw, 6-20 x 1 3/8	57	3390736	Seal, Door
15	3390646	Screw, 8-18 x 5/16	35	3395534	Exhaust Pipe (Short)	58	690081	Catch, Door Assembly
16	3394081	Wire, Belt Switch	36	3406910	Dry Rack	60	348721	Handle, Door
17	693152	Bumper	37	3395535	Exhaust Pipe (Long)	61	697215	Toe, Panel
18	233520	Washer, Thrust	38	3390663	Screw, 10-16 x 1/2	Optional Parts Not Included		
19	297092	Clip (2)				Dryer Exhaust Kit (For Side & Bottom Venting)		
20	690997	Tri Ring				62	279818	White

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

PAINT, TOUCH-UP (1/2oz.)

72017 White
72107 Almond

PAINT, PRESSURIZED SPRAY (13 oz.)


350930 White
350956 Almond
350938 Primer, Gray

PAINT, BULK (1 qt.)

799344 White (Uncut)
978883 Almond (Uncut)

CABINET PARTS


For Model: 110.60942990
(White C.C.)

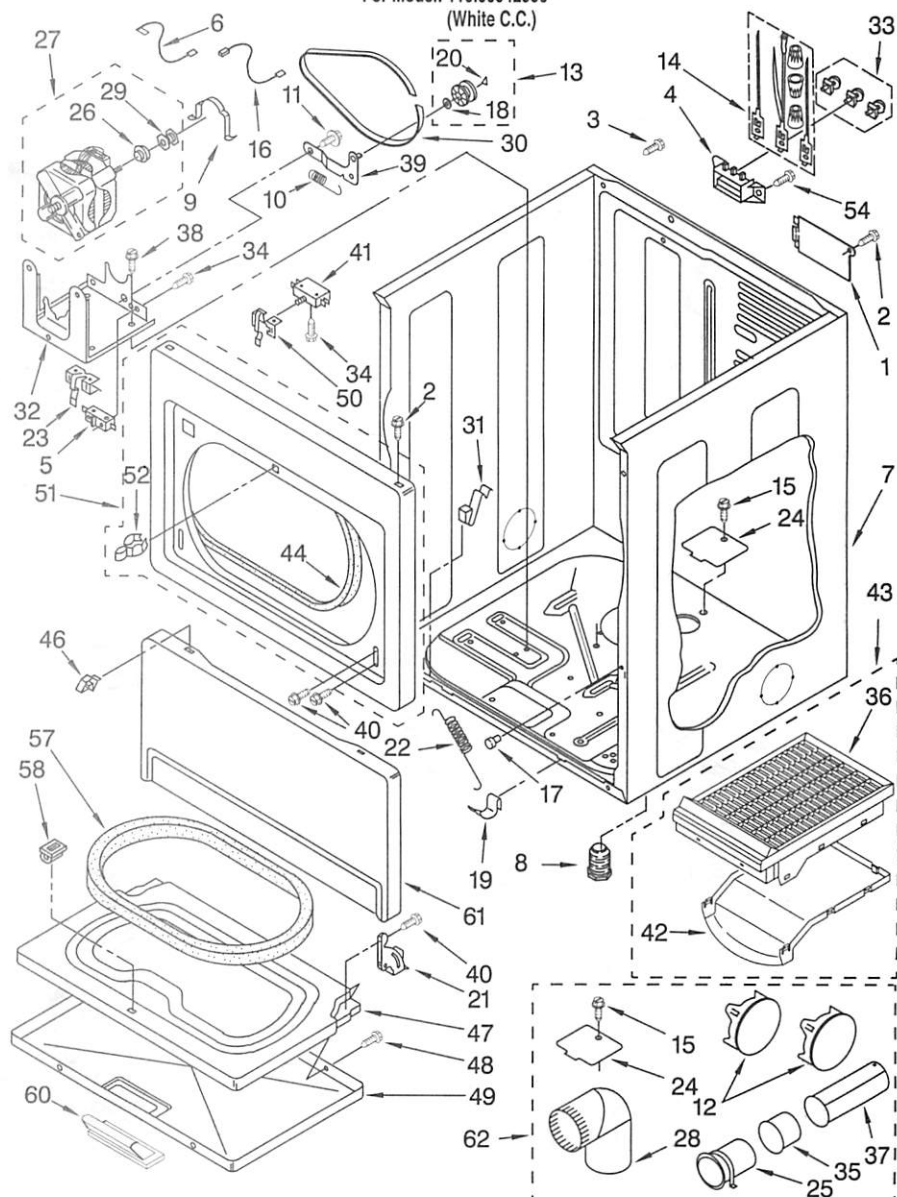

3977498


TOP AND CONSOLE PARTS

For Model: 110.60942990
(White C.C.)

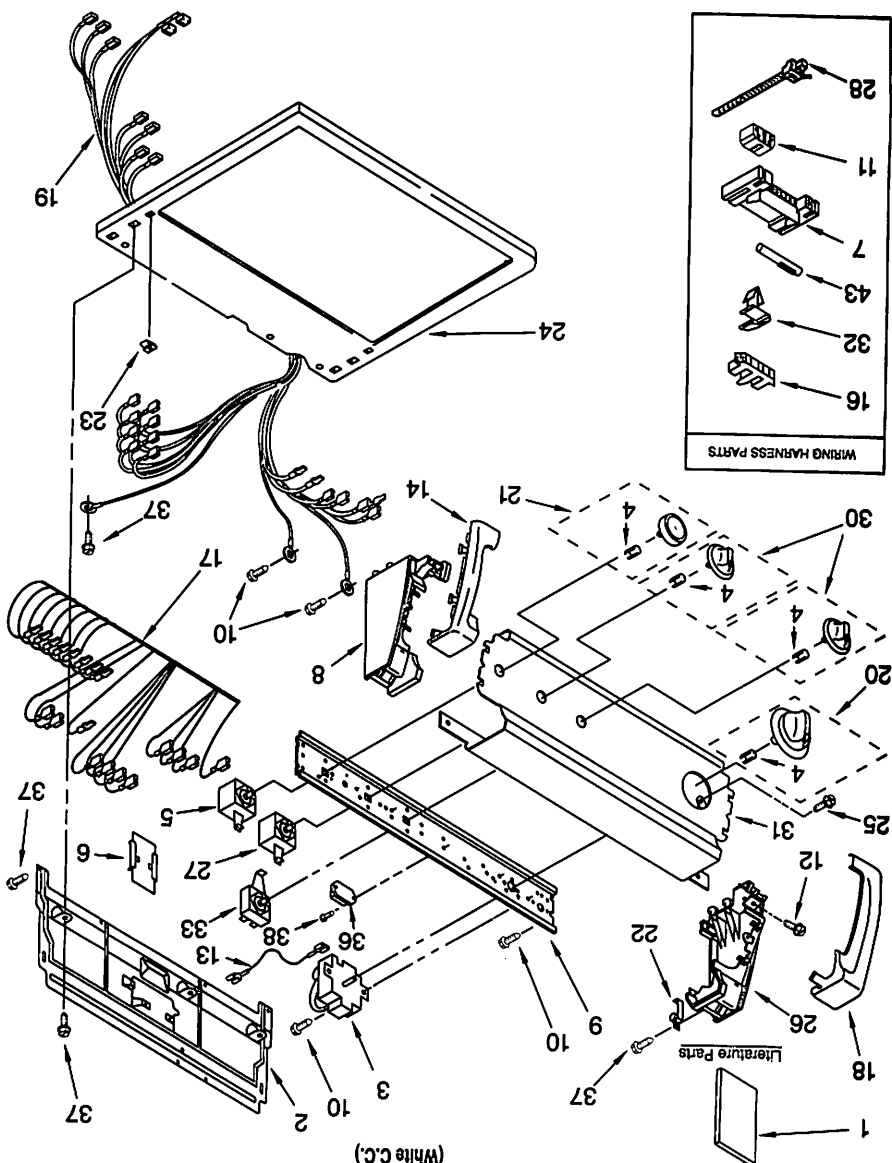

BULKHEAD PARTS

For Model: 110.60942990
(White C.C.)

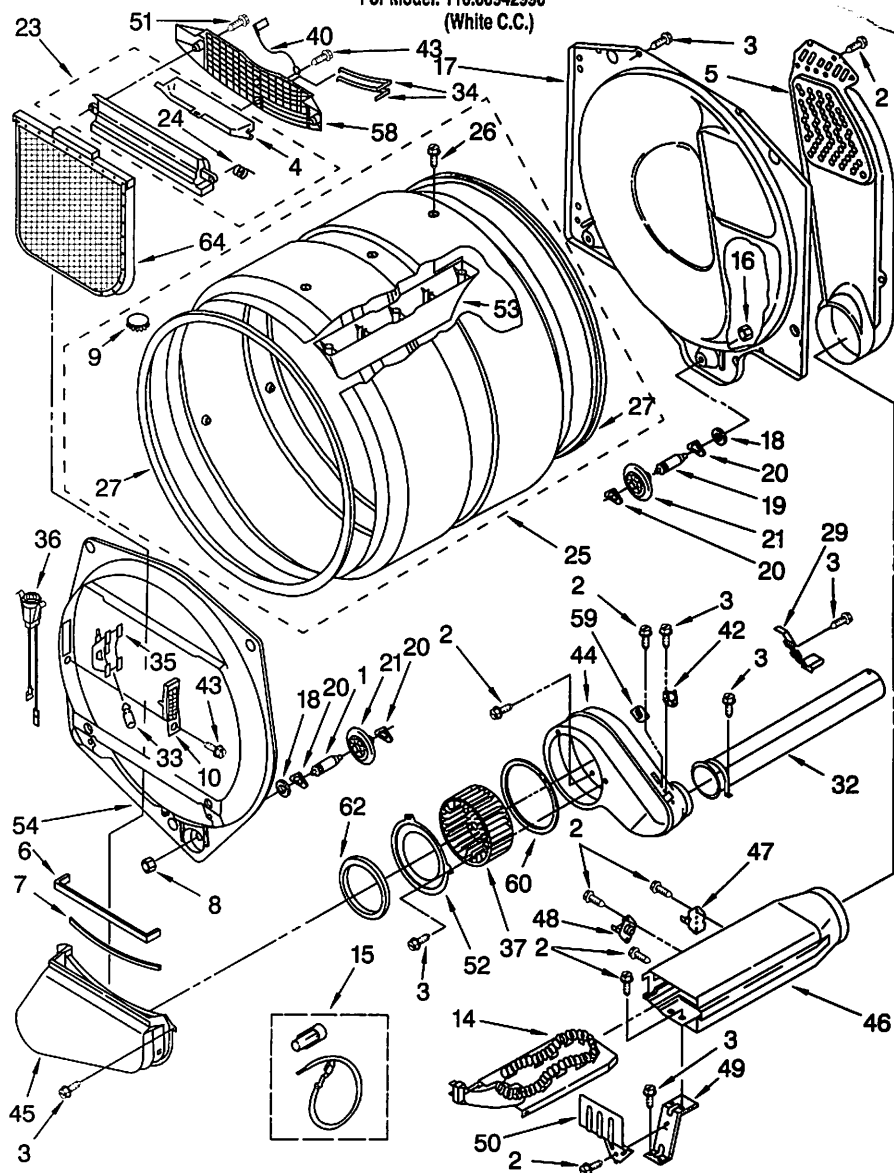

SEARS

REPAIR PARTS LIST

Model No.
110.60942990
(White Color Coordinated)

To Call
Toll Free
For Parts:
1-800-366-PART
(1-800-366-7278)

For Service:
1-800-4-MY-HOME
(1-800-469-4663)



ELECTRIC DRYER

The model number of your electric dryer is found on the serial plate located in the door well.

All repair parts listed are available for immediate purchase or special order when you visit your nearest Sears Service Center, or the Service Department at most Sears stores. To order parts by phone, call the toll free parts number listed to the left.

When requesting service or ordering parts, always provide the following information:

- | | |
|----------------|--------------------|
| ◆ Product Type | ◆ Part Number |
| ◆ Model Number | ◆ Part Description |

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.
