




BLACK & DECKER®

*Advanced
System*

Adjustable Steam

Irons

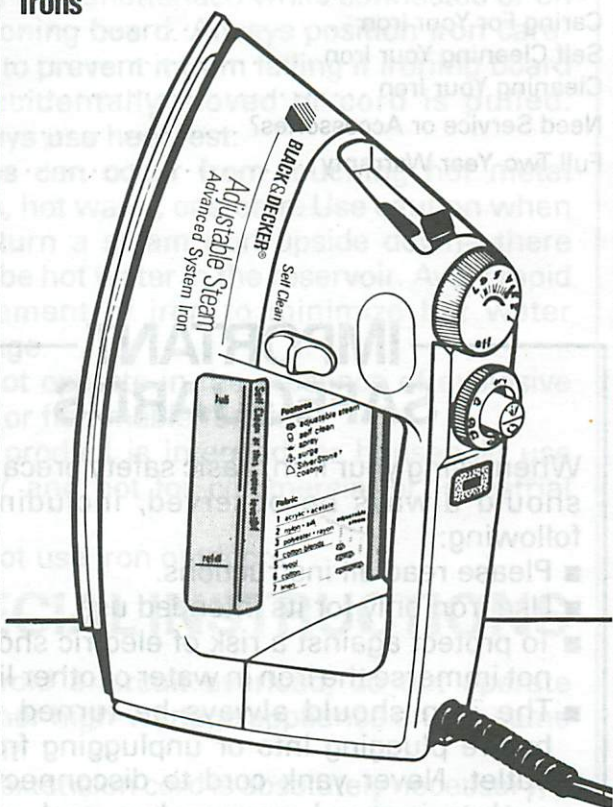

Models F540S, F520, F512, F505S
Listed by Underwriters Laboratories Inc.

SAVE THIS USE & CARE BOOK

Need Service Or Accessories?

Service, if necessary, must be performed by a Black & Decker (U.S.) Inc. Household Appliance Company-Owned or Authorized Service Center. The Service Center nearest you can be found in the yellow pages of your phone book under "Electric Appliances—Small-Repairing."

Before shipping or mailing your iron, empty the iron and place it on a wire rack over a heat and moisture-resistant surface. Press the Spray Button several times to empty the spray system. Plug in the cord, turn the Steam/Dry Dial to the Heavy setting and heat the iron at the maximum temperature setting for 20 minutes. This dries the interior of the iron. Turn the Steam/Dry Dial to DRY and be sure the iron is completely cool before packing.

Pack it carefully into a sturdy carton with enough packing material to prevent damage. The original carton is not suitable for mailing. Including a note describing the problems to our Service Center and be sure to give your return address. We also suggest that you insure the package for your protection.

Full Two-Year Warranty

Black & Decker (U.S.) Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period after the original date of consumer purchase or receipt as a gift. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge, including free return transportation, provided it is delivered prepaid to any Black & Decker (U.S.) Inc. Household Appliance Company-Owned or Authorized Service Center.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.


Answers to any questions regarding warranty service/locations may be obtained by writing:

Consumer Assistance and Information
Black & Decker (U.S.) Inc.
6 Armstrong Road
Shelton, CT 06484



BLACK & DECKER®

Light 'n Easy® Irons

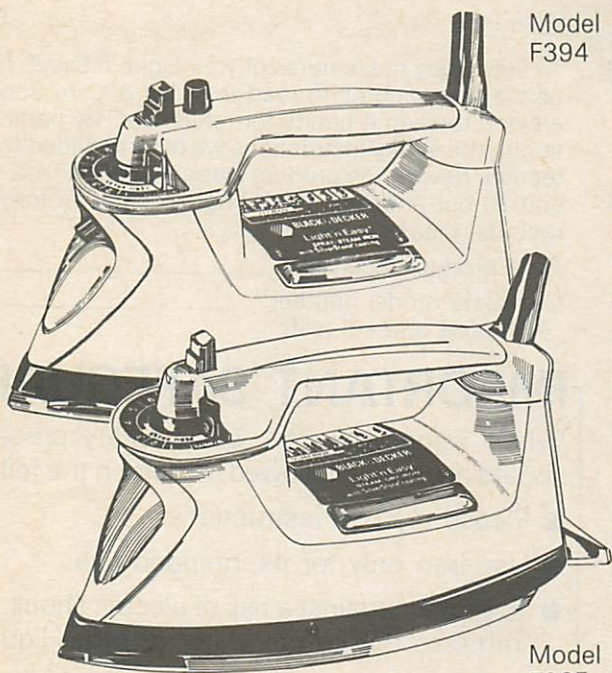

Model
F394

Model
F365

**MODELS F362, F363, F364,
F365, F383, F392, F393, F394**

1100 Watts, 120 Volts, AC Only

Listed By Underwriters Laboratories, Inc.

SAVE THIS USE & CARE BOOK

TABLE OF CONTENTS

Important Safeguards	2
Before First Use	5
To Fill and Refill Iron	5
Steam Ironing	6
Spray Feature	6
Dry Ironing	7
Ironing Tips	7
Caring for Your Iron	8
Cleaning Your Iron	9
Fabric Ironing Chart	10
Need Service or Accessories?	11
Warranty	Back cover

To fully enjoy the features of your Light 'n Easy® Iron, please take a few minutes to read this Use & Care Book and find a place to keep it handy for reference. Pay particular attention to the safety instructions we have provided for your protection. Review the product warranty and service statements and fill out and mail the owner registration form. For your records, please record:

Date product received: _____

Complete model number: _____
(located on heel rest)

IMPORTANT SAFEGUARDS

When using your iron, basic safety precautions should always be followed, including the following:

- Please read all instructions.
- Use iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquid.
- The iron should always be turned to Off before plugging into or unplugging from an outlet. Never yank cord to disconnect from outlet; instead grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with or emptying of water and when not in use. Be careful to avoid spilling water over iron when filling.