

Deluxe Height Adjustable Computer Table **Assembly Instructions**

CTL 30", 36", 48", 60" & 72"



How can we improve our assembly instructions?
Your comments and suggestions are important to us.
Please e-mail us at: support@versatables.com.

Deluxe Height Adjustable Computer Table

50mm Furniture Bolt



Qty:4

20mm Furniture Bolt



Qty:16

4mm Allen Wrench



Qty:1

Levelers



Qty:4

Caster & Caster with Lock



OPTIONAL

Qty:2

Side Frame (L& R)



Qty:2

Cross Support



30", 36", 48",
60", & 72" Wide
Qty:2

Zip Tie & Curly Tie



Qty:5

Kick Panel



Qty:1

Main Platform



24" & 30" Deep
30", 36", 48", 60", & 72" Wide

Cable Management Tray



Qty:1

**NOTE: DO NOT TIGHTEN SCREWS/BOLTS ALL THE WAY
UNTIL THE PRODUCT IS COMPLETELY ASSEMBLED**

Step 1


Insert Levelers

Insert Levelers into Side Frames.

Leveling Glide



Qty:4

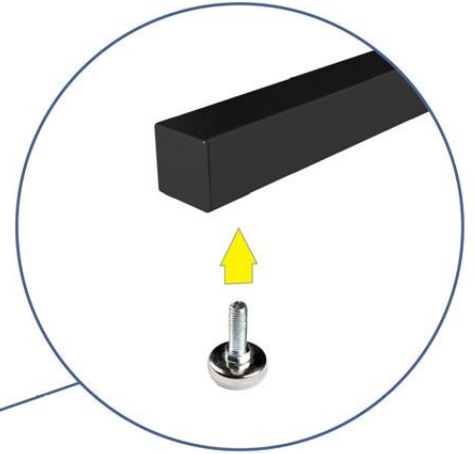

Step 2


Attach Cable Management Tray

Attach Cable Management Tray using (2) 20mm Furniture Bolts on each side.
Insert Bolts half way through the Side Frames then drop the Cable Management Tray.

20mm
Furniture Bolt



Qty:4

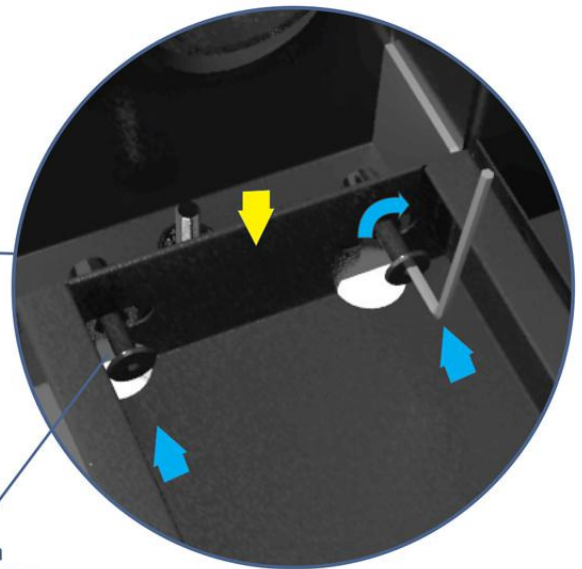

20mm
Furniture Bolt

Step 3


Attach Kick Panel

Attach Kick Panel to Side Frames using (4) 20mm Furniture Bolts.

20mm Furniture Bolt



Qty:4

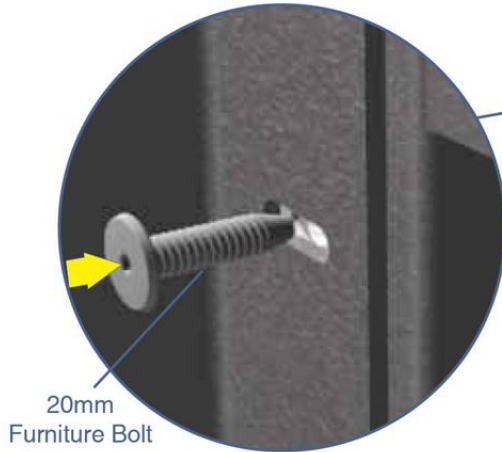

** Without modesty panel option, proceed to step 5*

Step 4


Attach Cross Support

Attach Cross Support and Modesty Panel to Frames using (2) 20mm Furniture Bolts on each side.


20mm Furniture Bolt



Qty:8

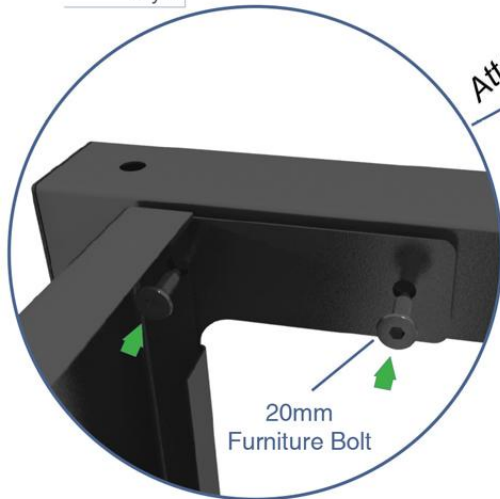

Attach Modesty Panel (OPTIONAL)

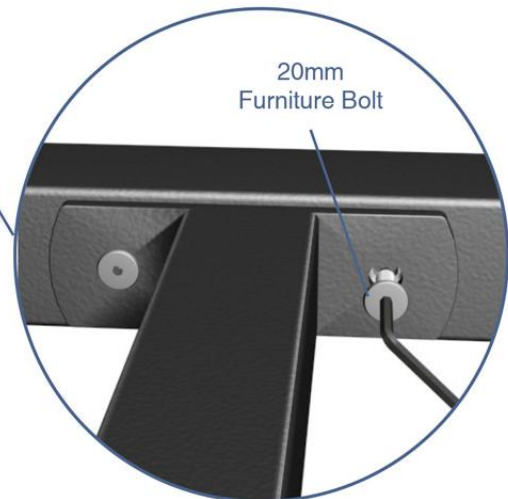

NOTE: The Modesty Panel is an additional accessory and is acquired separately from the table. When the Modesty Panel is attached, it replaces the rear Cross Beam. LCD Monitor arms will attach directly to the Modesty Panel.

Step 5


Attach Cross Support

Attach Cross Supports to Frames using (2) 20mm Furniture Bolts on each side.


20mm
Furniture Bolt



Qty:8

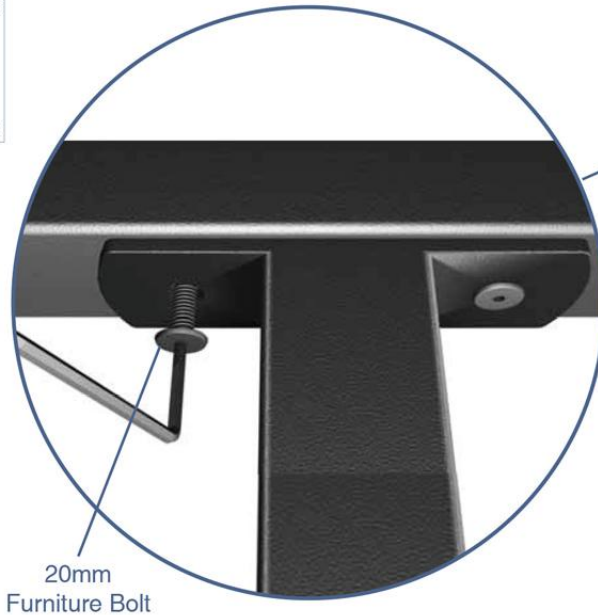

20mm
Furniture Bolt

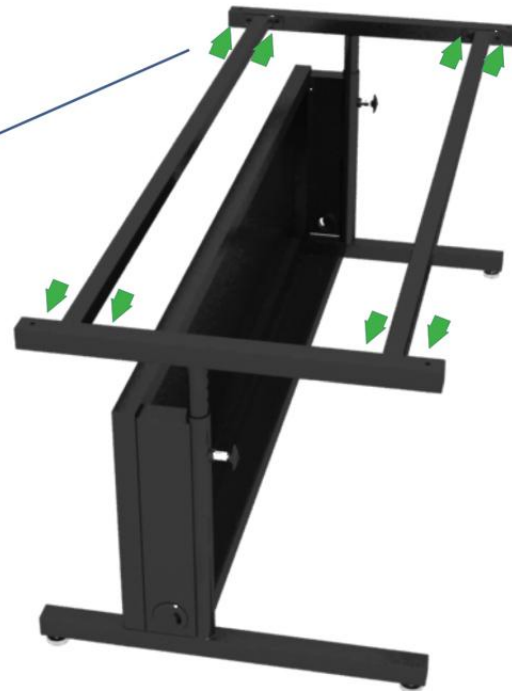

Step 6


Main Surface

Lay the surface on the floor facing down and then flip the frame.
Attach Main Platform to Frames using (2) 50 mm Furniture Bolts on each side.

50mm Furniture
Bolts



Qty:4

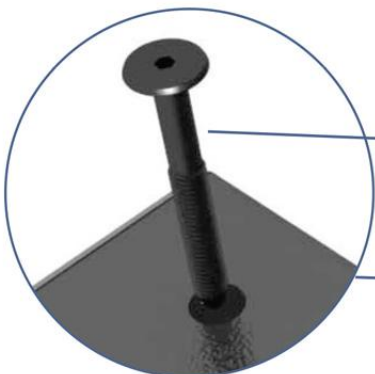

50mm
Furniture Bolt



NOTE : Two people may be needed to flip table upside down and then up again.

Sample images of CPU holders and LCD monitor arms placement.

Turn and pull to adjust the height, turn clockwise to lock pop-pin.

Once a table is at desired height, turn pop-pin mechanism to tight and secure the table.



How can we improve our assembly instructions?
Your comments and suggestions are important to us.
Please e-mail us at: support@versatables.com.