

## Mini Power Desktop Riser

## Assembly Instructions



How can we improve our assembly instructions?  
Your comments and suggestions are important to us.  
Please e-mail us at: [support@versatables.com](mailto:support@versatables.com).



[VersaTables.com](http://VersaTables.com)  
14105 Avalon Blvd.  
Los Angeles, CA 90061



Lifetime Warranty



Quantity Discounts



Assembled in USA




Fast Shipping


### Support:

Local: 310-353-7100  
Toll Free: 888-929-0322  
Fax: 310-353-7109  
[Support@VersaTables.com](mailto:Support@VersaTables.com)


### Hardware Included

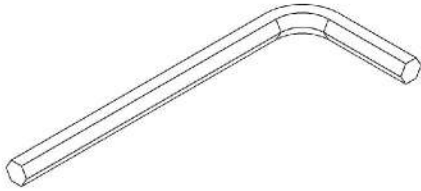

1/4"-20 Allen Key

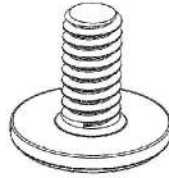



1/4"-20 Furniture bolts (x4)

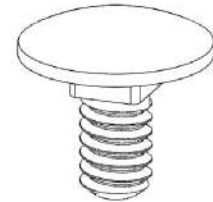

Carriage bolt (x3)


1

Insert key tray onto L flange, make sure guided rails catch both sides of flange. Then push it flush to the moving plate surface.

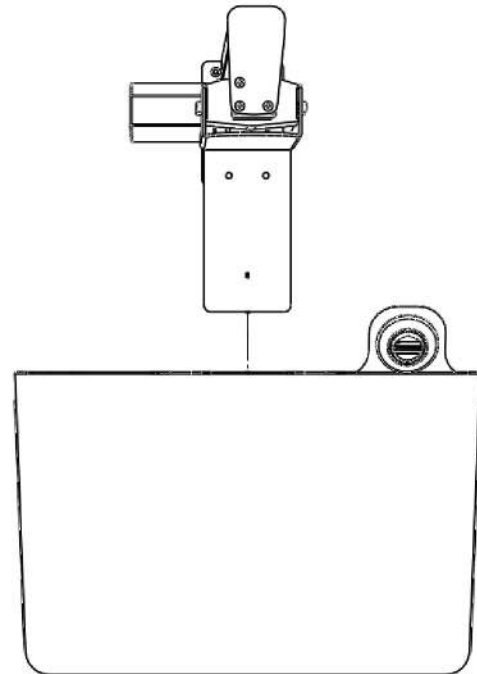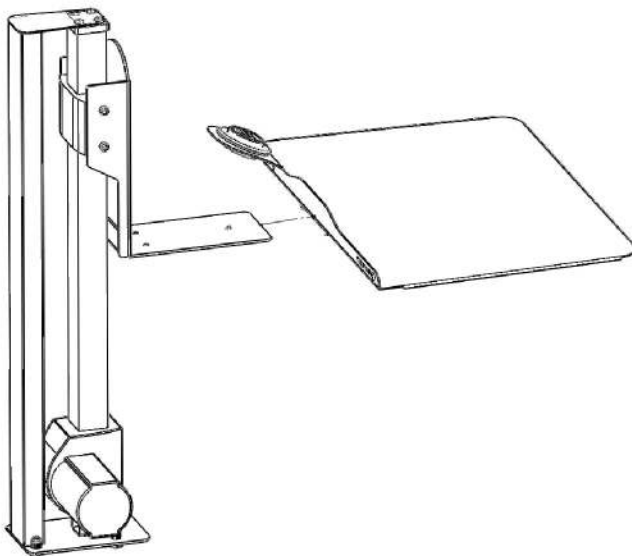



2

Tighten Phillips head self tapping screw 3/4 turn. Do not fully tighten screw this will cause friction in between both surfaces.

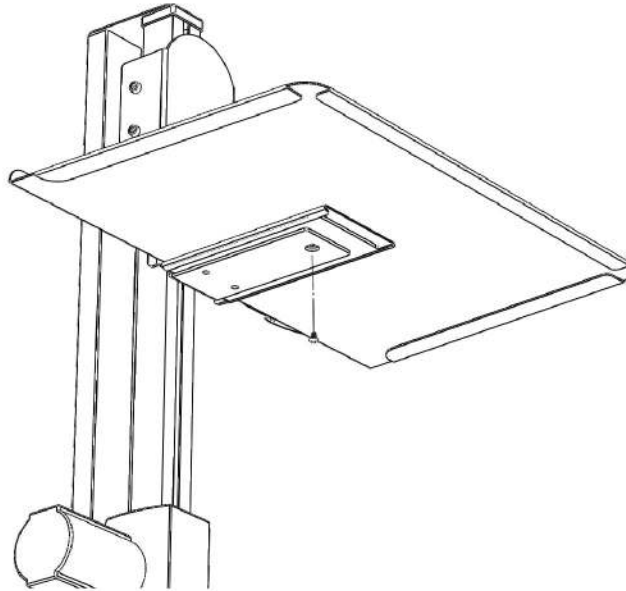


3

Insert 1/4"-20 Furniture bolts through bottom of base plate into inserts on the bottom of the other assembly. Make sure furniture bolts are securely tighten with allen key.

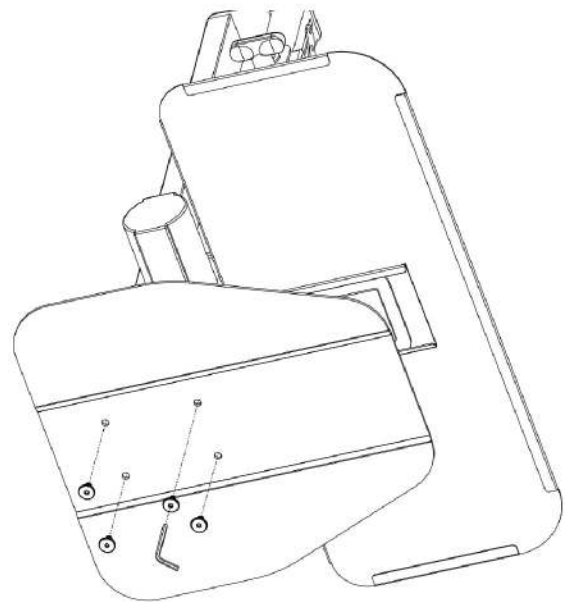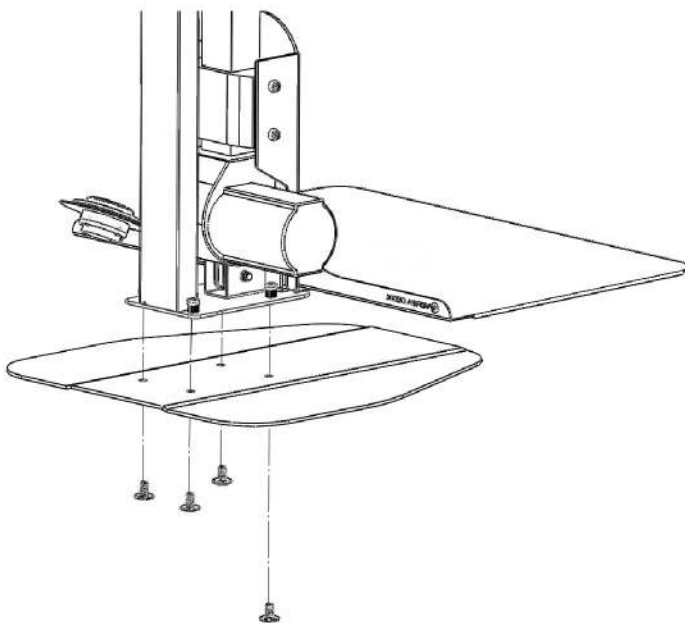

4

Connect male and female switch plugs for hand switch.

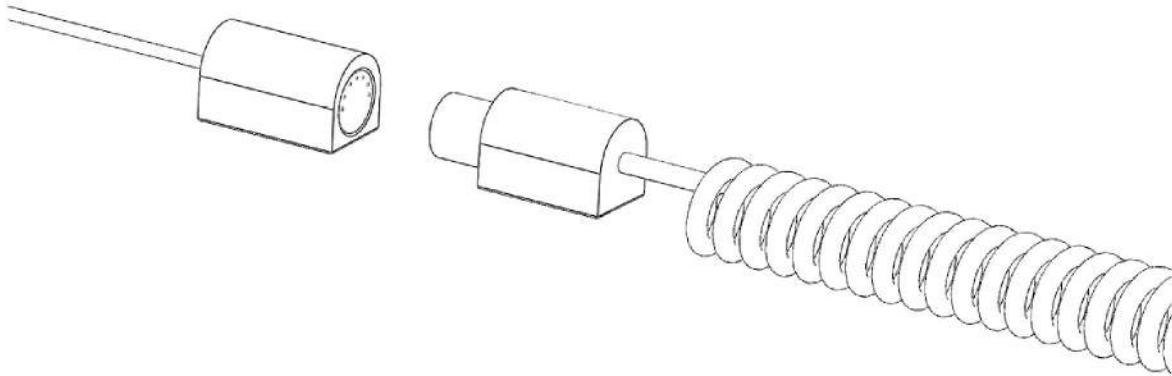

VersaTables.com  
14105 Avalon Blvd.  
Los Angeles, CA 90061



Lifetime Warranty



Quantity Discounts



Assembled in USA



Fast Shipping

### Support:

Local: 310-353-7100  
Toll Free: 888-929-0322  
Fax: 310-353-7109  
Support@VersaTables.com