



Auxiliary boxes

► Type A (if equipped)

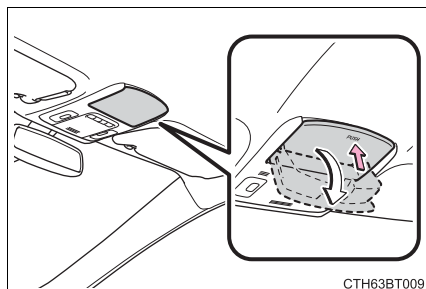

CTH63BT009


► Type B (if equipped)

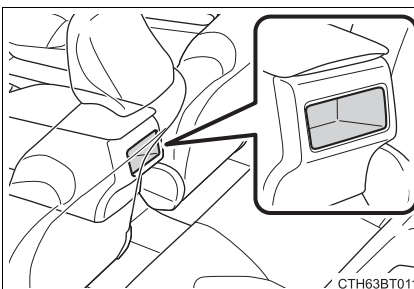

CTH63BT011

Push the lid.

► Type C

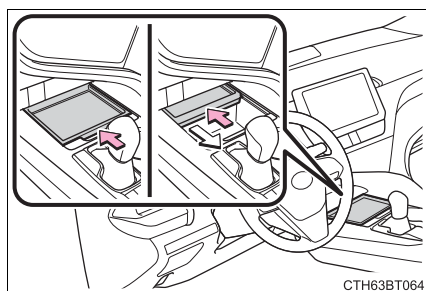

CTH63BT064

Opening:


Push the tray forward until it locks.

Closing:

Push the tray forward to release the lock and the tray will automatically close.

■ When small items are placed on top of the tray (type C)

The tray can be opened while small items are placed on it.

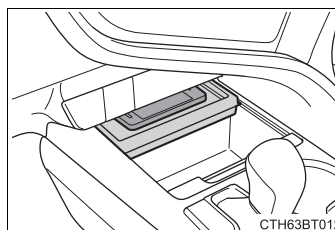

CTH63BT012