

## BSM (Blind Spot Monitor)\*

The Blind Spot Monitor is a system that uses rear side radar sensors installed on the inner side of the rear bumper on the left and right side to assist the driver in confirming safety when changing lanes.

### System components

① Multi-information display


Turning the BSM function on/off.  
(→P. 331)

② Outside rear view mirror indicators

When a vehicle is detected in a blind spot of the outside rear view mirrors or approaching rapidly from behind into a blind spot, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator flashes.

③ “BSM” indicator

When the BSM function is turned on, the indicator illuminates.

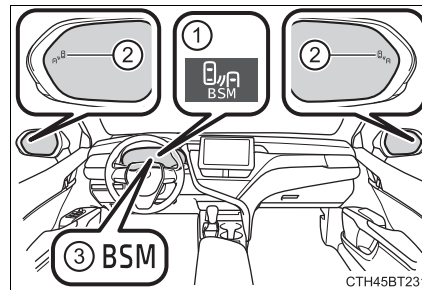

\*: If equipped