


Head-up display*

Summary of functions

The head-up display is linked to the meters and navigation system (if equipped) and projects a variety of information in front of the driver, such as the current vehicle speed.

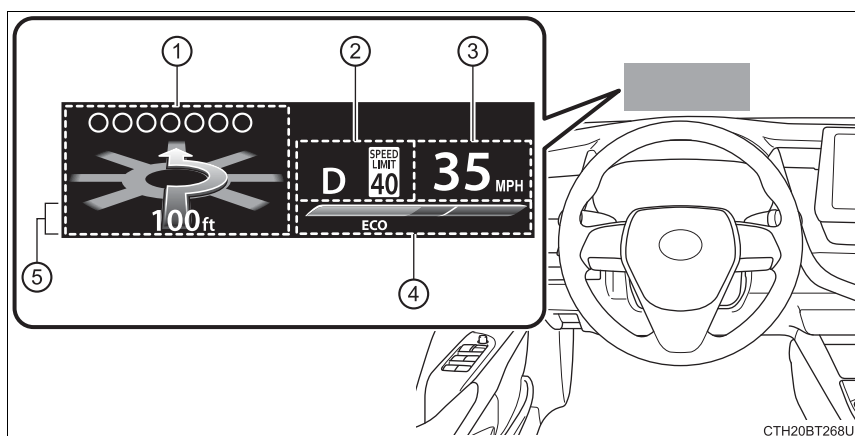

- ① Driving assist system status/navigation system-linked display area (if equipped) (→P. 130)

The following pop-up displays will be displayed in certain situations:

- Pre-collision warning (pre-collision system)
- Alert from the Parking Support Brake system (if equipped)

- ② Shift position/speed limit/RSA (Road Sign Assist) display area

- Shift position (→P. 217)
- Speed limit (vehicles with a navigation system) (U.S.A. only)
- RSA (Road Sign Assist) display (if equipped) (→P. 285)

- ③ Vehicle speed display

- ④ Eco Driving Indicator/Tachometer (→P. 131)

- ⑤ Information display area (→P. 131)

The following pop-up displays will be displayed in certain situations:

- Warning/message
- Hands-free system status
- Audio system operation status

*: If equipped