


3-2. Using the audio system

Playing back MP3 and WMA discs

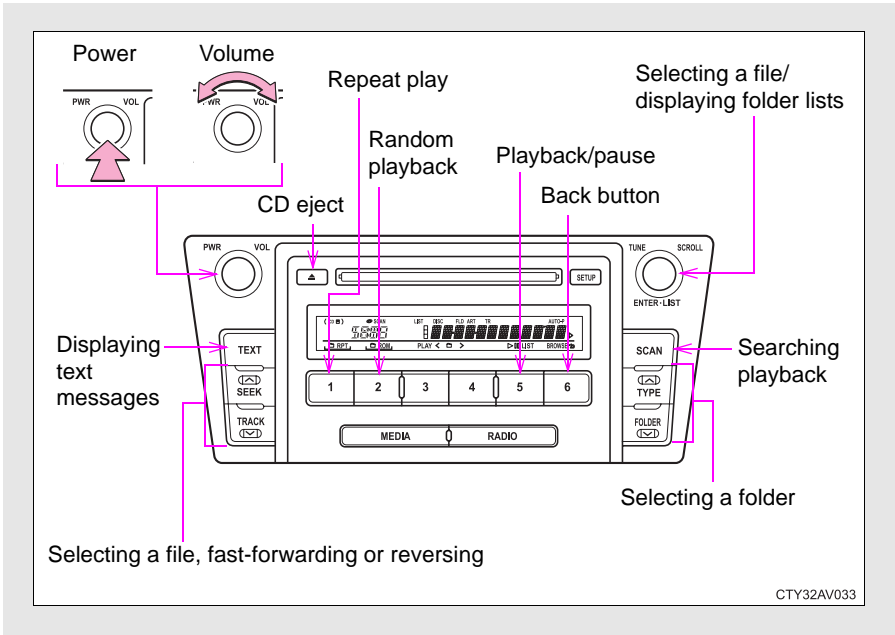



Loading and ejecting MP3 and WMA discs

→P. 251

Selecting and scanning a folder

■ Selecting a folder

Press  or  to select the desired folder.

■ Returning to the first file of the first folder

Press and hold  until you hear a beep.