


3-2. Using the audio system

Audio system types

Without navigation system and Display Audio system
CD player and AM/FM radio

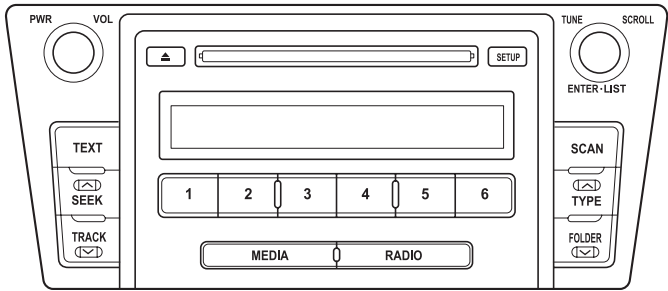

CTY32AV061

Title	Page
Using the radio	P. 248
Using the CD player	P. 251
Playing back MP3 and WMA discs	P. 257
Operating an iPod	P. 264
Operating a USB memory	P. 272
Optimal use of the audio system	P. 280
Using the AUX port	P. 283