


SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

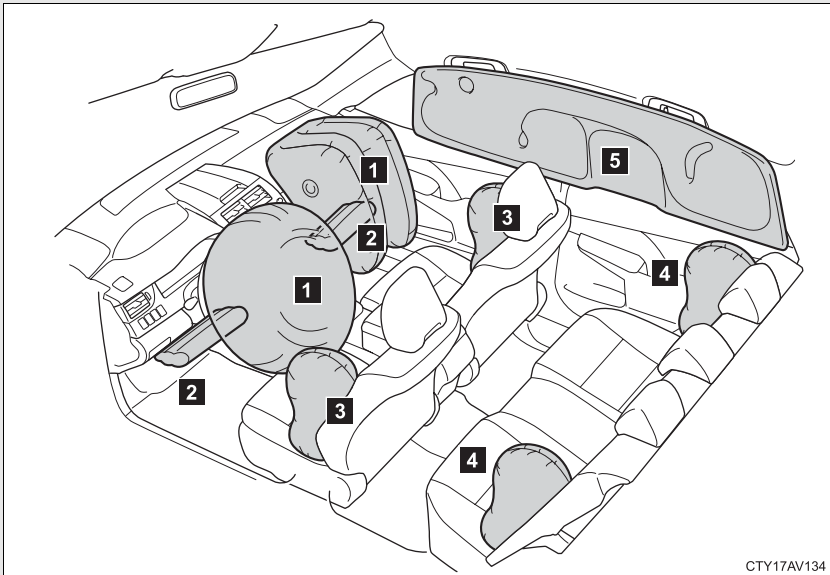

SRS front airbags

1 SRS driver airbag/front passenger airbag

Can help protect the head and chest of the driver and front passenger from impact with interior components

2 SRS knee airbags

Can help provide driver and front passenger protection

SRS side and curtain shield airbags

3 SRS front side airbags

Can help protect the torso of the front seat occupants

4 SRS rear side airbags

Can help protect the torso of occupants in the rear outer seats