

### ◆ Key

Turning the key operates the doors as follows:

#### ► Vehicles without a smart key system

##### ① Locks all the doors

Turn and hold to close the windows<sup>\*1</sup> and moon roof.<sup>\*1, 2</sup>  
(→P. 180, 184)

##### ② Unlocks the door

Turning the key unlocks the driver's door. Turning the key again unlocks the other doors.


Turn and hold to open the windows<sup>\*1</sup> and moon roof.<sup>\*1, 2</sup>  
(→P. 180, 184)

<sup>\*1</sup>: This setting must be customized at your Toyota dealer.

<sup>\*2</sup>: If equipped

#### ► Vehicles with a smart key system

The doors can also be locked and unlocked with the mechanical key. (→P. 559)

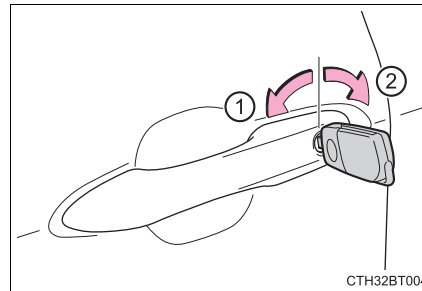

CTH32BT004

3

Operation of each component