


**Select a shift position appropriate for the driving conditions.**

#### ■ Shifting the shift lever

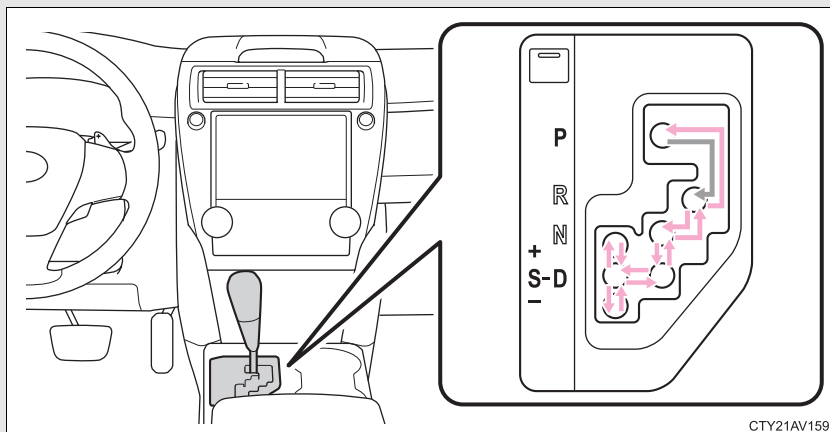

**Vehicles without a smart key system:**

While the engine switch is in the “ON” position, move the shift lever with the brake pedal depressed.

**Vehicles with a smart key system:**

While the “ENGINE START STOP” switch is in IGNITION ON mode, move the shift lever with the brake pedal depressed.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.