



- 3** Remove the fuse with the pull-out tool.  
Only type A fuses can be removed using the pullout tool.

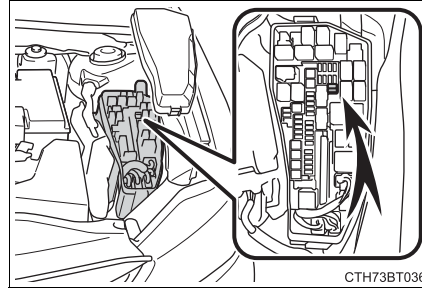


- 4** Check if the fuse is blown.


► Type A

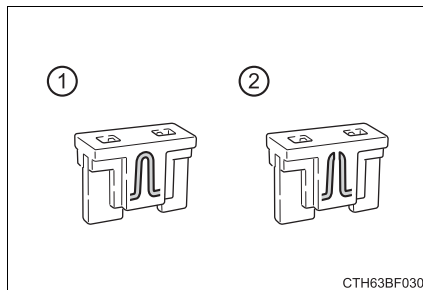

► Type B

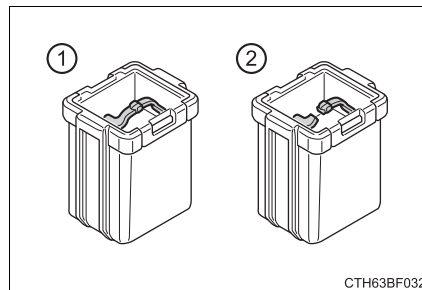

► Type C

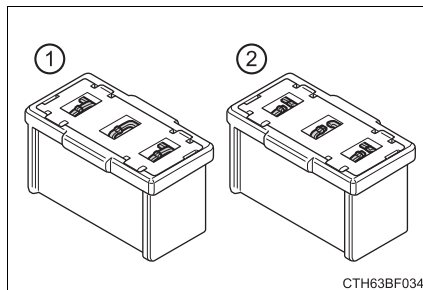

- ① Normal fuse  
② Blown fuse

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.