


4-3. Do-it-yourself maintenance

Positioning a floor jack


When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.

■ Front

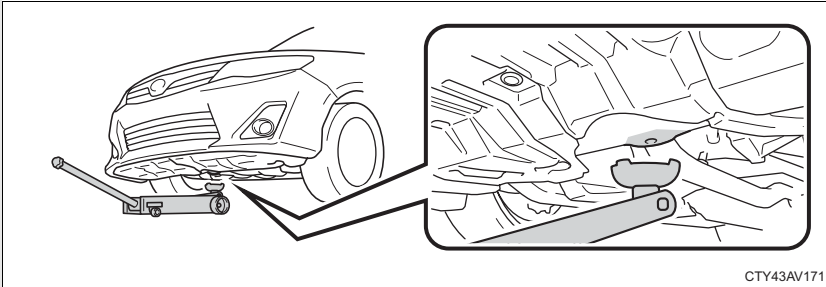

■ Rear

2.5 L 4-cylinder (2AR-FE) engine

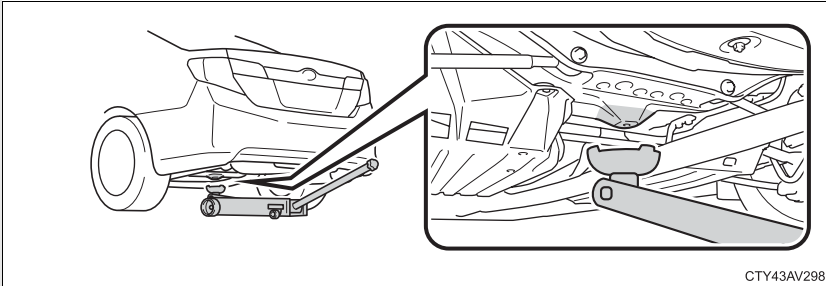

3.5 L V6 (2GR-FE) engine

