

Wireless remote control/electronic key battery

Replace the battery with a new one if it is depleted.

You will need the following items:


- Flathead screwdriver
- Small flathead screwdriver
- Lithium battery CR2032

Replacing the battery

► Vehicles without a smart key system

1 Remove the key cover.


To prevent damage to the key, cover the tip of the flathead screwdriver with a rag.

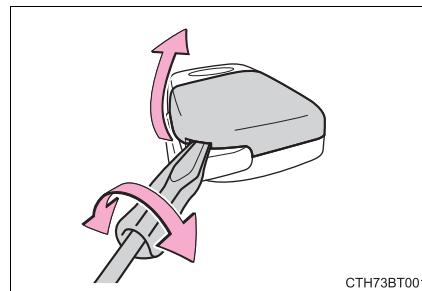

CTH73BT001

2 Remove the battery cover.


If the battery cover is difficult to remove, lift the edge to remove it.

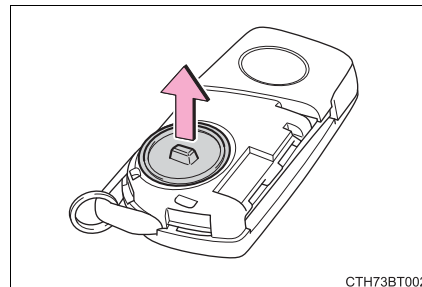

CTH73BT002

3 Remove the depleted battery using a small flathead screwdriver.

Insert a new battery with the "+" terminal facing up.

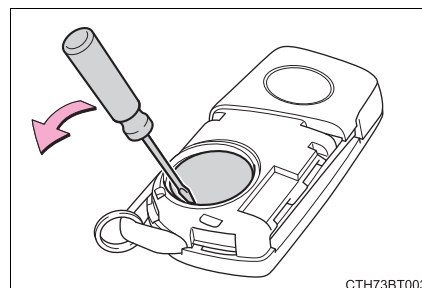

CTH73BT003