


Air outlets

■ Location of air outlets


The air outlets and air volume change according to the selected airflow mode.

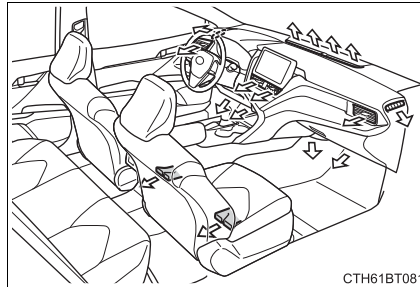

CTH61BT081


■ Adjusting the position of and opening and closing the air outlets

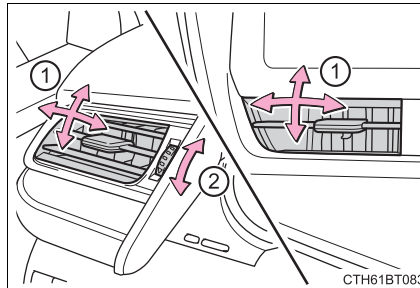


- ① Direct air flow to the left or right, up or down.
- ② Turn the knob to open or close the vent.



CTH61BT083


■ For quick cooling


Turn  to "MAX A/C". The air conditioning will automatically turn on.

 will be set for recirculated air mode when  or  is selected. It is not possible to turn to the outside air mode.

■ Fogging up of the windows

- The windows will easily fog up when the humidity in the vehicle is high.

Turning  on will dehumidify the air from the outlets and defog the windshield effectively.

- If you turn  off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

■ When driving on dusty roads

Close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake mode be set to outside air mode and the fan speed to any setting except off.