



### 3-1. Using the air conditioning system and defogger

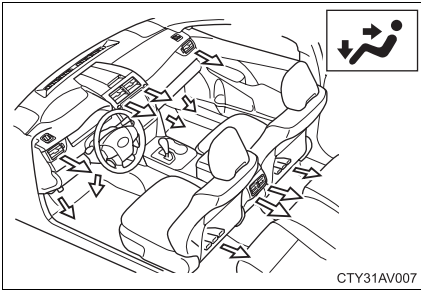


Air flows to the upper body and feet.

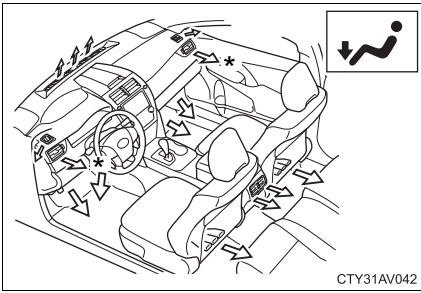

Air flows to the feet.

\*: When the warming function is operating, air flows to the upper body as well to warm the upper body effectively.

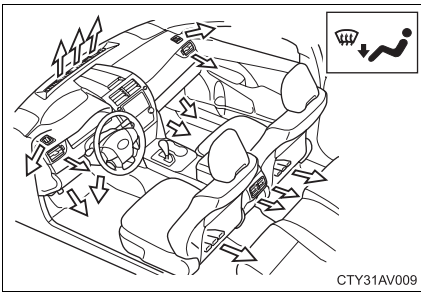

Air flows to the feet and the windshield defogger operates.

#### Switching between outside air and recirculated air modes

Press .

The mode switches between outside air mode (the indicator is off) and recirculated air mode (the indicator is on) each time the button is pressed.