


Warning lights and indicators


The warning lights and indicators on the instrument cluster, center panel and outside rear view mirrors inform the driver of the status of the vehicle's various systems.

For the purpose of explanation, the following illustrations display all warning lights and indicators illuminated.

► 4.2-inch display

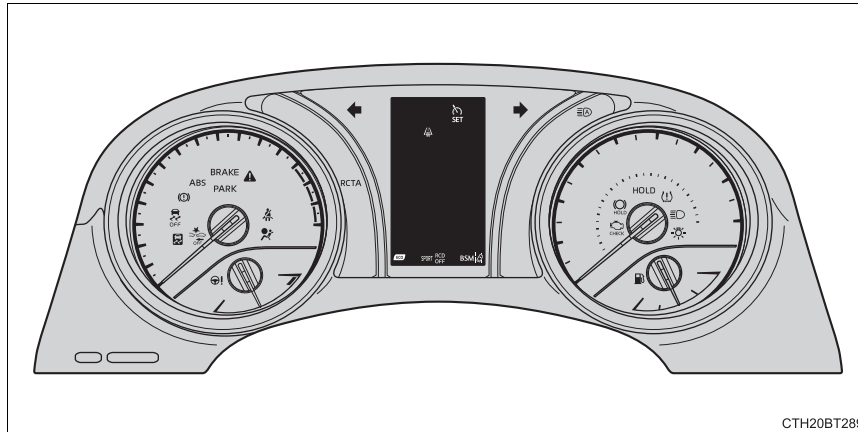

► 7-inch display

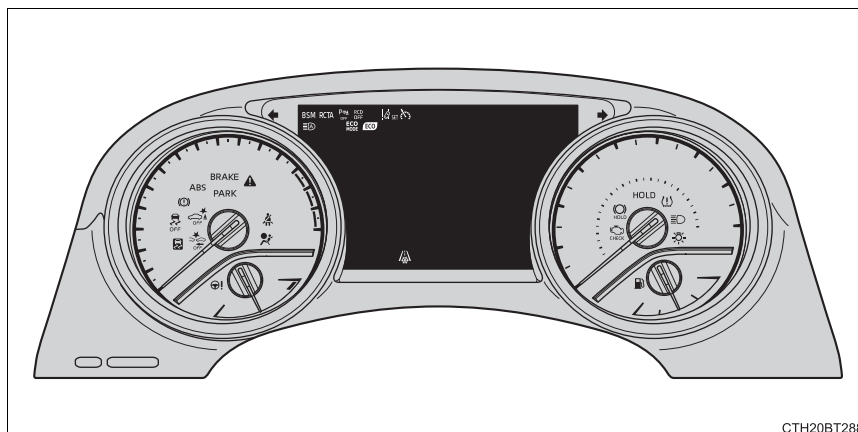

The units used on the meters and some indicators may differ depending on the target region.