

4-3. Do-it-yourself maintenance


# Air conditioning filter

The air conditioning filter must be changed regularly to maintain air conditioning efficiency.


■ Removal method

**STEP 1** Vehicles without a smart key system: Turn the engine switch off.

Vehicles with a smart key system: Turn the “ENGINE START STOP” switch off.

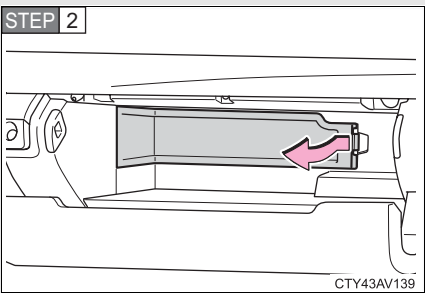


Open the glove box and remove the glove box cover inside the glove box.

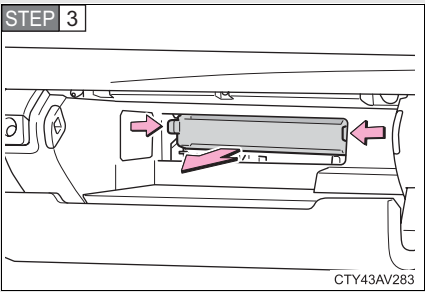

Remove the filter cover.

■ Replacement method

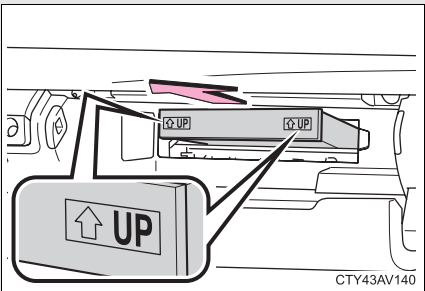

Remove the air conditioning filter and replace it with a new one.

The “↑UP” marks shown on the filter should be pointing up.