


1-2. Opening, closing and locking the doors and trunk

Trunk

The trunk can be opened using the key, trunk opener, entry function or wireless remote control.


■ Opening the trunk from inside the vehicle

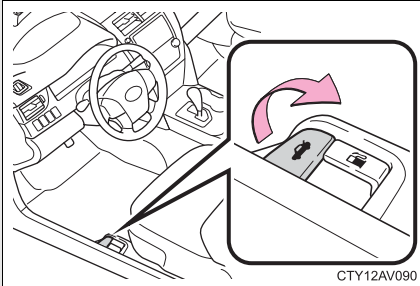

Pull up the lever to release the trunk lid.

■ Opening the trunk from outside the vehicle

Key (vehicles without a wireless remote control)

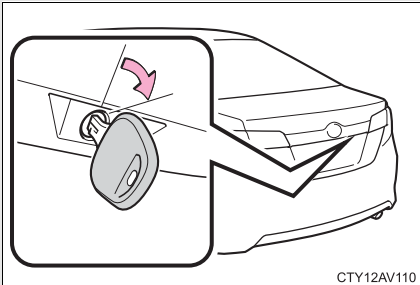

Turn the master key clockwise to release the trunk lid.

Entry function (vehicles with a smart key system)

→P. 32

Wireless remote control (if equipped)

→P. 46