


1-3. Adjustable components (seats, mirrors, steering wheel)

Head restraints

1

Before driving

Head restraints are provided for all seats.

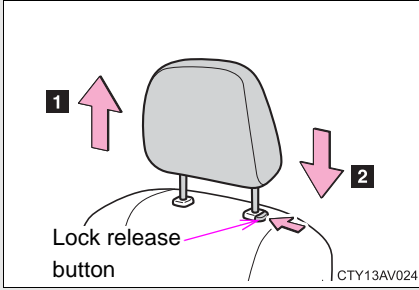

Vertical adjustment (front seats)


1 Up

Pull the head restraints up.

2 Down


Push the head restraint down while pushing the lock release button.

■ Removing the head restraints (front seats)

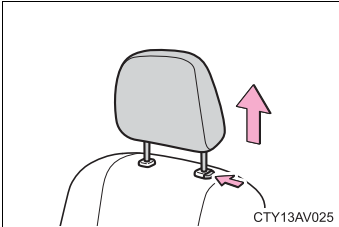

Pull the head restraint up while pressing the lock release button.

■ Installing the head restraints (front seats)

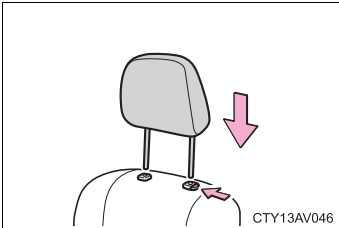

Align the head restraint with the installation holes and push it down to the lock position.

Press and hold the lock release button when lowering the head restraint.