


3-2. Using the audio system


Using the CD player

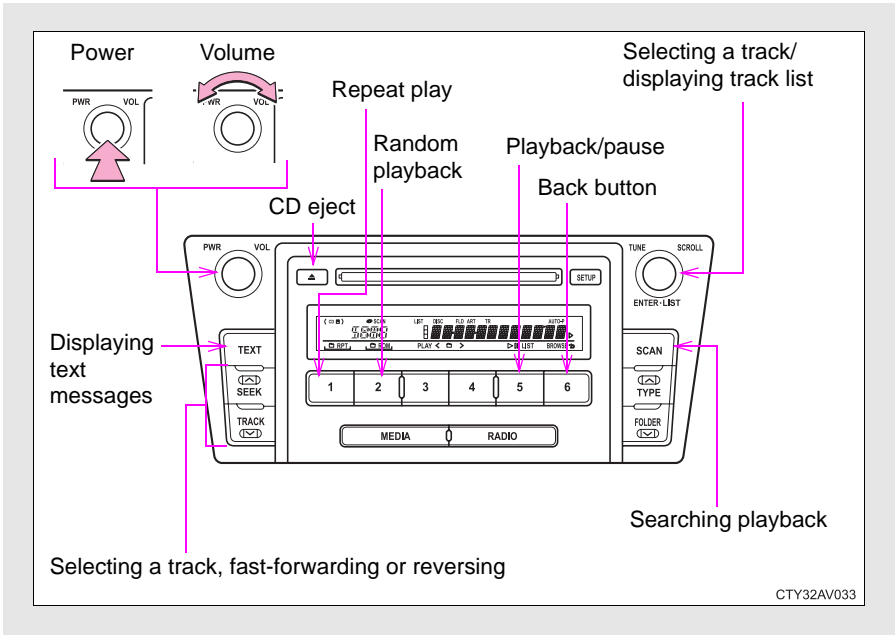




Loading CDs

Insert a CD.

Ejecting CDs

Press  and remove the CD.

Selecting a track

Turn  or press  to move up or  to move down until the desired track number is displayed.