


# Seat heaters\*

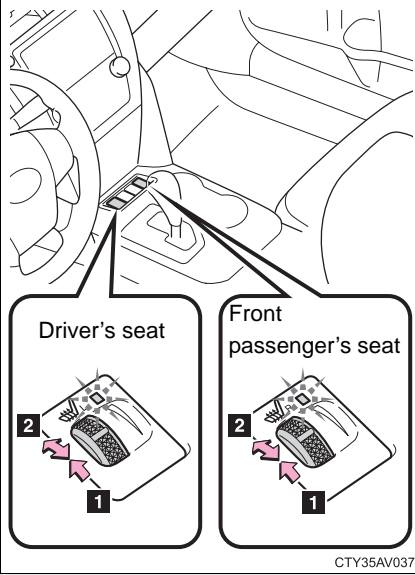

## 1 On

The indicator light comes on.

## 2 Adjusts the seat temperature

The further you move the dial forward, the warmer the seat becomes.

### ■ The seat heaters can be used when

#### Vehicles without a smart key system

The engine switch is in the "ON" position.

#### Vehicles with a smart key system

The "ENGINE START STOP" switch is in IGNITION ON mode.

### ■ When not in use

Move the dial fully backward. The indicator light turns off.

\*: If equipped