


Fuse layout and amperage ratings

■ Engine compartment

Fuse block

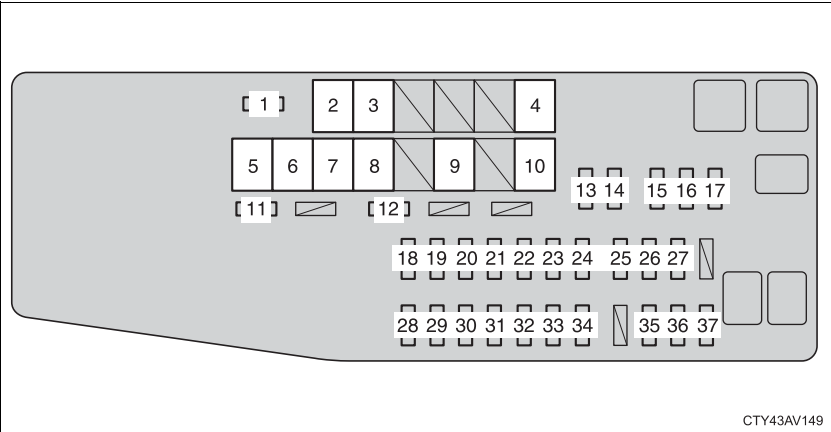

Fuse block on the back of the cover

