

**STEP 2** Perform the following operations accordingly:


- To adjust the fan speed, turn the fan speed control dial.
- To adjust the temperature setting, turn the temperature control dial.
- If the dehumidification function is not operating, press




to operate the dehumidification function.

To defog the windshield and the side windows early, turn the air flow and temperature up.

## Air outlets and air flow

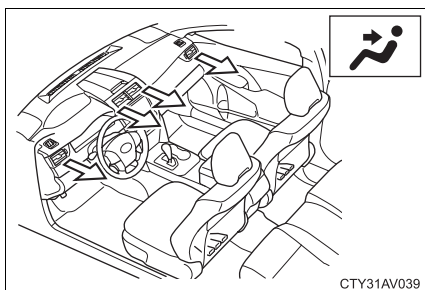

Air flows to the upper body.

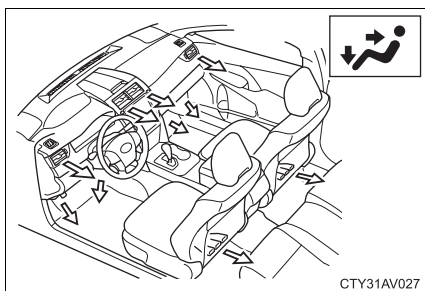

Air flows to the upper body and feet.