

7 Odometer/trip meter/average fuel consumption display

→P. 172

8 Engine coolant temperature display/instrument panel light control display

Displays the engine coolant temperature and instrument panel light control.

9 Outside temperature display

→P. 301

10 Shift position/shift range display


Displays the currently selected shift position and the shift range.

→P. 155, 159

11 Instrument panel light control button

→P. 175

Changing the odometer/trip meter display

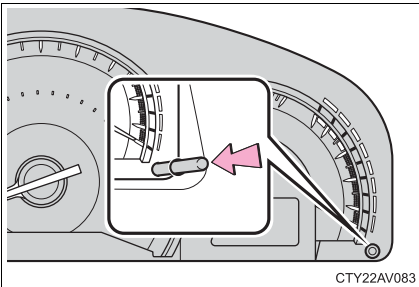

Pressing the button changes the display as follows.