


1-3. Adjustable components (seats, mirrors, steering wheel)

Outside rear view mirrors

1


Before driving

Mirror angle can be adjusted using the switch.

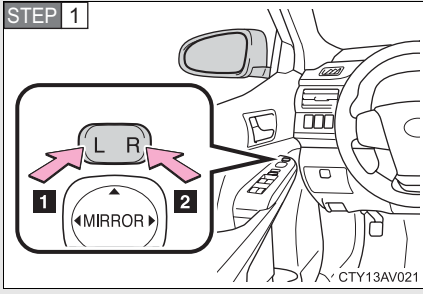

To select a mirror to adjust, press the switch.


- 1** Left
- 2** Right

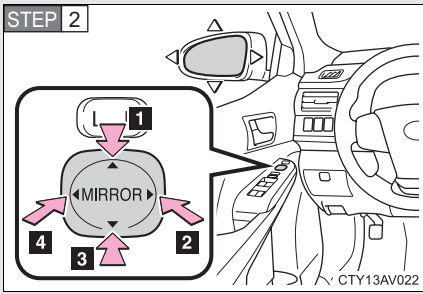

To adjust the mirror, press the switch.

- 1** Up
- 2** Right
- 3** Down
- 4** Left

Folding the mirrors

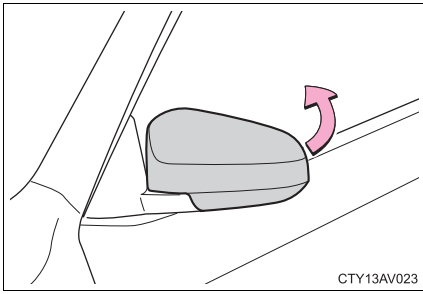

Push the mirror back in the direction of the vehicle's rear.