

① Tachometer

Displays the engine speed in revolutions per minute

② Shift position (→P. 217)

③ Outside temperature

Displays the outside temperature within the range of -40°F (-40°C) to 122°F (50°C). Low outside temperature indicator comes on when the ambient temperature is 37°F (3°C) or lower.

④ Multi-information display

Presents the driver with a variety of vehicle data (→P. 98, 111)

Displays warning messages in case of a malfunction (→P. 538)

⑤ Speedometer

⑥ Fuel gauge

Displays the fuel level. In the following situations, the actual fuel level may not be displayed correctly:

- After refueling only a small amount (approximately 5 L or less)
- When stopped on a hill or other slope
- When driving on a slope or around a curve

⑦ Odometer and trip meter (→P. 108, 125)

⑧ Engine coolant temperature gauge

Displays the engine coolant temperature

2

Instrument cluster

Instrument panel light control


The brightness of the instrument panel lights can be adjusted.

① Darker

② Brighter

- The brightness of the instrument panel lights can be adjusted individually for day mode and night mode*.
- If the brightness is adjusted when the surroundings are bright and the tail lights are on (day mode brightness adjustment), the brightness level of night mode will be adjusted at the same time.

*: Day mode and night mode: →P. 96

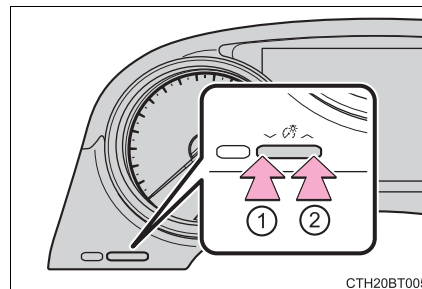

CTH20BT005