

Wireless remote control

► Vehicles without a smart key system

- ① Locks all the doors (→P. 148)
- ② Unlocks all the doors (→P. 148)
Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other doors.
- ③ Opens the windows*¹ and the moon roof*^{1, 2} (→P. 148)
- ④ Opens the trunk (→P. 157)
- ⑤ Sounds the alarm (→P. 143)

*¹: This setting must be customized at your Toyota dealer.


*²: If equipped

► Vehicles with a smart key system


- ① Locks all the doors (→P. 148)
- ② Unlocks all the doors (→P. 148)
Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other doors.
- ③ Opens the windows*¹ and the moon roof*^{1, 2} or panoramic moon roof*^{1, 2} (→P. 148)
- ④ Opens the trunk (→P. 157)
- ⑤ Sounds the alarm (→P. 143)

*¹: This setting must be customized at your Toyota dealer.

*²: If equipped

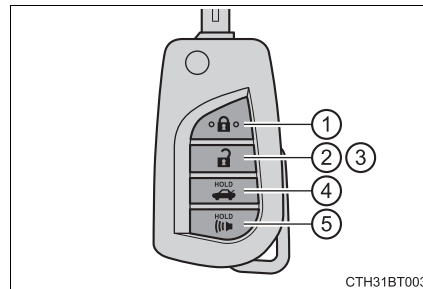

CTH31BT003

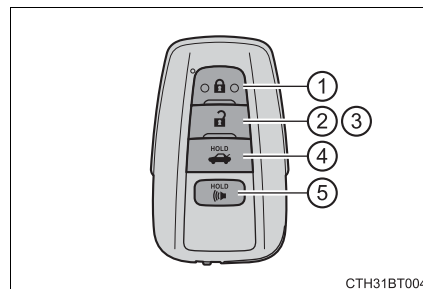

CTH31BT004