


Outside rear view mirrors

Adjustment procedure


- 1 To select a mirror to adjust, turn the switch.

- ① Left
- ② Right

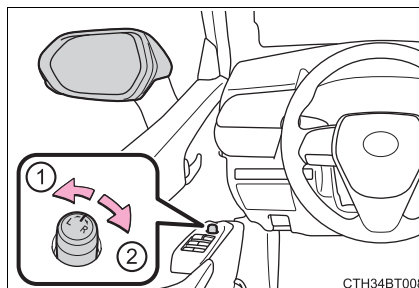


- 2 To adjust the mirror, operate the switch.

- ① Up
- ② Right
- ③ Down
- ④ Left

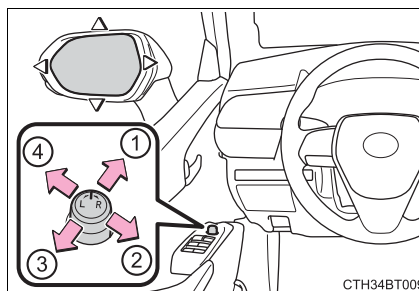

Folding the mirrors

Push the mirror back in the direction of the vehicle's rear.

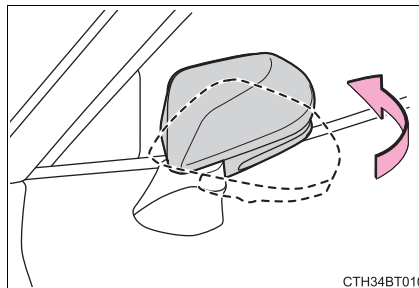

3

Operation of each component