



## ■ Headlight low beam (halogen bulb)

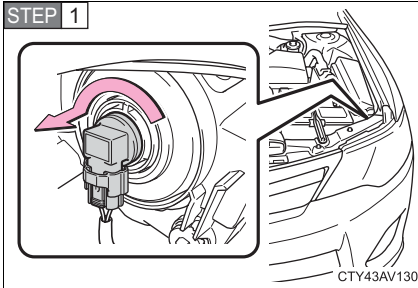


Turn the bulb base counterclockwise.

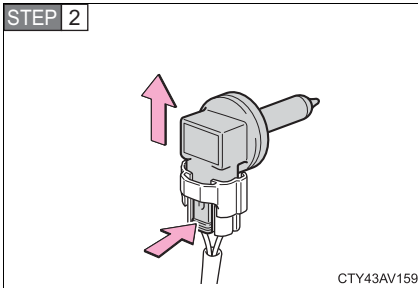

Unplug the connector while depressing the lock release.

## ■ Fog light (if equipped)

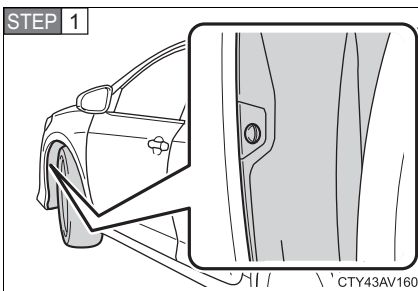

Turn the steering wheel in the opposite direction of the fog light that you wish to replace.

For example, if you wish to replace the fog light on the left side, turn the steering wheel to the right.