


1-2. Opening, closing and locking the doors and trunk Wireless remote control*

The wireless remote control can be used to lock and unlock the vehicle.

Vehicles without a smart key system (type A)

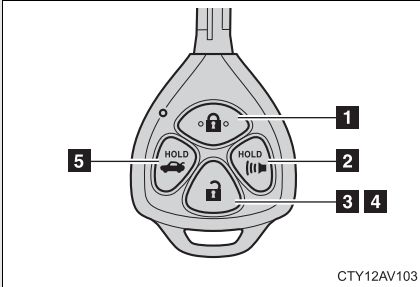

1 Locks all the doors

2 Sounds the alarm
(press and hold)

3 Unlocks all the doors

Pressing the button unlocks the driver's door. Pressing the button again within 5 seconds unlocks the other doors.

4 Opens the driver's window and moon roof (press and hold)*

5 Unlocks the trunk
(press and hold)

*: This setting must be customized at your Toyota dealer.

*: If equipped